



## PORTABLE BATTERY SPEAKER

### User Manual PBX-BF25



#### Function:


SPEAKER APP CONTROL  
 BLUETOOTH PLAYER  
 FM TUNER  
 USB PLAYER  
 LINE IN  
 USB OUTPUT 5V1A  
 LED DISPLAY  
 LIGHT PARTY LIGHTS  
 DIGITAL 5 BAND GRAPHIC EQ  
 BASS & TREBLE

MICROPHONE EQ  
 MICROPHONE DSP:  
 PITCH SHIFTER  
 VOICE CHANGE EFFECT  
 REVERB  
 DELAY  
 ECHO  
 PORTABLE DESIGN WITH  
 RECHARGEABLE LITHIUM  
 BATTERY

Power: 20W  
 Frequency Response: 45Hz-20KHz  
 Power Supply: DC 9V

#### PANEL LAYOUT & FUNCTIONS

- 1.LED DISPLAY: Function Screen.
- 2.VOLUME KNOB: Master Volume.  
Press To Enter The Sub-Menu.
- 3.POWER/INPUT. ON/OFF. Input Select
- 4.PLAY/PAUSE: Play or pause track
- 5.POWER SUPPLY: DC 9V Input.
- 6.NEXT: Next Track or FM Station
- 7.PREVI: Previous Track or FM Station
- 8.USB OUTPUT: USB 5V 1A output
- 9.LED CHARGE STATUS:  
RED = Charging  
GREEN = Full
- 10.MIC1: 6.35mm TRS Input.
- 11.MIC2: 6.35mm TRS Input.
- 12.LINE INPUT: 3.5mm TRS Input.

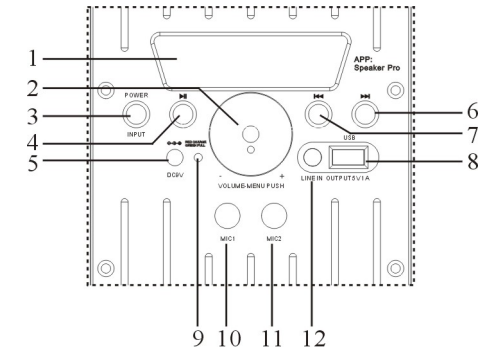

1. POWER/INPUT: Press and hold POWER/INPUT button to turn ON/OFF the unit. Press to toggle through input functions, BT, LINE, USB, FM RADIO.
2. VOLUME KNOB: Increase or decrease the volume by turning the knob. Press to enter the sub menu to modify: Bass and Treble EQ, Mic Volume, Reverb, Delay, and LED Light Settings.
3. PLAY/PAUSE: Press to play and pause track. In FM mode, press and hold to scan through FM stations.
4. PREVIOUS/NEXT: to switch the song and radio.
5. USB: USB Player/Power Bank 5V 1A output.

#### FM Operation

Use the POWER/INPUT button to toggle to FM Radio mode. Press and hold to auto scan Stations.


#### Bluetooth:

Use POWER/INPUT button to select Bluetooth mode. On your mobile device search in the Bluetooth settings for "PBX-BF25". Connect to sync your mobile device and PBX-BF25 together. To control the unit via your mobile device, download the App "Speaker Pro".

#### Specifications:

Speaker Pro App

1. Bluetooth Music play
2. USB Settings
3. LED Light Controls
4. FM Radio
5. Bluetooth Settings
6. Line Input mute
7. Equalizer and Mic Settings

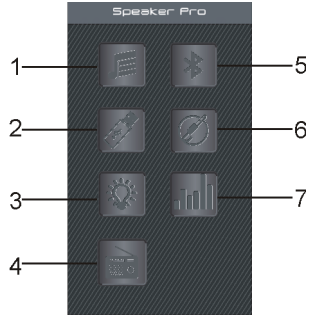

(1) Bluetooth Music play

Press to enter into Bluetooth Music play page, Press "Pick songs to play" to choose the song you want to play. Press "Done" to return to Bluetooth Music play page.

(2) USB card play

When inserting a USB into the speaker, press to enter the USB Card play page. To choose a song and play music on the USB card, press "Play" on current selection. Use the Previous, Next, and Volume keys to control the unit's functions. Press "List" to return to USB list page, press "Back" to return to the main page.

(3) LED Light Settings

Press to enter the LED Light Control page. Pick and choose a color from the color Wheel. Use the slider to adjust the brightness or select from the 12 preset light modes. To return to the main page, press "<" in the left corner.

(4) FM Radio

Press to enter into FM radio mode, press SCAN to enter into radio program automatic scan. Press ◀▶ for radio program manual scan, ▲▼ Top and bottom trimming, Turn the digital TUNER dial to adjust radio station radio: frequencies between 87.5MHz~108.0MHz.



(1)

(2)

(3)

(4)

(5) Bluetooth connection

Press to enter into Bluetooth Control connection page, then click "Speaker Pro BLUE" to connect to the speaker.

(6) Line Input - mute

Press to enter into Line Input page, press to mute music, press insert a line continue play. Press "Back" to exit to the main page.

(7) Equalizer and Mic Settings

Press to enter into the Sound Settings page to adjust the volume for Music and Microphone. Press Music tab to adjust th volume or equalizer. Select the Microphone tab to adjust the mic volume, EQ, echo, and delay settings. Select Mic DSP reverb, delay and pitch data.

(8) MIC DSP selection

Digital Signal Processing Mode: DSP MODE has 5 choices: KTV, HALL, CAVE, CONCERT, STADIUM.  
 MIX VOLUME: BYPASS, EFFECT adjusment  
 ECHO: Attenuation control and Delay millisecond adjustment.  
 REVERB Adjust the reverb size: DRYWET, WIDTH, ROOM, DAMPING.  
 VOICE CHANGE: Pitch and format settings  
 PITCH SHIFTER: Change the frequency pitch.  
 HOWLING CONTROL: Four presets: FREQUENCY SHIFTER, HOWLING, PRECISE, MASSIVE.

