


J-220BT

QFX


WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

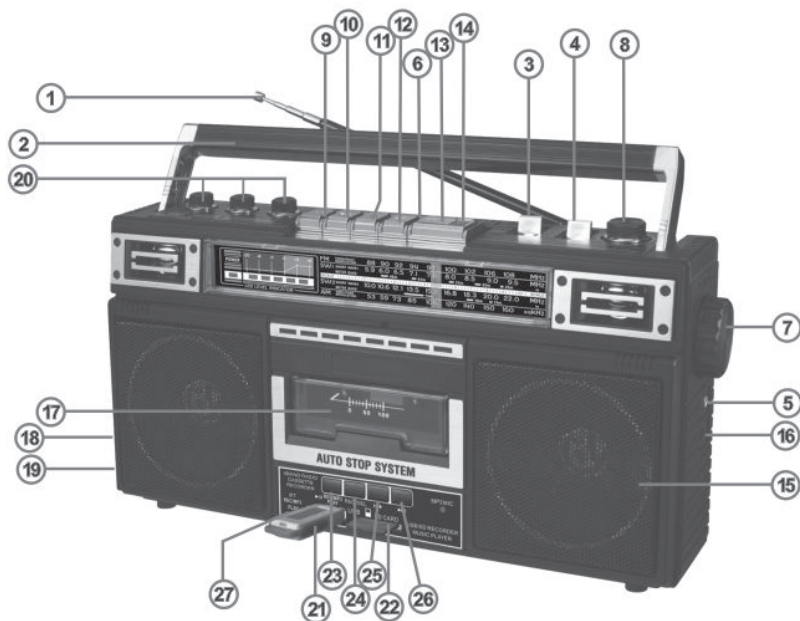

- | | |
|----------------------------------|---------------------------------------|
| 1. Telescope Antenna | 1. Antena de telescopio |
| 2. Handle | 2. Mango |
| 3. Tape & Radio USB Switch | 3. Conmutador USB de cinta y radio |
| 4. Band Selector | 4. Selector de banda |
| 5. External Earphone Jack | 5. Conector para auriculares externos |
| 6. Mic. | 6. Micrófono |
| 7. Tuning Knob | 7. Perilla de sintonización |
| 8. Volume Control Knob | 8. Perilla de control de volumen |
| 9. Pause Button (Back) | 9. Botón de pausa (atrás) |
| 10. Stop Button | 10. Botón de parada |
| 11. Fast Forward Button | 11. Botón de avance rápido |
| 12. REW Button | 12. Botón RETROCEDER |
| 13. Play Back Button | 13. Botón de reproducción |
| 14. REC Button | 14. Botón REC |
| 15. Loud Speaker | 15. Altavoz |
| 16. DC Jack | 16. Toma de CC |
| 17. Cassette Compartment | 17. Compartimiento de casete |
| 18. AC Socket | 18. Toma de CA |
| 19. Battery Compartment | 19. Compartimiento de la batería |
| 20. 3 Band Equalizer | 20. Ecuador de 3 bandas |
| 21. USB Slot | 21. Ranura USB |
| 22. SD Slot | 22. Ranura SD |
| 23. USB/SD/REC PLAY/PAUSE Button | 23. Botón USB/SD/REC PLAY/PAUSE |
| 24. USB/SD/REC PLAY/PAUSE Button | 24. Botón USB/SD/REC PLAY/PAUSE |
| 25. USB/SD REW Button | 25. Botón RETROCESO USB/SD |
| 26. USB/SD Fast Forward Button | 26. Botón de avance rápido USB/SD |
| 27. REC/MP3 Play Indicator | 27. Indicador de reproducción REC/MP3 |

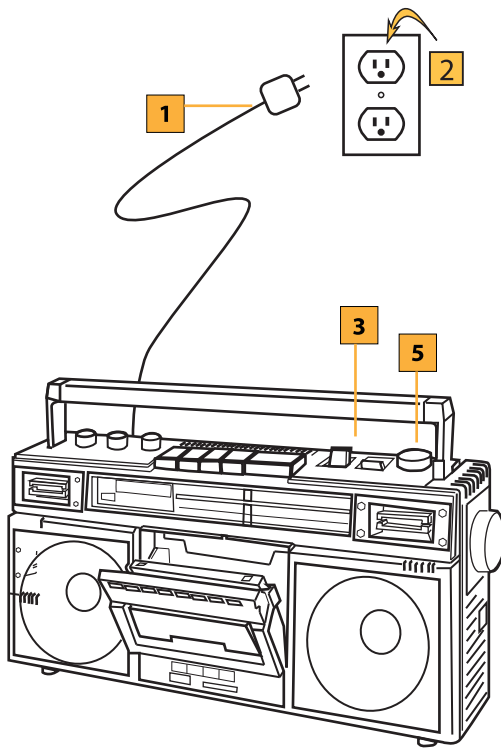

SETUP GUIDE

Step 1. Find the AC power cord to the J-220BT located on the back panel of the unit.

Step 2. Find a power outlet (AC 120V/60Hz) and connect the AC cord to the socket to supply the unit with power.

Step 3. Move to the top of part of the panel and set the switch to USB.

Step 4. Insert a USB flash drive in the USB port located below the cassette compartment. The J-220BT will automatically begin playing the .mp3 content.

Step 5. Use the Knob to adjust the Master Volume to your taste.

Step 6. Press the Forward and Rewind keys to move to the next track or previous track.

GUIA DE PREPARACION

Paso 1. Busque el cable de alimentación de CA al J-220BT ubicado en el panel posterior de la unidad.

Paso 2. Busque una toma de corriente (CA 120 V/60 Hz) y conecte el cable de CA al enchufe para suministrar energía a la unidad.

Paso 3. Vaya a la parte superior del panel y configure el interruptor en USB.

Paso 4. Inserte una unidad flash USB en el puerto USB ubicado debajo del compartimiento del cassette. El J-220BT comenzará a reproducir automáticamente el contenido .mp3.

Paso 5. Use la perilla para ajustar el volumen maestro a su gusto.

Paso 6. Pulse las teclas de avance y retroceso para pasar a la pista siguiente o anterior.

Bluetooth Instructions:

Set the function switch to the MP3/BT position. After hearing the Bluetooth prompting sound, open the Bluetooth settings on your mobile device to search the J-220BT. Select the option to connect. You will then hear a sound and see a light flash. Now you can select music from your favorite music app.

USB/SD:

Insert a USB/SD Card in the corresponding port for music playback. The content will begin playing automatically. Use the Forward and Rewind functions on the unit to navigate through the .mp3 music.

Cassette Tape or Radio Recording to USB Drive or SD Card:

1. Set the function switch to the RADIO or TAPE position and select the desired radio station or cassette tape audio/music track.
2. Insert the USB or SD card into the device.
3. Press the REC/DEL button located above the USB port to start recording. The BT/REC/MP3 PLAY LED 1. indicator will turn red during recording.
4. Press the REC/DEL button again to stop the recording to USB or SD.
5. Set the function switch to BT/MP3 and the recorded file will start to play back.

USB or Radio Recording to Cassette Tape

1. Make sure that the cassette tape can perform a recording function by verifying that the cassette tapes tabs have not been broken.
2. Insert the cassette tape.
3. Switch the function to BT MP3 or RADIO.
4. Press the red REC/PLAY buttons on the cassette deck transport to start tape recording.
5. Play the Radio or USB music and it will be recorded onto the cassette tape.
6. Press STOP/EJ to stop the cassette recording.
7. Rewind the cassette tape to the starting point of your recording.
8. Switch the function to TAPE and press PLAY to hear the recorded tape.

Instrucciones de Bluetooth:

Coloque el interruptor de función en la posición J-220BT. Después de escuchar el sonido de aviso de Bluetooth, abra la configuración de Bluetooth en su dispositivo móvil para buscar el J-220BT. Seleccione la opción para conectarse. Luego escuchará un sonido y verá un destello de luz. Ahora puede seleccionar música de su aplicación de música favorita.

Tarjeta USB/SD:

Inserte una tarjeta USB/SD en el puerto correspondiente para la reproducción de música. El contenido comenzará a reproducirse automáticamente. Use las funciones de avance y retroceso en la unidad para navegar a través de la música .mp3.

Grabación de cinta de casete o radio en una unidad USB o tarjeta SD:

1. Coloque el interruptor de función en la posición RADIO o TAPE y seleccione la estación de radio o la pista de audio/música de la cinta de casete deseada.
2. Inserte la tarjeta USB o SD en el dispositivo.
3. Presione el botón REC/DEL ubicado encima del puerto USB para comenzar a grabar. El indicador LED BT/REC/MP3 PLAY 1. se volverá rojo durante la grabación.
4. Presione el botón REC/DEL nuevamente para detener la grabación en USB o SD.
5. Coloque el interruptor de función en BT/MP3 y el archivo grabado comenzará a reproducirse.

Grabación por USB o radio en cinta de casete

1. Asegúrese de que la cinta del casete pueda realizar una función de grabación verificando que las pestañas de la cinta no estén rotas.
2. Inserte la cinta del casete.
3. Cambie la función a BT MP3 o RADIO.
4. Presione los botones rojos REC/PLAY en el transporte de la platina de casete para iniciar la grabación de la cinta.
5. Reproduzca la música de la radio o del USB y se grabará en la cinta de casete.
6. Presione STOP/EJ para detener la grabación del casete.
7. Rebobine la cinta de casete hasta el punto de inicio de la grabación.
8. Cambie la función a TAPE y presione PLAY para escuchar la cinta grabada.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. These safety and operating instructions should be kept in condition of consultation.

MEDIDAS DE SEGURIDAD IMPORTANTES

Antes de utilizar esta máquina, lea todas las instrucciones de seguridad y funcionamiento. Estas seguridad y las instrucciones de funcionamiento deben mantenerse en condiciones de consulta.



- 1. Electric Power Supply Line:** Keep the power cord safe from being trampled on, pressed on by heavy objects, or pierced. Make sure that the cord has ample space to rest on the ground and is not stressed. **DO NOT** pull or drag or the power supply line.
- 2. Ventilation:** This unit must be set in a ventilated space. **DO NOT** cover the vents on the back panel for any reason. If placed alongside a wall, distance the unit a minimum of 10cm to allow air flow. **DO NOT** surface that might restricted good air flow.
- 3. Dismantling:** **DO NOT** dismantle or open the unit. This is a high-powered unit that can cause serious harm if tampered with. **DO NOT** Open.
- 4. Smoke:** Please unplug the power supplies cord from the wall outlet immediately if unusual smoke appears and contact customer support.

Please make sure the voltage switch inside battery compartment is set to the AC voltage of the country you are using the stereo.

- 1. Línea de alimentación eléctrica:** Evite que el cable de alimentación sea pisoteado, presionado por objetos pesados o perforado. Asegúrese de que el cable tenga suficiente espacio para descansar en el suelo y que no esté tenso. **NO** tire ni arrastre la línea de alimentación.
- 2. Ventilación:** Esta unidad debe instalarse en un espacio ventilado. **NO** cubra las rejillas de ventilación del panel posterior por ningún motivo. Si se coloca junto a una pared, separe la unidad un mínimo de 10 cm para permitir el flujo de aire. **NO** coloque superficies que puedan restringir el buen flujo de aire.
- 3. Desmontaje:** **NO** desmonte ni abra la unidad. Esta es una unidad de alta potencia que puede causar daños graves si se manipula. **No** abrir.
- 4. Humo:** desenchufe el cable de alimentación de la toma de corriente inmediatamente si aparece humo inusual y comuníquese con el servicio de atención al cliente.

Asegúrese de que el interruptor de voltaje dentro del compartimiento de la batería esté configurado en el voltaje de CA del país en el que está usando el estéreo.

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth.

Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REMITIR TODO SERVICIO A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.

AC Operation

1. Before connecting the unit to an AC outlet, check the operating VOLTAGE of the unit is identical with the VOLTAGE of your local power supply.
2. Connect the supplied AC power cord to the AC socket at the back of unit.
3. The battery will be automatically disconnected when the AC Power cord is plugged into the socket.

Battery Operation

Unplug the AC cord from AC jack. This unit requires UM IX4 (not included), open battery insert the batteries in the battery compartment at the downside of the unit, be careful of position according to the notes. Close the battery cover.

Radio Operation

1. Select required band (FM/AM/SW1-SW2) with BAND selector
2. Select desired station by rotating the TUNING control
3. The built-in antenna is directional. When receiving FM or SW-1-SW-2 broadcast, pull out the telescopic antenna in full length; the strongest reception can be achieved by rotating and searching for the strongest signal.
4. Adjust **VOLUME** control to your listening preference.
5. To turn off the radio, set the function selector to TAPE (OFF) button. Listen with headphones (not included). For private listening, you can use headphones with the unit. Connect the headphones (not included) to the headphone jack at the side of the unit. The sound from the speakers automatically turn off when headphones are connected to the unit.

Operación de CA

1. Antes de conectar la unidad a un tomacorriente de CA, verifique que el **VOLTAJE** de funcionamiento de la unidad sea idéntico al **VOLTAJE** de su fuente de alimentación local.
2. Conecte el cable de alimentación de CA suministrado a la toma de CA en la parte posterior de la unidad.
3. La batería se desconectará automáticamente cuando el cable de alimentación de CA se enchufe en el enchufe.

Funcionamiento de la Batería

Desenchufe el cable de CA de la toma de CA. Esta unidad requiere UM IX4 (no incluido), batería abierta, inserte las baterías en el compartimiento de la batería en la parte inferior de la unidad, tenga cuidado con la posición de acuerdo con las notas. Cierre la tapa de la batería.

Operación de Radio

1. Seleccione la banda requerida (FM/AM/SW1-SW2) con el selector **BAND**
2. Seleccione la estación deseada girando el control **TUNING**
3. La antena incorporada es direccional. Cuando reciba transmisiones de FM o SW-1-SW-2, extraiga la antena telescópica en toda su longitud; la recepción más fuerte se puede lograr girando y buscando la señal más fuerte.
4. Ajuste el control de **VOLUMEN** según sus preferencias de escucha.
5. Para apagar la radio, coloque el selector de función en el botón **TAPE (OFF)**. Escuche con auriculares (no incluidos). Para escuchar en privado, puede usar auriculares con la unidad. Conecte los auriculares (no incluidos) al conector para auriculares en el costado de la unidad. El sonido de los altavoces se apaga automáticamente cuando se conectan los auriculares a la unidad.

Playback Operation**Cassette Play**

1. Set the function selector to the **TAPE** position
2. Press the **STOP/EJECT** button to open the cassette door. Insert the cassette so the open side faces up. Close the cassette door.
3. Use the following buttons and controls for cassette play:

PLAY:

- Press Play to begin playing the cassette tape

F.FWD:

- Press to rapidly advance the cassette tape forward.

REWIND:

- Press to rapidly rewind the cassette tape back.

STOP:

- Stop playing or release the F.FWD and REW button.

AUTO STOP:

- Cassette tape will automatically stop when it reaches the end.

PAUSE:

- Press to stop playing or recording. The use of the **PAUSE** button does not disturb the setting for either play or record. This function should be used for a temporary stop. It is best to use the pause button when recording. Press **PAUSE** again to resume playing back or recording.

VOLUME CONTROL:

- Slide the control to the right to increase the volume. Slide the control to the left to decrease the volume.

**Operación de reproducción
reproducción de casete**

1. Coloque el selector de funciones en la posición TAPE
2. Presione el botón STOP/EJECT para abrir la puerta del casete. Inserte el casete de modo que el lado abierto quede hacia arriba. Cierre la puerta del casete.
3. Use los siguientes botones y controles para reproducir casetes:

JUGAR:

- Presione Play para comenzar a reproducir la cinta de casete

F.FWD:

- Presione para hacer avanzar rápidamente la cinta de casete.

REBOBINAR:

- Presione para rebobinar rápidamente la cinta de casete.

DETENER:

- Detenga la reproducción o suelte el botón F.FWD y REW.

AUTOESTOP:

- La cinta de casete se detendrá automáticamente cuando llegue al final.

PAUSA:

•Presione para detener la reproducción o la grabación. El uso del botón PAUSE no perturba el configuración para reproducir o grabar. Esta función debe utilizarse para una parada temporal. Es es mejor usar el botón de pausa al grabar. Presiona PAUSE de nuevo para reanudar la reproducción, atrás o grabando.

CONTROL DEL VOLUMEN:

•Deslice el control hacia la derecha para aumentar el volumen. Deslice el control hacia la izquierda para disminuir el volumen.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your J-220BT Journey!
Tag us **@QFXUSA** to share your stories.