

WHERE THE PARTY BEGINS™

INSTRUCTION MANUAL

Programming Your Remote

1. Use the number buttons on the remote to enter the first 4-digit remote code you circled in the **Code List** in Step 1. The red light will turn off after entering the fourth digit.

2. Point the remote at the device. Test the buttons on the remote to see if the device responds as you would expect. If the buttons do not operate the device, return to Step 2 above and use the next code that you circled for that device.

3. Repeat steps 1 - 5 for each device you wish to control.

Programming Notes

- Some codes may operate only a few functions of your device. There may be another code in the **Code List** that controls more functions. Test other codes in the **Code List** for more functionality.
- If you do not find a remote code that works your device, or there are no codes in the **Code List** for your device, use the **Auto Code Search** method in the next section to program your remote.
- For combination devices such as a TV/DVD combo or TV/VCR combo, you may have to enter a code for each device. (See **Controlling Combo Devices**.)
- Write down the remote codes used to program the remote for future reference.

Setup

Your universal remote requires two (2) AAA batteries (not included). Alkaline batteries are recommended.

Battery Installation

- On the back of the remote, pull down on the textured surface and slide battery cover downward to remove.
- Match the (+) and (-) marks on the batteries to the (+) and (-) marks inside the battery compartment, then insert two (2) AAA batteries. Be sure to use fresh batteries.
- Position battery cover slightly below opening and push upward to lock into place.

NOTE: If your remote stops operating properly, replace the batteries with new ones.

Battery Precautions

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
- Always remove old, weak or worn-out batteries promptly and recycle or dispose of them in accordance with local and national regulations.

Battery Saver

Your remote automatically turns off if the buttons are depressed more than 8 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

Code Saver

You have up to 10 minutes to change the batteries in your remote without losing the codes you have programmed.

Programming Your Remote

Auto Code Search

The Auto Code Search is a process where you can search through all the codes stored in the remote to find a code for your device. It is recommended that you read through all the steps below to familiarize yourself with the **Auto Code Search** before starting the process.

- Manually turn on the device you wish to control.
 - NOTE:** The Auto Code Search process cannot be used for devices without power on/off capability. Use the Direct Code Entry method in these cases.
- Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
 - NOTE:** The red light will either be a small light at the top of the remote or the power on/off button.
- Press and release the device button on the remote for the type of device you wish to control, (for example **TV, cbl, dvd, aux**). The red light will blink once and remain on.

Button Functions

Programming Your Remote

- With the remote pointed at the device, press and release the **POWER** button on the remote. The remote will send 10 different codes to the device. The red light will blink once for each code and remain on after sending the 10 codes.
 - Did the device turn off?**
 - If **YES**, go to Step 5.
 - If **NO**, repeat Step 4 to test the next 10 codes.
 - Manually turn the device back on.
 - With the remote pointed at the device, press and release the **VOL +** button. The remote will re-send the first code of the 10 codes from Step 4. The red light will blink once and remain on.
 - Did the device turn off?**
 - If **YES**, you have found a code for the device. Press and release the same device button you pressed in Step 3. This will store the code in the remote. Go to step 7.

Button Functions

- Power** - turns devices On/Off
- Red Indicator Light**
- Setup** - Used to program the remote
- APPS** - Access top apps -Netflix®, YouTube® Prime, Hulu®, Disney+
- TV, cbl, dvd, aux** - Selects the device to control
- Mute** - Mutes sound
- Numbers** - Enter numbers for direct channel selection
- Input** - Selects video inputs
- Channel Up/Down**
- Record, play, stop, rewind, fast forward, pause**
- Volume Up/Down**
- Previous Channel** - Returns to the previously selected channel
- Menu** - Displays the on-screen menu
- Home/Guide** - Easily access features on today's streaming devices, or **Guide** on cable/satellite receivers
- Exit** - Exit on-screen menus
- Up/Down/Left/Right menu navigation**
- Ok** - Selects menu items for the controlled device

Programming Your Remote

Your remote is designed to control multiple audio/video devices. To use, you will need to program the remote for your devices. There are two different methods you can use to program the remote, **Direct Code Entry** or **Auto Code Search**.

- The **Direct Code Entry** method is the recommended method as it is the simplest and quickest method in most cases.
- The **Auto Code Search** method searches through all the codes in the remote to find a code for your device.

NOTE: this remote comes preprogrammed for Samsung TVs. Press **TV** for Samsung TVs.

Programming Your Remote

Direct Code Entry (Recommended)

- Locate the **Code List** included with your remote. Find the section for the type of device you wish to control, (for example **TV, cbl, dvd, aux**). Locate the brand of your device and circle all the remote codes for the brand.
- Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
 - NOTE:** The red light will either be a small light at the top of the remote or the power on/off button.
- Press and release the device button on the remote for the type of device you wish to control, (for example **TV, cbl, dvd, aux**). The red light will blink once and remain on.
 - NOTE:** Any of the device buttons on the remote can be programmed to control any of your devices. For example, you can use the **Cbl** device button on the remote to control a Satellite Receiver, Digital Converter Box, Streaming Media Player or any device category in the Code List.

Using Your Remote

Code Identification

- Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
- Press and release the desired device button (**TV, cbl, dvd, aux**) you would like the code for.
- Press and release the **ENTER** button.
- Press and release the **#1** button. Count the number of times the remote light flashes. This is the number corresponding to the first digit of the code. Repeat the process by pressing the **#2, #3, and #4** buttons for the remaining digits.
- Press and release the **ENTER** button to exit this mode.

Using Your Remote

Reset to Factory Settings

- Press and hold down the **SETUP** button on the remote until the red light on the remote control turns on. Release the **SETUP** button. The red light will remain on.
- Press and release the **MUTE** button.
- Press and release the number **#0** button. The red indicator light will flash twice.

Code List - Lista de Códigos

TV	CE	CH	CH	CH
ABC	0001	0001	0001	0001
ABC	0002	0002	0002	0002
ABC	0003	0003	0003	0003
ABC	0004	0004	0004	0004
ABC	0005	0005	0005	0005
ABC	0006	0006	0006	0006
ABC	0007	0007	0007	0007
ABC	0008	0008	0008	0008
ABC	0009	0009	0009	0009
ABC	0010	0010	0010	0010
ABC	0011	0011	0011	0011
ABC	0012	0012	0012	0012
ABC	0013	0013	0013	0013
ABC	0014	0014	0014	0014
ABC	0015	0015	0015	0015
ABC	0016	0016	0016	0016
ABC	0017	0017	0017	0017
ABC	0018	0018	0018	0018
ABC	0019	0019	0019	0019
ABC	0020	0020	0020	0020
ABC	0021	0021	0021	0021
ABC	0022	0022	0022	0022
ABC	0023	0023	0023	0023
ABC	0024	0024	0024	0024
ABC	0025	0025	0025	0025
ABC	0026	0026	0026	0026
ABC	0027	0027	0027	0027
ABC	0028	0028	0028	0028
ABC	0029	0029	0029	0029
ABC	0030	0030	0030	0030
ABC	0031	0031	0031	0031
ABC	0032	0032	0032	0032
ABC	0033	0033	0033	0033
ABC	0034	0034	0034	0034
ABC	0035	0035	0035	0035
ABC	0036	0036	0036	0036
ABC	0037	0037	0037	0037
ABC	0038	0038	0038	0038
ABC	0039	0039	0039	0039
ABC	0040	0040	0040	0040
ABC	0041	0041	0041	0041
ABC	0042	0042	0042	0042
ABC	0043	0043	0043	0043
ABC	0044	0044	0044	0044
ABC	0045	0045	0045	0045
ABC	0046	0046	0046	0046
ABC	0047	0047	0047	0047
ABC	0048	0048	0048	0048
ABC	0049	0049	0049	0049
ABC	0050	0050	0050	0050
ABC	0051	0051	0051	0051
ABC	0052	0052	0052	0052
ABC	0053	0053	0053	0053
ABC	0054	0054	0054	0054
ABC	0055	0055	0055	0055
ABC	0056	0056	0056	0056
ABC	0057	0057	0057	0057
ABC	0058	0058	0058	0058
ABC	0059	0059	0059	0059
ABC	0060	0060	0060	0060
ABC	0061	0061	0061	0061
ABC	0062	0062	0062	0062
ABC	0063	0063	0063	0063
ABC	0064	0064	0064	0064
ABC	0065	0065	0065	0065
ABC	0066	0066	0066	0066
ABC	0067	0067	0067	0067
ABC	0068	0068	0068	0068
ABC	0069	0069	0069	0069
ABC	0070	0070	0070	0070
ABC	0071	0071	0071	0071
ABC	0072	0072	0072	0072
ABC	0073	0073	0073	0073
ABC	0074	0074	0074	0074
ABC	0075	0075	0075	0075
ABC	0076	0076	0076	0076
ABC	0077	0077	0077	0077
ABC	0078	0078	0078	0078
ABC	0079	0079	0079	0079
ABC	0080	0080	0080	0080
ABC	0081	0081	0081	0081
ABC	0082	0082	0082	0082
ABC	0083	0083	0083	0083
ABC	0084	0084	0084	0084
ABC	0085	0085	0085	0085
ABC	0086	0086	0086	0086
ABC	0087	0087	0087	0087
ABC	0088	0088	0088	0088
ABC	0089	0089	0089	0089
ABC	0090	0090	0090	0090
ABC	0091	0091	0091	0091
ABC	0092	0092	0092	0092
ABC	0093	0093	0093	0093
ABC	0094	0094	0094	0094
ABC	0095	0095	0095	0095
ABC	0096	0096	0096	0096
ABC	0097	0097	0097	0097
ABC	0098	0098	0098	0098
ABC	0099	0099	0099	0099
ABC	0100	0100	0100	0100
ABC	0101	0101	0101	0101
ABC	0102	0102	0102	0102
ABC	0103	0103	0103	0103
ABC	0104	0104	0104	0104
ABC	0105	0105	0105	0105
ABC	0106	0106	0106	0106
ABC	0107	0107	0107	0107
ABC	0108	0108	0108	0108
ABC	0109	0109	0109	0109
ABC	0110	0110	0110	0110
ABC	0111	0111	0111	0111
ABC	0112	0112	0112	0112
ABC	0113	0113	0113	0113
ABC	0114	0114	0114	0114
ABC	0115	0115	0115	0115
ABC	0116	0116	0116	0116
ABC	0117	0117	0117	0117
ABC	0118	0118	0118	0118
ABC	0119	0119	0119	0119
ABC	0120	0120	0120	0120
ABC	0121	0121	0121	0121
ABC	0122	0122	0122	0122
ABC	0123	0123	0123	0123
ABC	0124	0124	0124	0124
ABC	0125	0125	0125	0125
ABC	0126	0126	0126	0126
ABC	0127	0127	0127	0127
ABC	0128	0128	0128	0128
ABC	0129	0129	0129	0129
ABC	0130	0130	0130	0130
ABC	0131	0131	0131	0131
ABC	0132	0132	0132	0132
ABC	0133	0133	0133	0133
ABC	0134	0134	0134	0134
ABC	0135	0135	0135	0135
ABC	0136	0136	0136	0136
ABC	0137	0137	0137	0137
ABC	0138	0138	0138	0138
ABC	0139	0139	0139	0139
ABC	0140	0140	0140	0140
ABC	0141	0141	0141	0141
ABC	0142	0142	0142	0142
ABC	0143	0143	0143	0143
ABC	0144	0144	0144	0144
ABC	0145	0145	0145	0145
ABC	0146	0146	0146	0146
ABC	0147	0147	0147	0147
ABC	0148	0148	0148	0148
ABC	0149	0149	0149	0149
ABC	0150	0150	0150	0150
ABC	0151	0151	0151	0151
ABC	0152	0152	0152	0152
ABC	0153	0153	0153	0153
ABC	0154	0154	0154	0154
ABC	0155	0155	0155	0155
ABC	0156	0156	0156	0156
ABC	0157	0157	0157	0157
ABC	0158	0158	0158	0158
ABC	0159	0159	0159	0159
ABC	0160	0160	0160	0160
ABC	0161	0161	0161	0161
ABC	0162	0162	0162	0162
ABC	0163	0163	0163	0163
ABC	0164	0164	0164	0164
ABC	0165	0165	0165	0165
ABC	0166	0166	0166	0166
ABC	0167	0167	0167	0167
ABC	0168	0168	0168	0168
ABC	0169	0169	0169	0169
ABC	0170	0170	0170	0170
ABC				