

SBX-412207BT

# **QFX**

WHERE THE PARTY BEGINS™



**INSTRUCTION MANUAL**



## WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth.

Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



## ¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.

Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.



## ATTENTION



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.

Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

Questions? Comments? Contact Us Anytime  
Preguntas? Comentarios? Contáctenos en cualquier momento  
Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)

 


support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)

Follow Us



QFXUSA.COM

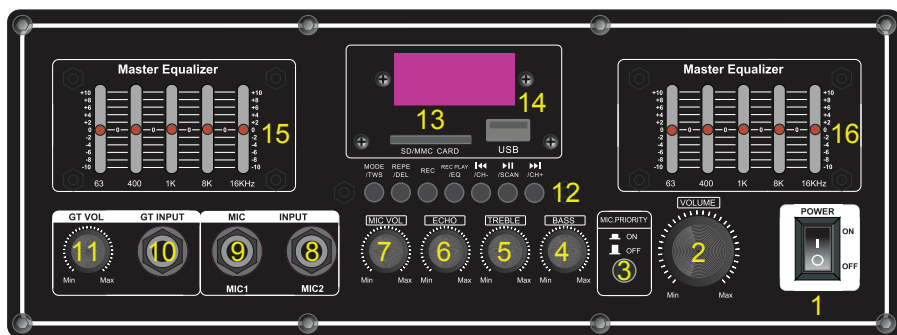


### TOP CONTROL PANEL

1. Power Switch, ON/OFF
2. Adjust the master volume.
3. MIC PRIORITY, ON/OFF
4. Bass Knob: Adjust from Min to Max
5. Treble Knob : Adjust from Min to Max
6. Echo Knob: Adjust from Min to Max
7. Microphone Volume Knob: Adjust from Min to Max
8. Microphone Input 2
9. Microphone Input 1
10. Guitar Input
11. Guitar Volume Control

### 12. Global Controls: System Function Button:

 - MODE: Select BT, AUX, SD, USB, FM, TWS
  - REPE/DEL: Repeat/Delete Recoring
  - REC: Record Track Function
  - REC PLAY/EQ: Record Play and EQ Adjustment
  - Previous Track Button: Select Previous Track and Ch-
  - Play/Pause Button: Play and Pause Current Track
  - Next Track Button: Select Next Track and Ch+
13. SD Card Input: Insert SD Card for Play Back or Recording
14. USB Input: Insert USB Device for Play Back or Recording
15. Master Equalizer 1
16. Master Equalizer 2

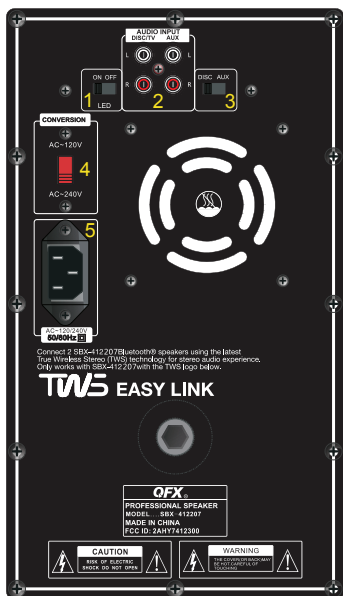

### SBX-412207 DISPLAY SYSTEM SETTINGS:

1. Input Mode: The LED display screen will display the information of input mode for USB/SD/BT/ LINE/FM. When a USB /SD Card is inserted the unit will automatically switch to USB/SD mode and begin playing Mp3 audio files from the USB flash drive/SD Card.
2. Track Number: The track number currently playing from the USB/SD will display.
3. FM Mode: All FM channels display here. Press and Hold "Play/Pause" button to auto scan all channels.

### PANEL POSTERIOR

1. LED ENCENDIDO / APAGADO
2. ENTRADA DE AUDIO: DISCO DE TV / AUX
3. INTERRUPTOR PARA DISCO DE TV / AUX
4. COVERSIÓN AC: 120V / 240V
5. CONEXIÓN DE CA: 120V / 240V 50 / 60Hz

 
Connect 2 SBX-412207 Bluetooth® speakers using the latest True Wireless Stereo (TWS) technology for stereo audio experience. Only works with SBX-412207 with the TWS logo below.

**TWS EASY LINK**

**QFX**  
PROFESSIONAL SPEAKER  
MODEL: SBX-412207  
MADE IN CHINA  
FCC ID: 2AH7412300

**CAUTION**  
MAX. SW. BATT. CHRG. 500 mA. SEE USER MANUAL.

**WARNING**  
DO NOT TOUCH THE SURFACE OF THE SPEAKER DURING OPERATION.

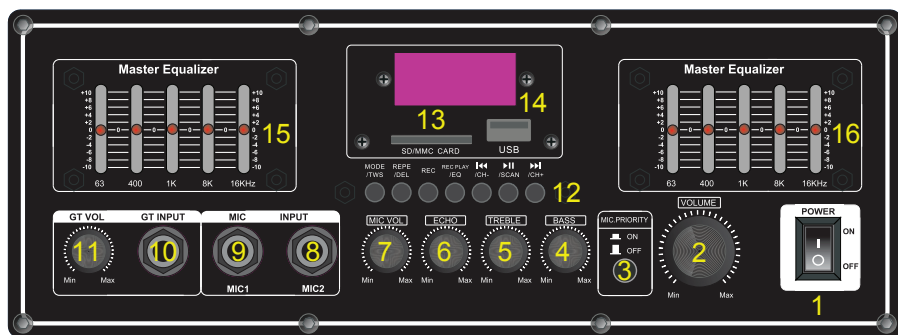

## PANEL SUPERIOR

1. Interruptor de encendido: ON / OFF
2. Perilla de volumen maestro: ajuste de mínimo a máximo
3. PRIORIDAD MIC: ON / OFF
4. Botón de graves: ajuste de mínimo a máximo
5. Perilla de agudos: ajuste de mínimo a máximo
6. Perilla de eco del micrófono: ajuste de mínimo a máximo
7. Perilla de volumen del micrófono: ajuste de mínimo a máximo
8. Entrada de micrófono 2
9. Entrada de micrófono 1
10. Entrada de guitarra
11. Mando de guitarra / volumen: ajuste de mínimo a máximo
12. Botón de Modo: alterna entre AUX, USB, SD, FM, BT. REPE / DEL  
REC  
REC PLAY / EQ  
Botón de pista anterior: seleccione la pista anterior  
Botón de reproducción / pausa  
Botón de pista siguiente: seleccione la pista siguiente
13. Ranura para tarjeta SD
14. Ranura USB
15. Ecualizador Maestro 1
16. Ecualizador Maestro 2

 


## CONFIGURACIÓN DEL SISTEMA DE VISUALIZACIÓN

1. Modo de entrada: la pantalla LED mostrará la información del modo de entrada para USB/SD/BLUE/LÍNE/FM. Cuando se inserta una unidad flash USB / tarjeta SD en el Entrada USB/TF, la unidad cambiará automáticamente al modo USB/SD y comenzará a reproducirse Archivos de audio Mp3 desde la unidad flash USB/tarjeta SD.
2. Número de pista: se mostrará el número de pista que se reproduce actualmente desde el USB / SD.
3. Modo FM: aquí se muestran todos los canales FM. Mantenga pulsado el botón "reproducir / pausar" para auto escanear todos los canales.

## PANEL POSTERIOR

1. LED ENCENDIDO / APAGADO
2. ENTRADA DE AUDIO: DISCO DE TV / AUX
3. INTERRUPTOR PARA DISCO DE TV / AUX
4. CONVERSIÓN AC: 120V / 240V
5. CONEXIÓN DE CA: 120V / 240V 50 / 60Hz

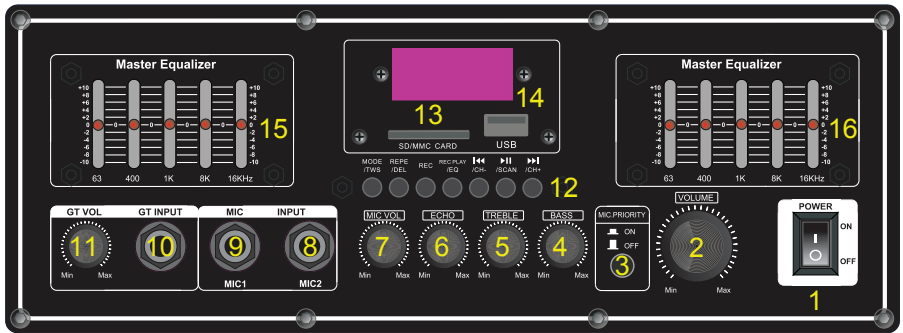

## PANNEAU DU HAUT

1. Interrupteur d'alimentation: ON / OFF
2. Bouton de volume principal: ajustez de Min à Max
3. PRIORITÉ MIC: ON / OFF
4. Bouton de basse: ajustez de Min à Max
5. Bouton des aigus: Ajustez de Min à Max
6. Bouton d'écho du microphone: Ajustez de Min à Max
7. Bouton de volume du microphone: ajustez de Min à Max
8. Entrée microphone 2
9. Entrée microphone 1

## 10. Entrée guitare

11. Bouton Guitare / Volume: Ajustez de Min à Max
12. Bouton Mode: bascule entre AUX, USB, SD, FM, BT.  
 REPE / DEL  
 REC  
 REC PLAY / EQ  
 Bouton piste précédente: sélectionner la piste précédente  
 Bouton Lecture / Pause  
 Bouton piste suivante: sélectionner la piste suivante
13. Emplacement pour carte SD
14. Emplacement USB
15. Master Equalizer 1
16. Master Equalizer 2



## PARAMÈTRES DU SYSTÈME D'AFFICHAGE

1. Mode d'entrée: L'écran d'affichage LED affichera les informations du mode d'entrée pour USB / SD / BLUE / LINE / FM. Lorsqu'un lecteur flash USB / une carte SD est inséré dans le Entrée USB / TF, l'appareil passe automatiquement en mode USB / SD et commence la lecture Fichiers audio MP3 de la clé USB / carte SD.
2. Numéro de piste: Le numéro de piste en cours de lecture depuis l'USB / SD s'affiche.
3. Mode FM: toutes les chaînes FM s'affichent ici. Appuyez longuement sur le bouton "lecture / pause" pour auto balayer tous les canaux.

## PANNEAU ARRIÈRE

1. LED ON / OFF
2. ENTRÉE AUDIO: TV DISCO / AUX
3. COMMUTATEUR POUR TV DISCO / AUX
4. COUVERTURE CA: 120V / 240V
5. CONNEXION AC: 120V / 240V 50 / 60Hz

 
Connect 2 BT104-122078 Bluetooth® speakers using the latest True Wireless Stereo (TWS) technology for stereo audio experience. Only works with BT2472.2 with the TWS logo below.

**TWS EASY LINK**

**QFX**  
 PROFESSIONAL SPEAKER  
 MODEL: SBA 412207  
 MADE IN CHINA  
 FCC ID: 2AH7412300


**CAUTION**  
 MAX. 50.0WATT  
 CLASS 2B, 5.0V

**WARNING**  
 RETURN TO FACTORY FOR REPAIR

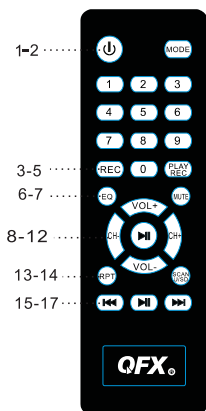


## REMOTE CONTROL

 1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB, SD, FM, AUX, BT
3. REC
4. KEY Number for selecting the certain track
5. PLAY REC
6. EQ
7. Mute: Mute the track
8. PLAY/PAUSE
9. CHANNEL +
10. CHANNEL -
11. VOL-: Reduce the master volume
12. VOL+: Increase the master volume
13. REP: Repeat the playing track.
14. Press to Scan Channel in FM Mode
15. Previous Track: Select previous channel
16. PLAY/PAUSE
17. Next Track: Select next channel.

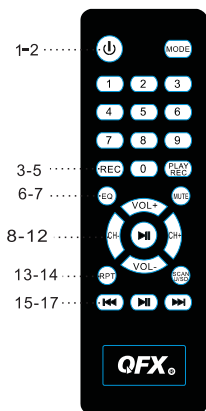

## CONTROL REMOTO

 1. EN ESPERA: Haga que la unidad esté en modo de espera.
2. Botón de modo de entrada: alterna entre USB, SD, FM, AUX, BT
3. REC
4. Número CLAVE para seleccionar la pista determinada
5. PLAY REC
6. EQ
7. Silencio: silencia la pista
8. PLAY / PAUSE
9. CANAL +
10. CANAL -
11. VOL-: reduce el volumen maestro
12. VOL +: aumenta el volumen maestro
13. REP: repite la pista de reproducción.
14. Presione para escanear canales en modo FM
15. Pista anterior: selecciona el canal anterior
16. PLAY / PAUSE
17. Siguiete pista: selecciona el siguiente canal.

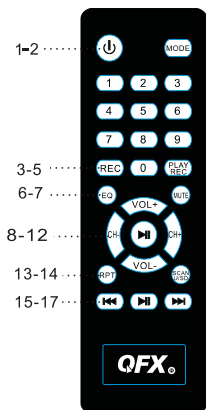

## TÉLÉCOMMANDE

1. STANDBY: mettre l'appareil en mode veille.
2. Bouton de mode d'entrée: basculez entre USB, SD, FM, AUX, BT
3. REC
4. Numéro de clé pour sélectionner la certaine piste
5. PLAY REC
6. EQ
7. Muet: couper la piste
8. LECTURE / PAUSE
9. CHANNEL +
10. CANAL -
11. VOL-: Réduisez le volume principal
12. VOL +: Augmente le volume principal
13. REP: Répète la piste en cours de lecture.
14. Appuyez sur pour balayer la chaîne en mode FM
15. Piste précédente: sélectionner la chaîne précédente
16. LECTURE / PAUSE
17. Piste suivante: sélectionnez la chaîne suivante.



## TWS CONNECTION

TWS connection: TWS Connection is only for two speakers of the same make and model.

1. Enable Bluetooth mode on both speakers.
2. Press and hold the **TWS (MODE)** button on one of the speakers to sync both units for 3 seconds (they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for SBX-412207 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the **TWS** button.



## TWS CONNECTION

Conexión TWS: La conexión TWS es solo para dos altavoces de la misma marca y modelo.

1. Habilite el modo Bluetooth en ambos altavoces.
2. Mantenga presionado el botón TWS (MODE) en uno de los altavoces para sincronizar ambas unidades durante 3 segundos (deben ser de la misma marca y modelo para funcionar).
3. En su dispositivo móvil en el menú de Bluetooth, busque SBX-412207 y conéctese.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, presione y mantenga presionado el botón TWS.



## CONNEXION TWS

Connexion TWS: La connexion TWS est uniquement pour deux enceintes de la même marque et du même modèle.

1. Activez le mode Bluetooth sur les deux haut-parleurs.
2. Appuyez sur le bouton TWS (MODE) de l'une des enceintes et maintenez-le enfoncé pour synchroniser les deux appareils pendant 3 secondes (ils doivent être de la même marque et du même modèle pour fonctionner).
3. Sur votre appareil mobile dans le menu Bluetooth, recherchez SBX-412207 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de True Wireless Stereo.
5. Pour quitter TWS, maintenez le bouton TWS enfoncé.



# BLUETOOTH AND RECORDING

## SBX-412207BLUETOOTH:

BLUETOOTH Mode: Open the Bluetooth function on your mobile device. Search for the unit called "QFX SBX-412207" and connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

## RECORDING FUNCTION:

Speaker can only record the sound from the Microphone to the USB or SD card. The recorded file will save into the USB or SD card. Press the "Record " button to start recording , press again to save the file. Press and hold" REC PLAY" button to play the recorded file. Press and hold" REC/PLAY" to exit the recording function function. When playing the recording file, Press and hold "REPE/DEL" to delete the recorded file.

v

## BLUETOOTH

Modo Bluetooth: abre el Bluetooth del teléfono. Encuentra el nombre de Bluetooth de la unidad llamada "QFX SBX-412207" para conectar. Después de un partido exitoso, puedes reproducir la música desde el altavoz. No necesitará volver a conectar el Bluetooth cuando cambie de modo.

## FUNCIÓN DE GRABACIÓN:

El altavoz solo puede grabar el sonido del micrófono en el USB o la tarjeta SD. El archivo grabado se guardará en el USB o la tarjeta SD. Presione el botón "Grabar" para comenzar a grabar, presione nuevamente para guardar el archivo. Mantenga pulsado el botón "REC PLAY" para reproducir el archivo grabado. Presione y mantenga presionado "REC / PLAY" para salir de la función de grabación. Cuando reproduzca el archivo de grabación, presione y mantenga presionado "REPE / DEL" para borrar el archivo grabado.

## BLUETOOTH

Mode Bluetooth: ouvrez le Bluetooth du téléphone. Recherchez le nom Bluetooth de l'unité appelée "QFX SBX-412207" pour se connecter. Après un match réussi, vous pouvez écouter la musique du haut-parleur. Vous n'aurez pas besoin de reconnecter le Bluetooth lors du changement de mode.

## FONCTION D'ENREGISTREMENT:

Le haut-parleur peut uniquement enregistrer le son du microphone sur la carte USB ou SD. Le fichier enregistré sera sauvegardé sur la carte USB ou SD. Appuyez sur le bouton "Enregistrer" pour démarrer l'enregistrement, appuyez à nouveau pour enregistrer le fichier. Appuyez et maintenez le bouton "REC PLAY" pour lire le fichier enregistré.

Appuyez sur "REC / PLAY" et maintenez-la enfoncée pour quitter la fonction de fonction d'enregistrement. Lors de la lecture du fichier d'enregistrement, appuyez sur "REPE / DEL" et maintenez-la enfoncée pour supprimer le fichier enregistré.

 
 
 
 
 


Follow Us



QFXUSA.COM

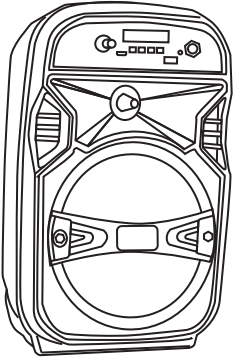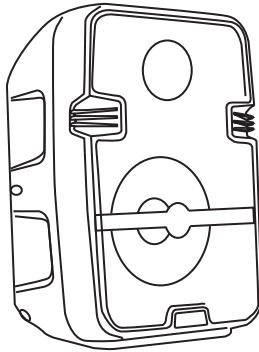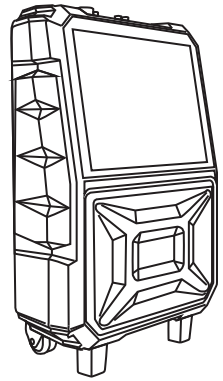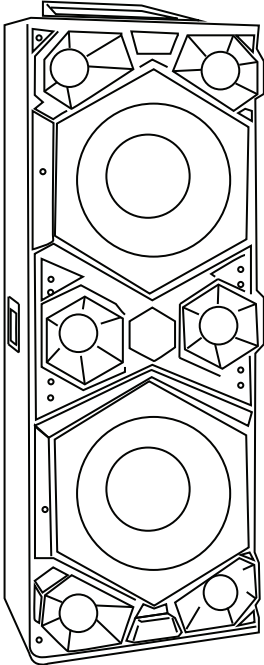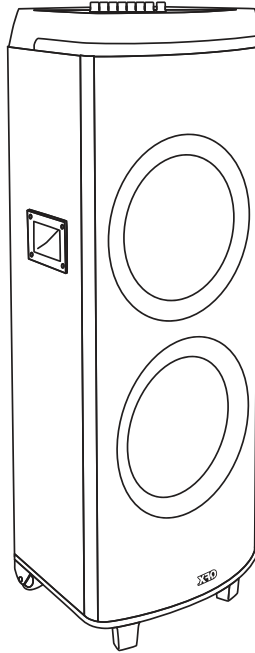

**BT-60****BT-65****KAR-927****E-1500****LCS-120**

**IF YOU ENJOY  
YOUR  
SBX-412207BT  
CHECK OUT  
THESE OTHER  
MODELS!**



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA**, Inc.  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



[www.qfxusa.com](http://www.qfxusa.com)

# THANK YOU.

 
Enjoy your speaker and make many memories with it because  
**QFX is Where the Party Begins!**

We would love to hear about your SBX-412207 Journey!  
Tag us **@QFXUSA** to share your stories.




## OTHER QFX MODELS


**BT-60**

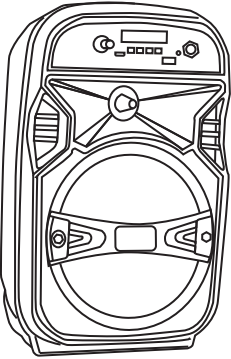


**BT-65**

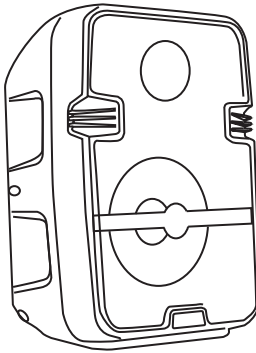 


**KAR-927**

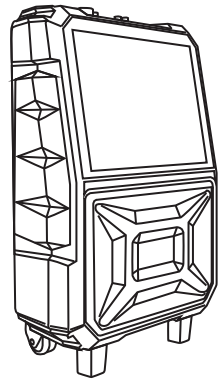 

**E-1500**

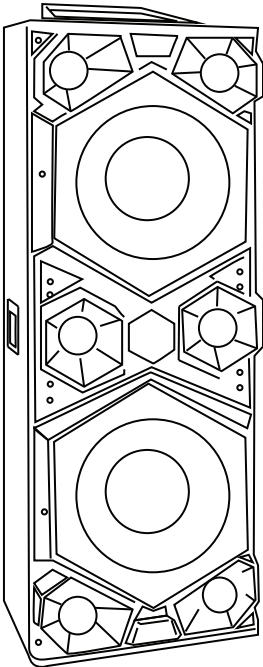 

**LCS-120**

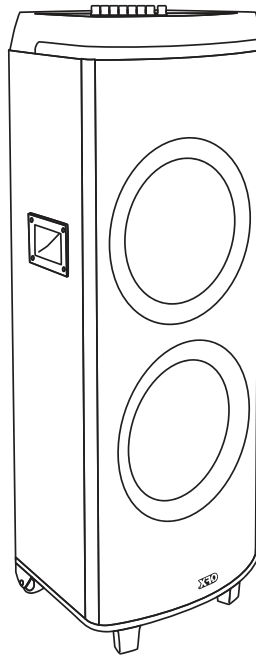 

**IF YOU ENJOY  
YOUR  
SBX-412207BT  
CHECK OUT  
THESE OTHER  
MODELS!**



**WHERE THE PARTY BEGINS**