

 
LMS-100

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL

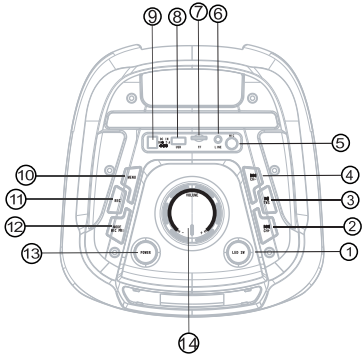

- | | | |
|-----------------------|-------------------------|-----------------------------|
| 1. Light Switch | 1. Interruptor de luz | 1. Interrupteur d'éclairage |
| 2. Next/Ch+ | 2. Siguiente / Ch + | 2. Suivant/Ch+ |
| 3. Play/Pause/TWS | 3. Play/Pausar/ TWS | 3. Lecture/Pause/TWS |
| 4. Previous/Ch- | 4. Anterior/Ch- | 4. Précédent/Ch- |
| 5. Mic Input | 5. Entrada de micrófono | 5. Entrée micro |
| 6. Aux Input | 6. Entrada auxiliar | 6. Entrée auxiliaire |
| 7. TF Card | 7. Tarjeta TF | 7. Carte TF |
| 8. USB Input | 8. Entrada USB | 8. Entrée USB |
| 9. DC 9V Input | 9. Entrada DC 9V | 9. Entrée CC 9V |
| 10. Menu/Pair | 10. Menú / Par | 10. Menu/Paire |
| 11. Record | 11. Registro | 11. Enregistrer |
| 12. Mode/Mic Priority | 12. Modo/Prioridad Mic | 12. Priorité Mode/Micro |
| 13. Power Button | 13. Botón de encendido | 13. Bouton d'alimentation |
| 14. Volume | 14. Volumen | 14. Volume |

BLUETOOTH:

Use the MODE button to enable Bluetooth on the LMS-100. Open the Bluetooth settings on your mobile device and search for QFX LMS-100. Select the option to pair both devices together. You can now sit back and enjoy the music from your favorite app. You won't need reconnect the Bluetooth again when switching through modes.

BLUETOOTH:

Use el botón MODE para habilitar Bluetooth en el LMS-100. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX LMS-100. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

BLUETOOTH:

Utilisez le bouton MODE pour activer Bluetooth sur le LMS-100. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX LMS-100. Sélectionnez l'option pour coupler les deux appareils ensemble. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter le Bluetooth lors du changement de mode.

True Wireless Stereo (TWS)

1. Turn ON both units and enable Bluetooth mode on both speakers. Use the mode button.
2. Press and hold the TWS button on one of the speakers (A) until you hear the sound "Bluetooth Connected" (they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for QFX LMS-100 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the TWS button.

1. Encienda ambas unidades y habilite el modo Bluetooth en ambos altavoces. Utilice el botón de modo.
2. Mantenga presionado el botón TWS en uno de los altavoces (A) hasta que escuche el sonido "Bluetooth Connected" (deben ser de la misma marca y modelo para funcionar).
3. En su dispositivo móvil en el menú de Bluetooth, busque QFX LMS-100 y conéctese.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, presione y mantenga presionado el botón TWS.

1. Allumez les deux unités et activez le mode Bluetooth sur les deux haut-parleurs. Utilisez le bouton mode.
2. Appuyez et maintenez enfoncé le bouton TWS sur l'un des haut-parleurs (A) jusqu'à ce que vous entendiez le son « Bluetooth Connected » (ils doivent être de la même marque et du même modèle pour fonctionner).
3. Sur votre appareil mobile, dans le menu Bluetooth, recherchez QFX LMS-100 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de True Wireless Stereo.
5. Pour quitter TWS, appuyez sur le bouton TWS et maintenez-le enfoncé.



LMS-100 GUIDE

AUX-IN: (LINE)

For other compatible music devices, use an audio cable (not included) to connect from the 'Line Out' device to the 'Aux in' device to enjoy.

Para otros dispositivos de música compatibles, use un cable de audio (no incluido) para conectar el dispositivo 'Line Out' al dispositivo 'Aux in' para disfrutar.

Pour les autres appareils de musique compatibles, utilisez un câble audio (non inclus) pour connecter l'appareil 'Line Out' à l'appareil 'Aux in' pour en profiter.

Battery Charging:

1. Turn off the unit, insert the supplied power adapter into the charging slot of the unit, the indicator light will turn on when .
2. When battery is full, the indicator light will show full content battery icon.
3. To extend battery life, do not charge more than 8 hours.

1. Apague la unidad e inserte el adaptador de corriente suministrado en la ranura de carga de la unidad. La luz s'allumera se encenderá cuando comience a cargarse.
2. Cuando la batería está llena, la luz indicadora mostrará un icono de batería completa.
3. Para prolongar la vida útil de la batería, no cargue más de 8 horas.

1. Éteignez l'appareil et insérez l'adaptateur secteur fourni dans la fente de chargement de l'appareil. Le voyant s'allumera au début de la charge.
2. Lorsque la batterie est pleine, le voyant lumineux affiche une icône de batterie pleine.
3. Pour prolonger la durée de vie de la batterie, ne chargez pas plus de 8 heures.

Notes:

1. Play time depends on how hard the unit is working. Heavy, loud bass music will use more energy.
2. The internal rechargeable battery is non-replaceable. Do not remove or replace it. Do not throw it in the trash or into a fire source.
3. When cleaning the product, use a soft dry cloth. For more severe stains, only wet the cloth with water. Other ingredients have the chance to dissolve the paint or damage the plastic.

1. El tiempo de juego depende de lo duro que esté trabajando la unidad. La música de bajo fuerte y fuerte consumirá más energía.
2. La batería interna recargable no es reemplazable. No lo quite ni lo reemplace. No lo arroje a la basura ni al fuego.
3. Al limpiar el producto, utilice un paño suave y seco. Para manchas más severas, solo humedezca el paño con agua. Otros ingredientes tienen la posibilidad de disolver la pintura o dañar el plástico.

1. Le temps de jeu dépend de la force de travail de l'unité. Une musique de basse lourde et forte utilisera plus d'énergie.
2. La batterie interne rechargeable n'est pas remplaçable. Ne le retirez pas et ne le remplacez pas. Ne le jetez pas à la poubelle ou dans une source d'incendie.
3. Lors du nettoyage du produit, utilisez un chiffon doux et sec. Pour les taches plus importantes, ne mouillez le chiffon qu'avec de l'eau. D'autres ingrédients peuvent dissoudre la peinture ou endommager le plastique.

Recording Function:

1. Make sure the unit is powered on, and that a USB memory or TF card is inserted into the slot.
2. Plug on and test the microphone while connecting it. Hold the RECORD key to record once your voice has been heard from the speaker. Press RECORD again to stop recording.
3. In USB or TF mode, microphone signal will be recorded. In FM or LINE mode, signal from FM or LINE mode will be recorded but not microphone signal.
4. If the USB/TF has recording files, press RECORD key to listen to them, press again to normal music. Noted: If both USB and TF are inserted, recording files will save to USB.

Reproduce música desde un disco USB y una tarjeta Micro TF:

1. Mantenga el botón de encendido en "ON"
2. Inserte el disco flash USB o la tarjeta Micro TF en la ranura, la música almacenada en la memoria se reproducirá automáticamente.
3. En el modo de reproducción, presione brevemente el botón anterior o siguiente para seleccionar la canción que le gusta, o presione el botón VOL- / VOL + para ajustar el volumen hacia abajo o hacia arriba. PLAY / PAUSE para reproducir o pausar.
4. Mantenga presionado el botón de encendido en "APAGADO" cuando no esté en uso.

1. Assurez-vous que l'appareil est sous tension et qu'une mémoire USB ou une carte TF est insérée dans la fente.
2. Branchez et testez le microphone. Assurez-vous que le volume du micro est élevé. Appuyez et maintenez enfoncé le bouton RECORD pour commencer à enregistrer la voix. Appuyez à nouveau sur RECORD pour arrêter l'enregistrement.
3. En mode FM et LINE, la fonction RECORD enregistrera uniquement le signal FM ou ligne et non le microphone.
4. Si la carte USB/TF contient des fichiers d'enregistrement, appuyez sur la touche RECORD pour les écouter. Appuyez à nouveau pour quitter le mode ENREGISTREMENT. Remarque : Si USB et TF sont tous deux insérés, les fichiers d'enregistrement seront sauvegardés sur USB.

How to use FM Radio:

1. Press the "MODE" button to enable FM mode.
2. In FM mode press the "PLAY/PAUSE" button to automatically search and store FM Channel.
3. Press next or previous button to change the saved FM Channel.

Cómo utilizar la radio FM:

1. Presione el botón "MODE" para habilitar el modo FM.
2. En el modo FM, presione el botón "REPRODUCIR / PAUSA" para buscar y almacenar automáticamente el canal FM.
3. Presione el botón siguiente o anterior para cambiar el canal FM guardado.

1. Appuyez sur le bouton "MODE" pour activer le mode FM.

2. En mode FM, appuyez sur le bouton « PLAY/PAUSE » pour rechercher et mémoriser automatiquement la chaîne FM.
3. Appuyez sur le bouton suivant ou précédent pour changer le canal FM enregistré.

Microphone:

1. Hold Mic PRI key to turn ON/OFF microphone priority.
2. Press the MENU key to adjust the Treble (T), Bass (B), Mic Volume (N), Mic Echo (E), Mic Delay (D).

1. Mantenga presionada la tecla Mic PRI para encender / apagar la prioridad del micrófono.

2. Presione la tecla MENU para ajustar los Agudos (T), Graves (B), Volumen del micrófono (N), Eco del micrófono (E), Retardo del micrófono (D).

 
1. Maintenez la touche Mic PRI enfoncée pour activer/désactiver la priorité du microphone.

2. Appuyez sur la touche MENU pour régler les aigus (T), les graves (B), le volume du micro (N), l'écho du micro (E), le délai du micro (D).

REMOTE CONTROL

1. STAND BY: Turns the Power On/Off.
2. MODE: Switch the Media Input Mode.
3. MUTE: Press to mute the Volume.
4. Play/Pause: Press to Play or Pause.
5. Previous Track.
6. Next Track.
7. EQ: Choose a preset equalizer setting.
8. VOL- : Volume down/Ch-/Previous track.
9. VOL+: Volume up/Ch+/Next track.
10. Number: Number keypad selection.
11. RPT: Press to repeat and/or shuffle.
12. U/SD: USB/TF Card/FM Scan.

1. STAND BY: Enciende y apaga la unidad.
2. MODE: cambia el modo de entrada de medios.
3. MUTE: presione para silenciar el volumen.
4. Reproducir / Pausar: presione para reproducir o pausar.
5. Pista anterior.
6. Siguiente pista.
7. EQ: elija una configuración de ecualizador preestablecida.
8. VOL-: Bajar volumen / Ch- / Pista anterior.
9. VOL +: Subir volumen / Ch + / Pista siguiente.
10. Número: Selección del teclado numérico.
11. RPT: presione para repetir y / o mezclar.
12. U / SD: USB / Tarjeta TF / Escaneo FM

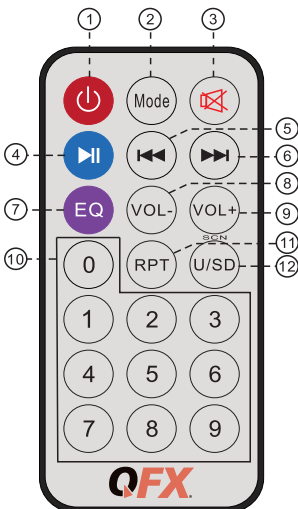

1. STAND BY : Met l'appareil sous/hors tension.
2. MODE : Changez le mode d'entrée multimédia.
3. MUTE : Appuyez pour couper le volume.
4. Lecture/Pause : Appuyez pour lire ou Pause.
5. Piste précédente.
6. Piste suivante.
7. EQ : Choisissez un paramètre d'égaliseur prédéfini.
8. VOL- : Baisser le volume/Ch-/Piste précédente.
9. VOL+ : Augmenter le volume/Ch+/Piste suivante.
10. Numéro : Sélection du clavier numérique.
11. RPT : Appuyez pour répéter et/ou mélanger.
12. U/SD : USB/carte TF/balayage FM

FOLLOW US @QFXUSA



 
Follow Us



QFXUSA.COM

**REMEMBER TO FOLLOW US ON SOCIAL
MEDIA FOR NEW RELEASES, SHOW
VIDEOS, PICTURES AND
INSTRUCTIONAL VIDEOS**

J-220BT

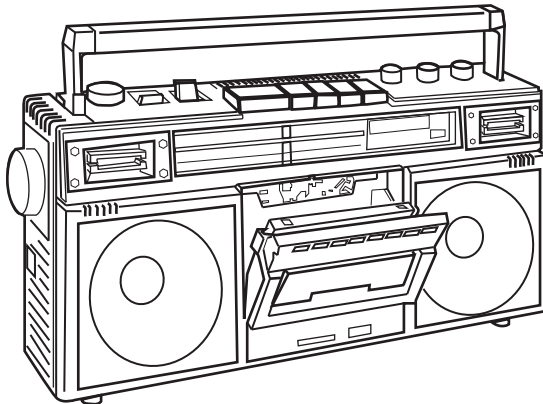

QFX[®]

WHERE THE PARTY BEGINS[™]



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX**. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

Questions? Comments? Contact Us Anytime
 Preguntas? Comentarios? Contáctenos en cualquier momento
 Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)
 Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
 Mon-Fri 9AM - 5PM (PST)

FOLLOW US @QFXUSA






QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

✉ support@qfxusa.com
☎ (800) 864-CLUB (2582) or (323) 864-6900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2022 ©



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your LMS-100 Journey!
Tag us **@QFXUSA** to share your stories.