



QFX

www.qfxusa.com



SBX-212W

User Manual for SBX-212W Portable Speaker

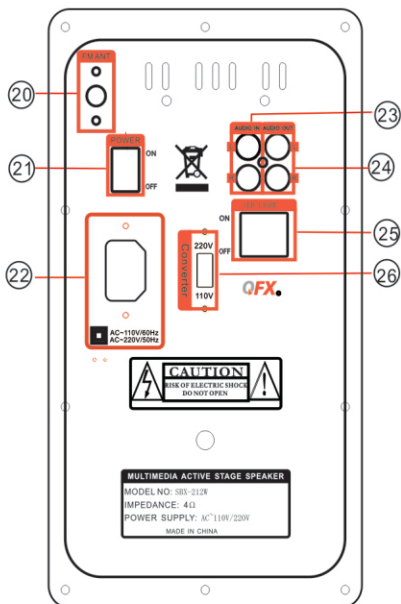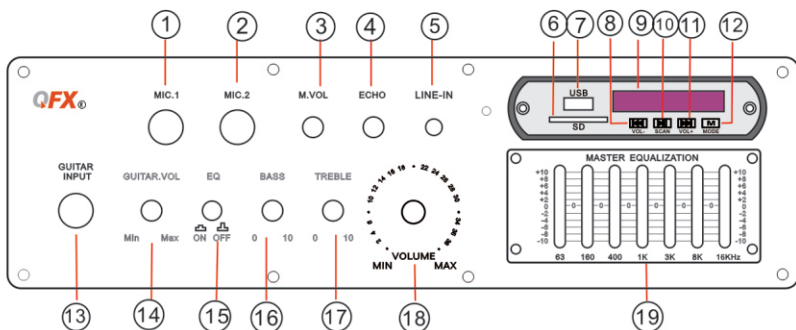

- 1.Mic 1 input jack
- 2.Mic 2 input jack
- 3.Mic volume control
- 4.Echo volume control
- 5.Line-in
6. SD input jack
- 7.USB input jack
- 8.Prev key/volume down
- 9.Led display
- 10.Play/pause
- 11.Next key/volume up
- 12.Mode key
- 13.Guitar input jck
- 14.Guitar volume control
- 15.EQ switch
- 16.Bass volume control
17. Treble volume control
18. Main volume control
- 19.Master equalization
- 20.FM antenna
- 21.Power switch
- 22.AC input
- 23.Audio in
- 24.Audio out
- 25.LED light
- 26.Converter



1. TOUCH SCREEN
2. HDTV JACK
3. VOLUME DOWN
4. PREVIOUS PAGE
5. HOME SCREEN BUTTON
6. WORKING APP
7. VOLUME UP
8. SD JACK
9. USB JACK

Features

- Plays MP3 Files stored in your SD Card, USB Disk Drive or External audio device
- FM Radio
- Bluetooth Function
- Line input
- Mic Jack, to connect Wired Microphone
- Guitar Jack, to connect Guitar and play through speaker
- With Infrared remote control for convenience.
- Built in FM Antenna
- LED LIGHT

Connecting Unit

- Connect one end to the unit and the plug end to socket
- Switch "on" power switch, back side of unit.

Volume Control

- Volume can be controlled from unit or remote control.
- Maximum volume on remote control will be to the level set on unit through rotary volume control.
- From the remote press VOL- for Down or Vol+ for up.
- When connected to your smartphone wirelessly, volume can be controlled from unit and your smartphone both.
- The sound output quality of the speakers will be depend on the quality of the MP3 files. Volume from remote will be equal to the level set manually through unit volume knob

Playing MP3 Files through the speaker using the SD card or the USB stick

- Use "MODE" Button on unit to switch among USB/SD/AUDIO IN/FM/Bluetooth function
- On Unit, USB or SD whichever is plugged later will play, plug in your USB Disk and/or SD Card in the slot provided. Please make sure you use the correct file format in your media devices-MP3 FILES ONLY. If your media files does not play, press the ► || (play/pause). Please ensure that your media is properly connected and that your files are MP3 format, or that the MODE button is on the correct source.
- Press ◀ to listen to the previous track and ▶ to skip to the next track from unit control panel or remote control.
- To Pause a track, press the button from the control panel or remote control. To remove pause, press button ▶ again.
- Please remember to turn off the power of the Speaker before removing the USB Disk or SD Card.

Using Line in

- Use "MODE" Button on unit main panel to select Line in.
- Use cable to connect your audio device, one end to audio device earphone jack and other end to unit Line Input.

Listening to the FM Radio from the Speaker

- Use "MODE" button on unit main panel to select FM
- From the unit control panel or from remote control, press ◀ ▶ to manually access the stations up and down.
- "Antenna" to be used for better reception of FM stations

Using Bluetooth function

- Use "MODE" button to select Bluetooth function, when Bluetooth function is on, there is a Di-Di sound u can hear.
- From your external device scan for " QFX SBX-212W", select this option and start pairing.
- Use your smartphone to change track.
- Volume can be controlled from your smartphone, main unit or unit remote control.

Using Recording Function

- Press "Rec"key on the remote control, then start to record by microphone.
- Press "Rec" key to play recording.

Using Microphone

- When using Microphone-plug your microphone into the microphone jack on unit main control the I panel.
- Use the MIC VOL knob to control the voice level of the microphone.
- Use the "ECHO" knob to control microphone echo

Using Guitar Jack

- When using Guitar-plug your guitar into the guitar into the guitar jack on the unit main control panel.
- Use the Guitar VOL knob to control the volume level of the Guitar.

LED LIGHT

- Switch on the back panel to turn on/off led light

1.Wifi basic specifications:

LCD	11.6" AU Screen
Pixel	1366 × RGB × 768 pixel
Display mode	16:9
Input voltage	DC10V—DC16V
Working current	800 Ma-1000Ma ±10%

2.Wifi hardware Specifications:

CPU	Rock Chip RK3128 Quad-Core Cortex-A7 Quad-Core GPU Mail-400
Basic Frequency	1.3 GHz
Memory	DDR3 1G
Built-in storage capacity	NAND FLASH 8GB/16GB (optional)
Touch screen	capacitive touch(multi-point touch)
Internet	with Wifi module, support wi-fi 802.11b/g/n protocol
Interface device	HDMI, 1080P output Two-in-one SD card with maximum support of 32GB USB L/R audio output(500-800MV)
Audio	MP3,WMA,WAV,and more formats
Video	Support the 1080P decoding of multiple video formats such as WMV,AVI,MPEG4, YouTube and other online video, up to 1080P, HTML5 video playback, Flash10.1 playback
Picture	Support JPG, BMP, PNG and other image formats browsing and support slide play/image magnification function

3.Wifi software Specification

Operating system	Android 5.1
Basic software function	Web browsing, chat, email, e-books, resource managers
Language support functional characteristics	multi-language support wifi display

4. Wifi Repeater operation

USB/SD Operation	Insert USB/SD, open the resource manager, and select play content
APK software installation	WIFI Download the installation or USB/SD installation
Language option	Setting - language and input method - multinational language selection
Virtual key	



Volume Previous page Home key Working APP Volume +

Wifi connecting	Setting - wifi - choose the corresponding internet equipment - enter password - connected
Time & date	Setting - select time zone, open Automatic date time & Automatic date zone
Karaoke operation:	Online and offline karaoke songs can be selected for original accompaniment
APK remove	Find the APP which u need to delete, long press it until there is remove on the top of screen, drag it to the remove
Music or video download	Download music APP - find the music which you need to download or download music from browser
Sleep mode (under long-term unused)	Setting - display - sleep - choose duration

5. Karaoke operation:

Online and offline karaoke songs can be selected for original accompaniment.

Online broadcast supports four ways to choose songs:

- ① Popular recommendation, which belongs to pop songs.
- ② In search, you can input the first letter of the singer or song name in the search bar to search for the song.
- ③ Singers light up songs and choose their favorite singers.
- ④ Classify songs and choose multinational songs.