

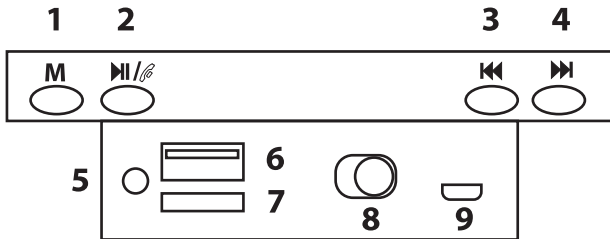 
BT-150

QFX

WHERE THE PARTY BEGINS



INSTRUCTION MANUAL

**BT-150**

1. M: Mode Selection. Press to select BT/USB/TF/FM/AUX
2. PLAY/PAUSE/PHONE LINK: Press to play or pause audio track. In FM mode press and hold down to begin auto scan. Press this button to answer the phone.
3. PREVIOUS: Press to select the previous audio track or FM station. Press and hold to decrease the volume.
4. NEXT: Press to select the next audio track or FM station. Press and hold to increase the volume.
5. AUX IN: Connect an external audio device using a 3.5mm TRS audio cable.
6. USB PORT: Insert a USB Flash drive to play .mp3 formatted audio.
7. TF Card: Insert a TF Card to play .mp3 formatted audio.
8. ON/OFF: Toggle the switch to power ON/OFF the unit.
9. Power Supply: DC 5V Micro USB.

BT-150

1. M: Selección de modo. Presione para seleccionar BT / USB / TF / FM / AUX
2. PLAY/PAUSE/PHONE LINK: presione para reproducir o pausar la pista de audio. En el modo FM, presione y mantenga presionado para comenzar la búsqueda automática. Presione este botón para contestar el teléfono.
3. ANTERIOR: presione para seleccionar la pista de audio o la estación de FM anterior. Mantenga pulsado para bajar el volumen.
4. NEXT: presione para seleccionar la siguiente pista de audio o estación de FM. Mantenga pulsado para subir el volumen.
5. AUX IN: conecte un dispositivo de audio externo con un cable de audio TRS de 3,5 mm.
6. PUERTO USB: Inserte una unidad flash USB para reproducir audio con formato .mp3.
7. Tarjeta TF: inserte una tarjeta TF para reproducir audio con formato .mp3.
8. ON / OFF: Mueva el interruptor para encender / apagar la unidad.
9. Fuente de alimentación: DC 5V Micro USB.

BT-150

1. M: Sélection du mode. Appuyez pour sélectionner BT / USB / TF / FM / AUX
2. PLAY/PAUSE/PHONE LINK: Appuyez pour lire ou mettre en pause la piste audio. En mode FM, maintenez la touche enfoncée pour lancer la recherche automatique. Appuyez sur ce bouton pour répondre au téléphone.
3. PREVIOUS: Appuyez pour sélectionner la piste audio ou la station FM précédente. Appuyez et maintenez pour diminuer le volume.
4. NEXT: Appuyez pour sélectionner la piste audio ou la station FM suivante. Appuyez et maintenez pour augmenter le volume.
5. AUX IN: connectez un périphérique audio externe à l'aide d'un câble audio TRS 3,5 mm.
6. USB PORT: Insérez une clé USB pour lire de l'audio au format .mp3.
7. TF Card: insérez une carte TF pour lire de l'audio au format .mp3.
8. ON / OFF: Basculez l'interrupteur pour allumer / éteindre l'appareil.
9. Alimentation: DC 5V Micro USB.

WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

BATTERY

The BT-150 is a lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (2~3 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is low, the unit will beep. Upon completion of the charging, please disconnect the unit. With standard usage, a fully charged battery can play for about 1-2 hours. Battery can be recharged about 300 times in its lifetime. When not in use, the speaker should always be set to "OFF" to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

ADVERTENCIA

PARA REDUCIR EL RIESGO DE DESCARGAS ELÉCTRICAS, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. CONSULTE TODO EL SERVICIO A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción. Limpiar solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando este símbolo aparezca en este manual de instrucciones y seguir todas las precauciones indicadas.

BATERÍA

El BT-150 es un altavoz de megafonía alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente está conectado a una fuente de alimentación, comenzará a cargarse automáticamente (2~3 horas para cargar completamente la batería de litio) Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la energía de la batería es baja, la unidad emitirá un sonido. Una vez completada la carga, desconecte la unidad. Con el uso estándar, una batería completamente cargada puede funcionar durante aproximadamente 1-2 horas. La batería se puede recargar unas 300 veces durante su vida útil. Cuando no esté en uso, el altavoz siempre debe estar en "APAGADO" para evitar que la unidad agote la batería. Cuando la unidad no se usa durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días.

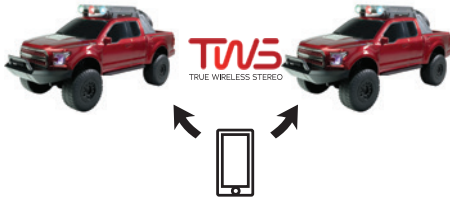 
AVERTISSEMENT

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, N'ENLEVEZ PAS LE COUVERCLE DE CET ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR. RÉFÉREZ TOUTES LES RÉPARATIONS À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, sources de chaleur telles que radiateurs, registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque ce symbole apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

BATTERIE

Le BT-150 est un haut-parleur de sonorisation alimenté par batterie au lithium. Assurez-vous que vous avez complètement chargé la batterie avant la première utilisation pour maximiser la durée de vie de la batterie. Une fois l'adaptateur secteur connecté à une source d'alimentation, il commencera automatiquement à se charger (2 à 3 heures pour charger complètement la batterie au lithium). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la puissance de la batterie est faible, l'appareil émet un bip. Une fois la charge terminée, veuillez déconnecter l'appareil. Avec une utilisation standard, une batterie complètement chargée peut fonctionner pendant environ 1 à 2 heures. La batterie peut être rechargée environ 300 fois au cours de sa durée de vie. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être réglé sur « OFF » pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perd progressivement de sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

**TWS CONNECTION**

TWS connection: TWS Connection is only for two speakers of the same make and model.

1. Enable Bluetooth mode on both units by pressing the “M” button.
2. Press and hold the “M” button on one of the units to sync them together (they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for QFX BT-150 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the “M” button.

CONNEXION TWS

Connexion TWS: La connexion TWS est uniquement pour deux enceintes de la même marque et du même modèle.

1. Active el modo Bluetooth en ambas unidades presionando el botón “M”.
2. Presione y mantenga presionado el botón “M” en una de las unidades para sincronizarlas juntas (deben ser de la misma marca y modelo para funcionar).
3. En su dispositivo móvil en el menú de Bluetooth, busque QFX BT-150 y conéctese.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, presione y mantenga presionado el botón “M”.

TWS CONNECTION

Conexión TWS: La conexión TWS es solo para dos altavoces de la misma marca y modelo.

1. Activez le mode Bluetooth sur les deux appareils en appuyant sur le bouton “M”.
2. Appuyez et maintenez le bouton “M” sur l'une des unités pour les synchroniser ensemble (ils doivent être de la même marque et du même modèle pour fonctionner).
3. Sur votre appareil mobile dans le menu Bluetooth, recherchez QFX BT-150 et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de True Wireless Stereo.
5. Pour quitter TWS, appuyez sur le bouton “M” et maintenez-le enfoncé.

BLUETOOTH

Bluetooth mode: use the MODE button to enable Bluetooth on the BT-150. Open the Bluetooth settings on your mobile device and search for QFX BT-150. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

BLUETOOTH

Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el BT-150. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX BT-150. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

BLUETOOTH

Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le BT-150. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX BT-150. Sélectionnez l'option pour coupler les deux appareils, Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

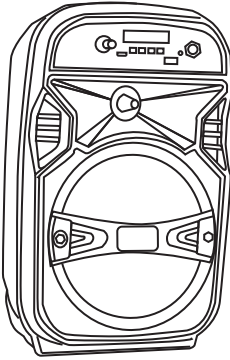 
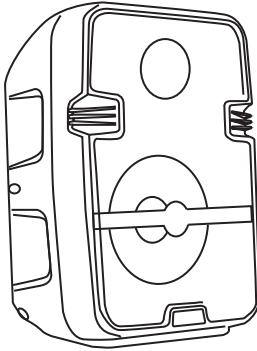 
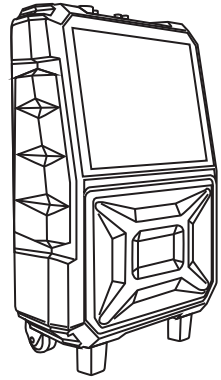 
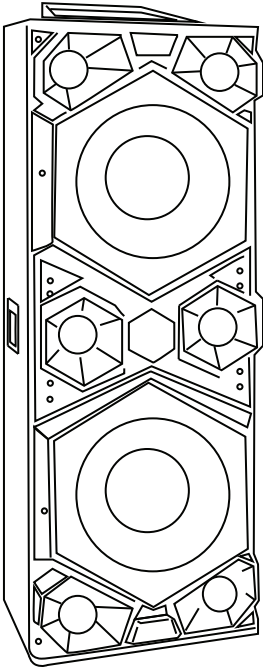 
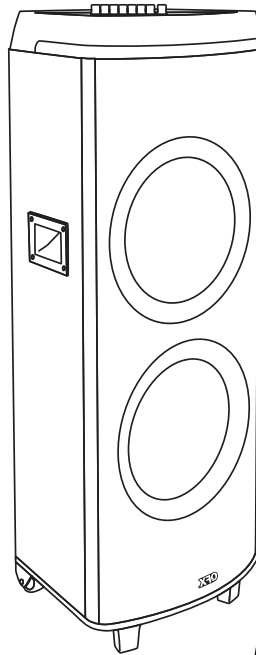 
Questions? Comments? Contact Us Anytime
Preguntas? Comentarios? Contáctenos en cualquier momento
Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

BT-65**BT-60****KAR-927****E-1500****LCS-120**

**CHECK OUT
THESE
OTHER
MODELS!**



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your BT-150 Journey!
Tag us **@QFXUSA** to share your stories.