

LMS-1245

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

FUNCTIONS:

1. **MODE:** Select between Bluetooth, FM or AUX/USB/TF modes.
2. **PREV/CH-:** Short press to select previous music track. Or short press to select previous radio channel.
3. **PLAY/SCAN:** Short press to play or pause music track. Or short press to auto scan and preset available radio frequencies. For TWS operation with a second LMS-1245 speaker, press and hold this button to pair both speakers at once. See additional TWS instructions below.
4. **NEXT/CH+:** Short press for next track. Or short press for next channel. Long press for mic priority (MIC.PRI) which will lower the music when you speak into the microphone.
5. **LED MODE:** Select to change the party light pattern.
6. **REC:** Select to record microphone to USB or TF card in MP3 format.
7. **VOLUME:** Master volume control knob
8. **POWER:** ON/OFF power switch
9. **LED POWER:** Switch to turn party lights ON or OFF
10. **BASS:** Bass level control knob
11. **TREBLE:** Treble level control knob
12. **MIC.ECHO:** Microphone echo control knob
13. **MIC.VOL:** Microphone volume level control knob
14. **LED DISPLAY:** LED display ON or OFF switch
15. **TF/USB:** TF/USB ports
16. **AUDIO INPUT:** 3.5mm AUX input jack
17. **DC 12V INPUT:** 12VDC power input
18. **MIC.INPUT:** 1/4" microphone input jack
19. **AC INPUT:** 110-220VAC 50/60Hz power input


1. MODO: seleccione entre los modos Bluetooth, FM o AUX/USB/TF.
2. PREV/CH-: presione brevemente para seleccionar la pista de música anterior. O presione brevemente para seleccionar el canal de radio anterior.
3. REPRODUCIR/ESCANEAR: presione brevemente para reproducir o pausar la pista de música. O presione brevemente para escanear automáticamente y preestablecer las frecuencias de radio disponibles. Para la operación TWS con un segundo altavoz LMS-1245, mantenga presionado este botón para emparejar ambos altavoces a la vez. Consulte las instrucciones adicionales de TWS a continuación.
4. SIGUIENTE/CH+: Presione brevemente para la siguiente pista. O presione brevemente para el siguiente canal. Mantenga presionado para la prioridad del micrófono (MIC.PRI) que bajará la música cuando hable por el micrófono.
5. MODO LED: Selección para cambiar el patrón de luces de fiesta.
6. REC: selección para grabar el micrófono en una tarjeta USB o TF en formato MP3.
7. VOLUMEN: perilla de control de volumen maestro
8. ENCENDIDO: interruptor de encendido/apagado
9. ENCENDIDO DEL LED: interruptor para encender o apagar las luces de fiesta
10. GRAVES: perilla de control de nivel de graves
11. AGUDOS: perilla de control de nivel de agudos
12. MIC.ECHO: perilla de control de eco del micrófono
13. MIC.VOL: perilla de control de nivel de volumen del micrófono


1. POWER/MASTER VOLUME : Tournez le bouton de volume pour allumer/éteindre l'appareil. Utilisez le même bouton pour augmenter/diminuer le volume global.
2. VOYANT DE CHARGE : Voyant de charge de la batterie.
3. PORT DE CHARGE : connectez le câble CA fourni pour recharger l'appareil (CA 110-240 V, 50/60 Hz)
4. NEXT/REC : Appuyez pour sélectionner la piste ou la chaîne FM suivante. Maintenez enfoncé pour commencer à enregistrer le signal du microphone. Appuyez à nouveau pour arrêter l'enregistrement. Les enregistrements seront sauvegardés sur la clé USB ou la carte TF.
5. PLAY/TWS : Appuyez pour lire ou mettre en pause la piste audio. En mode FM, appuyez pour balayer automatiquement les chaînes FM. Appuyez et maintenez pour la synchronisation TWS.
6. PREVIOUS/MIC PRI : Appuyez pour sélectionner la piste ou le canal FM précédent. Appuyez pour activer le mode de priorité du microphone sur la musique.
7. MODE/LED : Appuyez pour sélectionner la fonction Bluetooth, AUX/USB/TF ou FM. Maintenez enfoncé pour activer les lumières de fête Liquid Motion.
8. PORTS USB/TF : insérez une carte USB ou TF (avec contenu musical .mp3) pour la lecture de musique. Enregistrez le signal du microphone directement sur la carte USB ou TF.
9. AUX : Connectez un appareil audio externe à l'aide d'un câble audio TRS 3,5 mm.
10. MIC INPUT : connectez un microphone à l'aide d'un câble micro TRS 6,35 mm.
11. MIC VOL : Augmente/diminue le volume du micro.
12. MIC ECHO : ajoute de l'écho au signal du microphone
13. AFFICHAGE LED : Affiche la fonction actuelle.
14. TREBLE : amplifie les fréquences aiguës pour plus de clarté.
15. BASS : amplifie les basses fréquences pour un son plus riche.




14. PANTALLA LED: interruptor de ENCENDIDO o APAGADO de la pantalla LED
15. TF/USB: puertos TF/USB
16. ENTRADA DE AUDIO: conector de entrada AUX de 3,5 mm
17. ENTRADA DE 12 V CC: entrada de alimentación de 12 V CC
18. ENTRADA DE MICRÓFONO: toma de entrada de micrófono de 1/4"
19. ENTRADA DE CA: entrada de alimentación de 110-220 V CA 50/60 Hz

TRUE WIRELESS STEREO (TWS)

1  Turn both speakers ON.
Encienda ambos altavoces.
Allumez les deux haut-parleurs.

2  Press "MODE" on both speakers to enable BLUETOOTH.
Presione "MODE" en ambos parlantes para habilitar BLUETOOTH.
Appuyez sur "MODE" sur les deux enceintes pour activer BLUETOOTH.

3  On one speaker press and hold "TWS" for 3 seconds. You will hear a beep.
En un altavoz, mantenga presionado "TWS" durante 3 segundos. Escuchará un pitido.
Sur un haut-parleur, appuyez et maintenez "TWS" pendant 3 secondes. Vous entendrez un bip.

4  On your device, go to bluetooth and select QFX LMS-1245. Enjoy!
En su dispositivo, vaya a bluetooth y seleccione QFX LMS-1245. ¡Disfrutar!
Sur votre appareil, accédez à Bluetooth et sélectionnez QFX LMS-1245. Profitez!

Note: Next time you put both speakers in Bluetooth mode at the same time, speakers will connect automatically.

Nota: La próxima vez que ponga ambos altavoces en modo Bluetooth al mismo tiempo, los altavoces se conectarán automáticamente.

Remarque: la prochaine fois que vous mettez les deux haut-parleurs en mode Bluetooth en même temps, les haut-parleurs se connecteront automatiquement.

HOW TO USE FM RADIO:

1. Use the "MODE" button to enable FM mode.
2. In FM mode press the "PLAY/PAUSE/TWS" button to automatically search and store FM Channels.
3. Press next or previous button to change the saved FM Channel.

1. Presione el botón "MODE" para habilitar el modo FM.
2. En el modo FM, presione el botón "PLAY/PAUSE/TWS" para buscar y almacenar automáticamente el canal FM.
3. Presione el botón siguiente o anterior para cambiar el canal FM guardado.

1. Appuyez sur le bouton "MODE" pour activer le mode FM.
2. En mode FM, appuyez sur le bouton « PLAY/PAUSE/TWS » pour rechercher et mémoriser automatiquement la chaîne FM.
3. Appuyez sur le bouton suivant ou précédent pour changer le canal FM enregistré

BLUETOOTH:

Use the MODE button to enable Bluetooth on the LMS-1245. Open the Bluetooth settings on your mobile device and search for QFX LMS-1245. Select the option to pair both devices together. You can now sit back and enjoy the music from your favorite app. You won't need reconnect the Bluetooth again when switching through modes.

Use el botón MODE para habilitar Bluetooth en el LMS-1245. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX LMS-1245 Selección la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

Utilisez le bouton MODE pour activer Bluetooth sur le LMS-1245. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX LMS-1245. Sélectionnez l'option pour coupler les deux appareils ensemble. Vous pouvez maintenant vous asseoir et profiter de la musique de vot.

CHARGING THE SPEAKER


The LMS-1245 can be operated on AC power or from its internal rechargeable battery. Use the supplied charging cable to charge the speaker (8-12 hours to fully recharge). When using the unit while connected to AC power, be sure that the battery switch is switched ON. Fully charge the speaker on the same day that the battery power runs out. Waiting an extended period before recharging may affect the performance of the battery.

CARGA DEL ALTAVOZ

El LMS-1245 puede funcionar con alimentación de CA o con su batería interna recargable. Utilice el cable de carga suministrado para cargar el altavoz (entre 8 y 12 horas para recargarlo por completo). Cuando utilice la unidad mientras está conectada a la alimentación de CA, asegúrese de que el interruptor de la batería esté encendido. Cargue completamente el altavoz el mismo día en que se agote la batería. Esperar un período prolongado antes de recargar puede afectar el rendimiento de la batería.

CHARGER LE HAUT-PARLEUR

Le LMS-1245 peut fonctionner sur secteur ou sur sa batterie interne rechargeable. Utilisez le câble de charge fourni pour charger le haut-parleur (8 à 12 heures pour une recharge complète). Lorsque vous utilisez l'appareil alors qu'il est connecté à l'alimentation secteur, assurez-vous que le coupe-batterie est sur ON. Chargez complètement le haut-parleur le jour même où la batterie est épuisée. Attendre une période prolongée avant de recharger peut affecter les performances de la batterie.

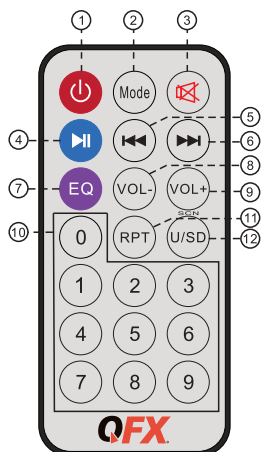

1. POWER: Press to turn power ON/OFF
2. MODE: Press to select Bluetooth, FM or AUX/USB/TF input modes
3. MUTE: Select to mute the volume
4. **▶||**: Press to play or pause music track
5. **◀◀**: Press to select previous music track or radio station
6. **▶▶**: Press to select next music track or radio station
7. EQ: Press to choose equalizer preset
8. VOL-: Press to decrease volume
9. VOL+: Press to increase volume
10. Number: Number keypad buttons
11. RPT: Press to repeat or shuffle music playback
12. U/SD: Press to select USB or SD card music

1. ENCENDIDO: Presione para encender/apagar
2. MODO: presione para seleccionar los modos de entrada Bluetooth, FM o AUX/USB/TF
3. MUTE: Seleccione para silenciar el volumen
4. **▶||** : Presione para reproducir o pausar la pista de música
5. **◀◀**: Presione para seleccionar la pista de música o la estación de radio anterior
6. **▶▶**: Presione para seleccionar la siguiente pista de música o estación de radio
7. EQ: presione para elegir el preajuste del ecualizador
8. VOL-: presione para disminuir el volumen
9. VOL+: presione para aumentar el volumen
10. Número: Botones del teclado numérico
11. RPT: presione para repetir o reproducir música aleatoriamente
12. U/SD: Presione para seleccionar USB o música de la tarjeta SD

1. ALIMENTATION : Appuyez pour allumer/éteindre
2. MODE : Appuyez pour sélectionner les modes d'entrée Bluetooth, FM ou AUX/USB/TF
3. MUTE : Sélectionnez pour couper le volume
4. **▶||** : Appuyez pour lire ou mettre en pause la piste musicale
5. **◀◀**: Appuyez pour sélectionner la piste musicale ou la station de radio précédente
6. **▶▶**: Appuyez pour sélectionner la piste musicale ou la station de radio suivante
7. EQ : Appuyez pour choisir le pré-réglage de l'égaliseur
8. VOL- : Appuyez pour diminuer le volume
9. VOL+ : Appuyez pour augmenter le volume
10. Numéro : touches du clavier numérique
11. RPT : Appuyez pour répéter ou mélanger la lecture de musique
12. U/SD : Appuyez pour sélectionner la musique USB ou carte SD

THANK YOU

QFX Where the Party Begins!

We would love to hear about your LMS-1245 journey!
Tag us [@QFXUSA](https://www.instagram.com/QFXUSA) to share your stories.

FOLLOW US [@QFXUSA](https://www.instagram.com/QFXUSA)





LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.



FOLLOW US @QFXUSA



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)

support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year



THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.



Copyright Protected 2022 ©





www.qfxusa.com

 <p>THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.</p>	<table border="1"> <tr> <th>CAUTION</th> </tr> <tr> <td>RISK OF ELECTRIC SHOCK. DO NOT OPEN.</td> </tr> </table> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	CAUTION	RISK OF ELECTRIC SHOCK. DO NOT OPEN.	 <p>THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.</p>
CAUTION				
RISK OF ELECTRIC SHOCK. DO NOT OPEN.				

1. Do not install this equipment in a confined area. Keep in well ventilated openings free of newspapers, table-cloths, curtains, etc.
2. WARNING: To reduce risk of fire or electric shock, do not expose this unit to rain or liquids.
3. WARNING: The internal or external batteries shall not be exposed to excessive heat such as fire and hot, direct sunlight. No flame sources, such as lighted candles, should be placed on the apparatus.
4. WARNING: The detachable power cord is for charging. Once fully charged, the unit will operate on internal rechargeable batteries.
5. Used, depleted batteries can be hazardous and should be discarded in a safe and environmentally sound manner.

 <p>L'ÉCLAIR ET LA POINTE DE FLECHE À L'INTERIEUR DU TRIANGLE SONT UN SIGNE D'AVERTISSEMENT VOUS AVERTISSANT D'UNE "TENSION DANGEREUSE" À L'INTERIEUR DU PRODUIT.</p>	<table border="1"> <tr> <th>CAUTION</th> </tr> <tr> <td>RISQUE DE CHOC ELECTRIQUE.</td> </tr> </table> <p>ATTENTION : POUR RÉDUIRE LE RISQUE DE CHOC ELECTRIQUE, NE PAS RETIRER LE COUVERCLE (OU L'ARRIÈRE), AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTERIEUR. RÉFÉREZ L'ENTRETIEN AU PERSONNEL D'ENTRETIEN QUALIFIÉ.</p>	CAUTION	RISQUE DE CHOC ELECTRIQUE.	 <p>LE POINT D'EXCLAMATION DANS LE TRIANGLE EST UN SIGNE D'AVERTISSEMENT VOUS AVERTISSANT DES INSTRUCTIONS IMPORTANTES ACCOMPAGNANT LE PRODUIT.</p>
CAUTION				
RISQUE DE CHOC ELECTRIQUE.				

1. N'installez pas cet équipement dans une zone confinée. Conserver dans des ouvertures bien ventilées sans journaux, nappes, rideaux, etc.
2. AVERTISSEMENT : Pour réduire les risques d'incendie ou d'électrocution, n'exposez pas cet appareil à la pluie ou à des liquides.
3. AVERTISSEMENT : Les batteries internes ou externes ne doivent pas être exposées à une chaleur excessive telle que le feu et la lumière directe du soleil. Aucune source de flamme, telle que des bougies allumées, ne doit être placée sur l'appareil.
4. AVERTISSEMENT : Le cordon d'alimentation amovible est destiné à la charge. Une fois complètement chargé, l'appareil fonctionnera sur des batteries internes rechargeables.
5. Les piles usagées et déchargées peuvent être dangereuses et doivent être jetées de manière sûre et respectueuse de l'environnement.

 <p>EL RELAMPAGO Y LA PUNTA DE FLECHA DENTRO DEL TRIÁNGULO SON UNA SEÑAL DE ADVERTENCIA QUE LE ALERTA DE "TENSION PELIGROSA" DENTRO DEL PRODUCTO.</p>	<table border="1"> <tr> <th>CAUTION</th> </tr> <tr> <td>RISK OF ELECTRIC SHOCK. DO NOT OPEN.</td> </tr> </table> <p>PRECAUCIÓN: PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite LA CUBIERTA (O LA PARTE POSTERIOR), NO HAY PIEZAS REPARABLES POR EL USUARIO EN EL INTERIOR. REMITIR EL SERVICIO A PERSONAL DE SERVICIO CALIFICADO.</p>	CAUTION	RISK OF ELECTRIC SHOCK. DO NOT OPEN.	 <p>EL SIGNO DE EXCLAMACIÓN DENTRO DEL TRIÁNGULO ES UNA SEÑAL DE ADVERTENCIA QUE LE ALERTA SOBRE INSTRUCCIONES IMPORTANTES QUE ACOMPAÑAN AL PRODUCTO.</p>
CAUTION				
RISK OF ELECTRIC SHOCK. DO NOT OPEN.				

1. No instale este equipo en un área confinada. Manténgase en lugares bien ventilados libres de periódicos, manteles, cortinas, etc.
2. ADVERTENCIA: Para reducir el riesgo de incendio o descarga eléctrica, no exponga esta unidad a la lluvia ni a líquidos.
3. ADVERTENCIA: Las baterías internas o externas no deben exponerse a un calor excesivo, como el fuego y la luz solar directa y caliente. No se deben colocar fuentes de llamas, como velas encendidas, sobre el aparato.
4. ADVERTENCIA: El cable de alimentación desmontable es para cargar. Una vez cargada por completo, la unidad funcionará con baterías internas recargables.
5. Las baterías usadas y agotadas pueden ser peligrosas y deben desecharse de manera segura y respetuosa con el medio ambiente.