



 
www.qfxusa.com

Follow Us



LMS-210

User Manual for the LMS-210 Portable Speaker

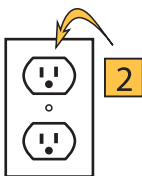

6 - STEP SETUP GUIDE

Step 1 Find the AC power cord to the LMS-210 and plug it into the back panel.


Step 2 Find a power outlet (AC 120V/60Hz) and connect the AC cord to the socket to supply the unit with power.

Step 3 Move to the top of part of the panel and press the POWER INPUT button. The unit should turn on and begin charging.

Step 4 Insert a USB flash drive in the USB port located below the big knob. The PBX-311 will automatically begin playing the .mp3 content.

Step 5 Use the Big Knob to adjust the Master Volume to your taste. Press the Big Knob to enter sub menus such as EQ, Mic Vol, Guitar VOL, Echo, etc.

Step 6 Press the Next and Prev keys to move to the next track or previous track. If in FM mode, these keys will change radio station.

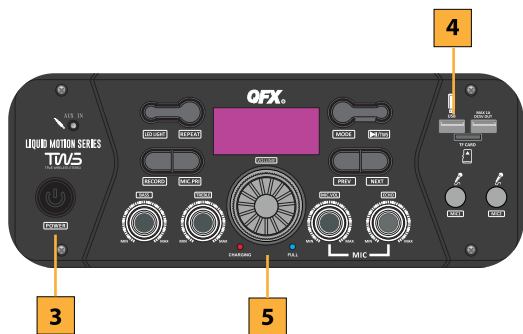

LMS-210 BLUETOOTH

Bluetooth Mode: Use the MODE button to enable Bluetooth on the LMS-210. Open the Bluetooth settings on your mobile device and search for QFX LMS-210. Select the option to pair both devices together. You can now sit back and enjoy the music from your favorite app. You won't need reconnect the Bluetooth again when switching through modes.

LMS-210 FM RADIO:

FM Radio: Frequency-Modulated stations operate in a frequency band extending from 87.8 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press and hold the Play/Pause button to scan available frequencies in the area. Extend the telescoping antenna to enhance reception.

LMS-210 TWS CONNECTION:

TWS Wireless Bluetooth Connection: Enable Bluetooth mode on both speakers. Press the **TWS** button on one of the speakers to sync both units (they must be the same make and model to function). On your mobile device under the Bluetooth menu, search for LMS-210 and connect. Open your favorite music app and enjoy True Wireless Stereo. To Exit TWS press and hold the **TWS** button.

LMS-210 RECORDING

Insert a USB/TF card in the slot. Connect the microphone to the LMS-210. Press and hold the "RECORD" button to start recording. Press the "RECORD" again to playback the recorded file. Press again to exit the recording function.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. These safety and operating instructions should be kept in condition of consultation.



- 1. Electric Power Supply Line:** Keep the power cord safe from being trampled on, pressed on by heavy objects, or pierced. Make sure that the cord has ample space to rest on the ground and is not stressed. **DO NOT** pull or drag or the power supply line.
- 2. Ventilation:** This unit must be set in a ventilated space. **DO NOT** cover the vents on the back panel for any reason. If placed alongside a wall, distance the unit a minimum of 10cm to allow air flow. **DO NOT** surface that might restricted good air flow.
- 3. Dismantling:** **DO NOT** dismantle or open the unit. This is a high-powered unit that can cause serious harm if tampered with. **DO NOT** Open.
- 4. Smoke:** Please unplug the power supplies cord from the wall outlet immediately if unusual smoke appears and contact customer support

Questions? Comments? Contact Us Anytime
Preguntas? Comentarios? Contáctenos en cualquier momento
Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth.












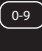 
Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.


LMS-210 BATTERY

The LMS-210 is a aluminum Iron Phosphate battery powered PA loudspeaker.

Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power cable is connected to a power source, it will automatically begin charging (4~5hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light will shine red. When battery is fully charged, the battery indicator light will shine blue. Once the unit is fully charged, please disconnect the cable. With standard usage, a fully charged battery can play for about 2~3 hours. Battery can be recharged about 300 times in its lifetime. When not in use, the speaker should always be turned OFF to prevent the unit from draining its battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.



-  1. MUTE: Mute the track
-  2. Input Mode Button: Toggle between USB, TF, FM, AUX, BT
-  3. REC: Start recording
-  4. REC PLAY: Playing the recording file
-  5. PLAY/PAUSE (Press to Scan Channel in FM Mode)
-  6. Previous Track: Select pervious channel
-  7. Next Track: Select next channel.
-  8. VOL-: Decrease the master volume
-  9. VOL+: Increase the master volume
-  10. REP: Repeat the playing track.
-  11. EQ: Select EQ mode.
-  12. KEY Number for selecting the certain track for USB flash drive or TF card.

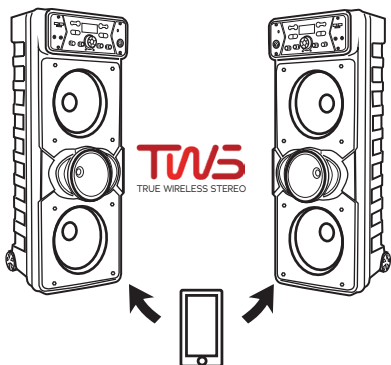


TWS CONNECTION

TWS connection: TWS Connection is only for two speakers of the same make and model.

1. Enable Bluetooth mode on both speakers using the MODE button.
2. Press the **▶|| TWS** button on one of the speakers to sync both units together (they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for LMS-210 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the **TWS** button.



BASIC OPERATION

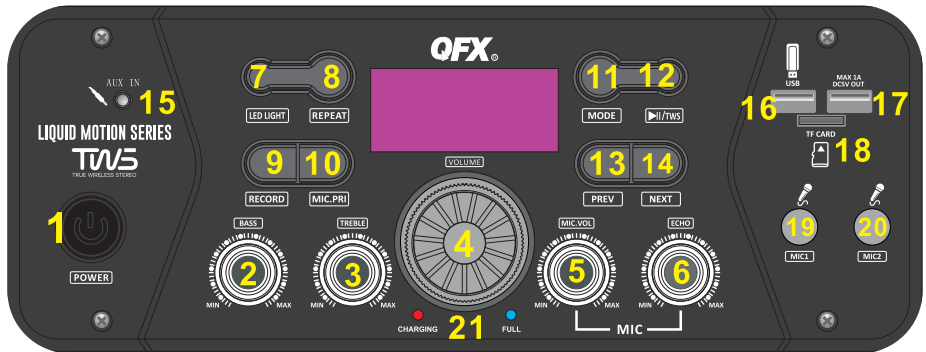

- | | |
|---|--|
| <ol style="list-style-type: none"> 1. Power: Press to turn ON/OFF the unit. 2. Bass: Boost the Bass EQ 3. Treble: Boost the Treble EQ 4. Volume: Adjust the Master volume level. 5. MIC. VOL : Adjust the Microphone volume. 6. ECHO: Adjust the amount of Echo effect. 7. LED Light: Press to turn ON/OFF LED Lights. 8. REPEAT: Press to repeat one, all, or shuffle tracks. 9. Record: Press to record Microphone audio. 10. MIC.PRI: Press to prioritize the mic over the music. 11. MODE: Toggle between Modes: AUX, USB, TF, FM, BT function | <ol style="list-style-type: none"> 12. Play/Pause/TWS: Play or Pause current track. TWS sync button. 13. Prev: Select previous track or FM station. 14. Next: Select next track or FM station. 15. AUX IN: Insert a 3.5mm (TRS) cable from an external audio device. 16. USB Port: Insert a USB with .mp3 content for playback. 17. USB Slot: DC 5V 1A output. charge mobile device. 18. TF Card Port: Insert a TF Card with .mp3 for playback content. 19. Mic 1: Insert a 6.35mm (TS/TRS) Mic cable. 20. Mic 2: Insert a 6.35mm (TS/TRS) Mic cable. 21. Charging Light: Indicates charging status. |
|---|--|





LMS-210 DISPLAY

Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX /FM. When a USB flash drive/TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.

1. AC POWER INPUT

Model No: LMS-210
 FCC ID: OGGTQ1314
 AC Power: 100-240Hz 60/50Hz

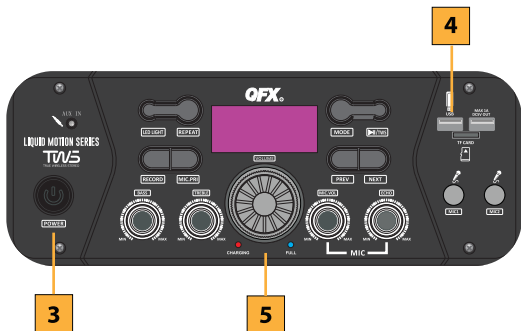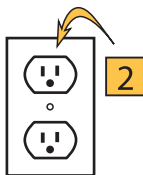

6 - GUÍA DE CONFIGURACIÓN DE PASOS

Paso **1** Busque el cable de alimentación de CA al LMS-210 y conéctelo al panel posterior.

Paso **2** Busque una toma de corriente (CA 120V / 60Hz) y conecte el cable de CA al enchufe para suministrar energía a la unidad.

Paso **3** Vaya a la parte superior de parte del panel y presione el botón POWER INPUT. La unidad debe encenderse y comenzar a cargarse.

Paso **4** Inserte una unidad flash USB en el puerto USB ubicado debajo de la perilla grande. El LMS-210 automáticamente comenzará a reproducir el contenido .mp3.

Paso **5** Utilice el mando grande para ajustar el volumen principal a su gusto. Presione el botón grande para ingresar a los submenús como EQ, Mic Vol, Guitar VOL, Echo, etc.

Paso **6** Pulse las teclas de avance y retroceso para pasar a la siguiente pista o pista anterior. Si está en modo FM, estas teclas cambiarán la estación de radio.

LMS-210 BLUETOOTH

Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el LMS-210. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX LMS-210. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

RADIO FM LMS-210:

Radio FM: Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87,8 MHz a 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, mantenga presionado el botón Reproducir / Pausa para buscar las frecuencias disponibles en el área. Extienda la antena telescópica para mejorar la recepción.

CONEXIÓN LMS-210 TWS:

Conexión inalámbrica Bluetooth TWS: habilite el modo Bluetooth en ambos altavoces. Presione el botón TWS en uno de los altavoces para sincronizar ambas unidades (deben ser de la misma marca y modelo para funcionar). En su dispositivo móvil en el menú de Bluetooth, busque LMS-210 y conéctese. Abra su aplicación de música favorita y disfrute de True Wireless Stereo. Para salir de TWS, mantenga presionado el botón TWS.

GRABACIÓN LMS-210

Inserte una tarjeta USB / TF en la ranura. Conecte el micrófono al LMS-210. Mantenga presionado el botón "RECORD" para comenzar a grabar. Presione "RECORD" nuevamente para reproducir el archivo grabado. Presione nuevamente para salir de la función de grabación.

MEDIDAS DE SEGURIDAD IMPORTANTES

Antes de utilizar esta máquina, lea todas las instrucciones de seguridad y funcionamiento. Esta seguridad y las instrucciones de funcionamiento deben mantenerse en condiciones de consulta.



1. **Línea de suministro de energía eléctrica:** Mantenga el cable de alimentación a salvo de ser pisoteado, presionado por objetos pesados o perforado. Asegúrese de que el cable tenga suficiente espacio para descansar en el suelo y no está estresado. NO tire ni arrastre de la línea de alimentación.
2. **Ventilación:** esta unidad debe instalarse en un espacio ventilado. NO cubra las rejillas de ventilación del panel posterior por alguna razón. Si se coloca junto a una pared, separe la unidad un mínimo de 10 cm para permitir que el aire fluya. NO coloque superficies que puedan restringir el buen flujo de aire.
3. **Desmontaje:** NO desmonte ni abra la unidad. Esta es una unidad de alta potencia que puede causar daño grave si se manipula. No abra.
4. **Humo:** desenchufe el cable de alimentación del toma de corriente inmediatamente si aparece humo inusual y póngase en contacto con el servicio de atención al cliente.

⚡ ¡ADVERTENCIA! ⚡

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.












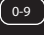 
Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.


BATERÍA LMS-210

El LMS-210 es un altavoz PA alimentado por batería de fosfato de hierro de aluminio.

Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el cable de alimentación está conectado a una fuente de alimentación, comenzará a cargarse automáticamente (4 ~ 5 horas para cargar completamente la batería) Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería se iluminará en rojo. Cuando la batería está completamente cargada, la luz indicadora de la batería se iluminará en azul. Una vez que la unidad esté completamente cargada, desconecte el cable. Con el uso estándar, una batería completamente cargada puede funcionar durante aproximadamente 2 ~ 3 horas. La batería se puede recargar unas 300 veces durante su vida útil. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá gradualmente su carga. Se recomienda cargar completamente la batería al menos cada 60 días.




-  1. Mute: silencia la pista
-  2. Botón de modo de entrada: alternar entre USB, TF, FM, AUX, BT
-  3. REC: Iniciar la grabación
-  4. REC PLAY: Reproducción del archivo de grabación
-  5. REPRODUCIR / PAUSAR (presione para buscar canales en modo FM)
-  6. Pista anterior: seleccione el canal anterior
-  7. Siguiente pista: seleccione el siguiente canal.
-  8. VOL-: Disminuye el volumen maestro.
-  9. VOL +: aumenta el volumen principal
-  10. REP: Repite la pista en reproducción.
-  11. EQ: seleccione el modo EQ.
-  12. CLAVE Número para seleccionar la pista determinada para unidad flash USB o tarjeta TF.

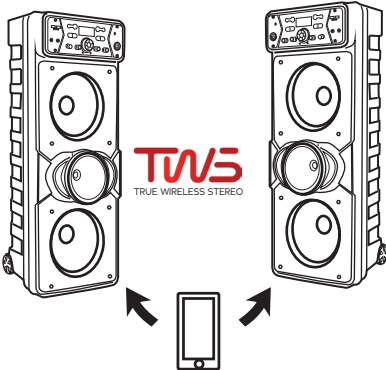

TWS CONNECTION

TWS connection: TWS Connection is only for two speakers of the same make and model.

1. Enable Bluetooth mode on both speakers using the MODE button.
2. Press the **TWS** button on one of the speakers to sync both units together (they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for LMS-210 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the **TWS** button.

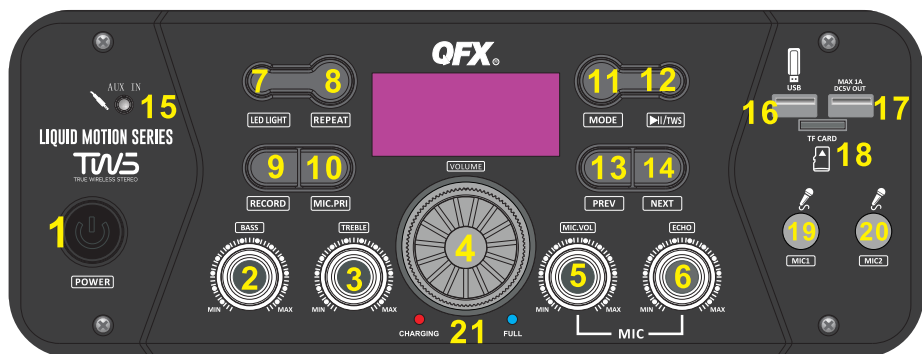

- | | |
|--|---|
| <ol style="list-style-type: none"> 1. Encendido: presione para encender / apagar la unidad. 2. Graves: aumenta el ecualizador de graves 3. Treble: aumenta el ecualizador de agudos 4. Volumen: ajusta el nivel de volumen principal. 5. MIC. VOL: ajusta el volumen del micrófono. 6. ECHO: ajusta la cantidad de efecto de eco. 7. Luz LED: presione para encender / apagar las luces LED. 8. REPETIR: presione para repetir una, todas o mezclar pistas. 9. Grabar: presione para grabar el audio del micrófono. 10. MIC.PRI: presione para priorizar el micrófono sobre la música. 11. MODO: alternar entre modos: función AUX, USB, TF, FM, BT | <ol style="list-style-type: none"> 12. Reproducir / Pausa / TWS: reproduce o pausa la pista actual. Botón de sincronización TWS. 13. Anterior: seleccione la pista anterior o la estación de FM. 14. Siguiete: seleccione la siguiente pista o estación de FM. 15. AUX IN: Inserte un cable de 3,5 mm (TRS) desde un dispositivo de audio externo. 16. Puerto USB: Inserte un USB con contenido .mp3 para su reproducción. 17. Ranura USB: salida DC 5V 1A. cargar dispositivo móvil. 18. Puerto de tarjeta TF: inserte una tarjeta TF con .mp3 para reproducir contenido. 19. Micrófono 1: Inserte un cable de micrófono de 6,35 mm (TS / TRS). 20. Micrófono 2: Inserte un cable de micrófono de 6,35 mm (TS / TRS). 21. Luz de carga: indica el estado de carga. |
|--|---|

 
 


LMS-210 DISPLAY

Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX /FM. When a USB flash drive/TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.

1. AC POWER INPUT

Model No: LMS-210
 FCC ID: OGGTQ1314
 AC Power: 100-240Hz 60/50Hz

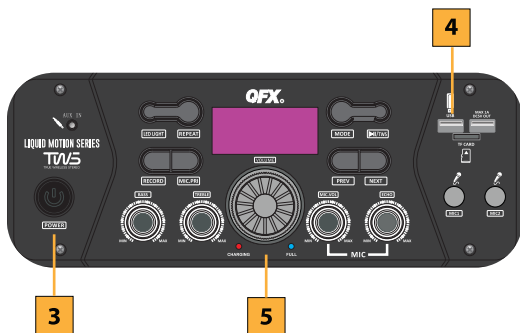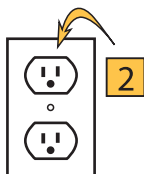

6 - GUIDE DE CONFIGURATION DES ÉTAPES

Étape **1** Trouvez le cordon d'alimentation secteur du LMS-210 et branchez-le sur le panneau arrière.

Étape **2** Trouvez une prise de courant (120 V CA / 60 Hz) et branchez le cordon d'alimentation CA à la prise pour alimenter l'unité.

Étape **3** Déplacez-vous vers le haut d'une partie du panneau et appuyez sur le bouton POWER INPUT. L'unité doit s'allumer et commencer à se charger.

Étape **4** Insérez une clé USB dans le port USB situé sous le gros bouton. Le LMS-210 commencera automatiquement la lecture du contenu .mp3.

Étape **5** Utilisez le gros bouton pour régler le volume principal à votre goût. Appuyez sur le gros bouton pour accéder aux sous-menus tels que EQ, Mic Vol, Guitar VOL, Echo, etc.

Étape **6** Appuyez sur les touches Avance et Retour pour passer à la piste suivante ou à la piste précédente. En mode FM, ces touches changeront la fonction radio.

LMS-210 BLUETOOTH

Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le LMS-210. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX LMS-210. Sélectionnez l'option pour coupler les deux appareils ensemble. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter le Bluetooth lors du passage d'un mode à l'autre.

RADIO FM LMS-210:

Radio FM: Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87,8 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, maintenez le bouton Lecture / Pause enfoncé pour balayer les fréquences disponibles dans la zone. Déployez l'antenne télescopique pour améliorer la réception.

CONNEXION LMS-210 TWS:

Connexion Bluetooth sans fil TWS: activez le mode Bluetooth sur les deux enceintes. Appuyez sur le bouton TWS de l'une des enceintes pour synchroniser les deux unités (elles doivent être de la même marque et du même modèle pour fonctionner). Sur votre appareil mobile dans le menu Bluetooth, recherchez LMS-210 et connectez-vous. Ouvrez votre application musicale préférée et profitez de True Wireless Stereo. Pour quitter TWS, maintenez le bouton TWS enfoncé.

ENREGISTREMENT LMS-210

Insérez une carte USB / TF dans la fente. Connectez le microphone au LMS-210. Appuyez et maintenez le bouton «RECORD» pour démarrer l'enregistrement. Appuyez à nouveau sur «RECORD» pour lire le fichier enregistré. Appuyez à nouveau pour quitter la fonction d'enregistrement.

MESURES DE SÉCURITÉ IMPORTANTES

Avant d'utiliser cette machine, veuillez lire toutes les instructions de sécurité et d'utilisation. Ces sécurité et les instructions d'utilisation doivent être conservées en état de consultation.



1. **Ligne d'alimentation électrique:** évitez que le cordon d'alimentation ne soit piétiné, pressé par des objets lourds ou percé. Assurez-vous que le cordon a suffisamment d'espace pour reposer sur le sol et n'est pas stressé. NE PAS tirer ni faire glisser ni la ligne d'alimentation.
2. **Ventilation:** Cet appareil doit être installé dans un espace ventilé. NE PAS couvrir les événements du panneau arrière pour quelque raison que ce soit. S'il est placé le long d'un mur, éloignez l'unité d'au moins 10 cm pour permettre la circulation de l'air. NE PAS faire de surface qui pourrait restreindre une bonne circulation d'air.
3. **Démontage:** NE PAS démonter ni ouvrir l'unité. Il s'agit d'une unité de haute puissance qui peut causer de graves dommages si elle est altérée. Ne pas ouvrir.
4. **Fumée:** débranchez immédiatement le cordon d'alimentation de la prise murale si de la fumée inhabituelle apparaît et contactez le service client.

**ATTENTION**


POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ


 






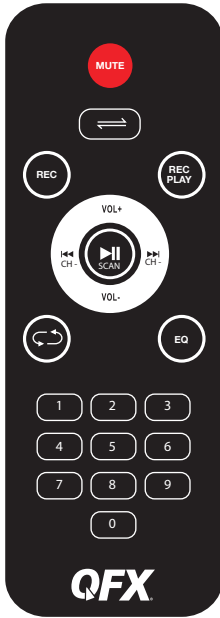


 
Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.


Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole Avertissement ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

BATTERIE LMS-210

Le LMS-210 est un haut-parleur PA alimenté par batterie en aluminium phosphate de fer. Assurez-vous que vous avez complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que le câble d'alimentation est connecté à une source d'alimentation, il commencera automatiquement à se charger (4 à 5 heures pour charger complètement la batterie) Même si la batterie est faible, il s'allumera lorsqu'il est connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie s'allume en rouge. Lorsque la batterie est complètement chargée, le voyant de la batterie s'allume en bleu. Une fois l'appareil complètement chargé, veuillez déconnecter le câble. Avec une utilisation standard, une batterie complètement chargée peut fonctionner pendant environ 2 à 3 heures. La batterie peut être rechargée environ 300 fois au cours de sa vie. Lorsqu'elle n'est pas utilisée, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge sa batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.




-  1. Mute: coupe la piste
-  2. Bouton de mode d'entrée: basculer entre USB, TF, FM, AUX,
- BT
-  3. REC: démarrer l'enregistrement
-  4. REC PLAY: lecture du fichier d'enregistrement
-  5. PLAY / PAUSE (Appuyez pour balayer la chaîne en mode FM)
-  6. Piste précédente: sélectionnez le canal précédent
-  7. Piste suivante: sélectionnez la chaîne suivante.
-  8. VOL-: Diminue le volume principal
-  9. VOL +: augmenter le volume principal
-  10. REP: Répète la piste en cours de lecture.
-  11. EQ: Sélectionnez le mode EQ.
-  12. KEY Numéro pour sélectionner la certaine piste pour clé USB ou carte TF.

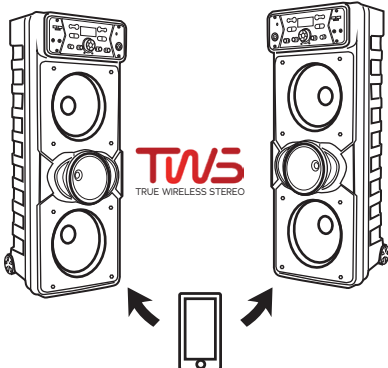

TWS CONNECTION

TWS connection: TWS Connection is only for two speakers of the same make and model.

1. Enable Bluetooth mode on both speakers using the MODE button.
2. Press the **TWS** button on one of the speakers to sync both units together (they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for LMS-210 and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the **TWS** button.

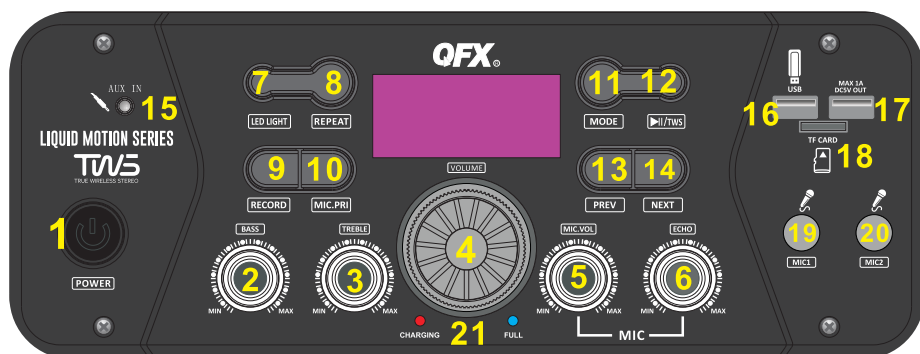

1. Alimentation: Appuyez pour allumer / éteindre l'unité.
2. Bass: Augmente l'égalisation des basses
3. Treble: booste l'égalisation des aigus
4. Volume: réglez le niveau de volume principal.
5. MIC. VOL: Réglez le volume du microphone.
6. ECHO: Ajustez la quantité d'effet d'écho.
7. Lumière LED: Appuyez pour allumer / éteindre les lumières LED.
8. REPEAT: Appuyez pour répéter une, toutes ou des pistes aléatoires.
9. Enregistrer: Appuyez pour enregistrer le son du microphone.
10. MIC.PRI: Appuyez pour donner la priorité au micro sur la musique.
11. MODE: Basculer entre les modes: AUX, USB, TF, FM, fonction BT
12. Lecture / Pause / TWS: lecture ou pause de la piste actuelle. Bouton de synchronisation TWS.
13. Prev: Sélectionnez la piste ou la station FM précédente.
14. Suivant: sélectionnez la piste ou la station FM suivante.
15. AUX IN: Insérez un câble de 3,5 mm (TRS) à partir d'un périphérique audio externe.
16. Port USB: insérez une clé USB avec du contenu .mp3 pour la lecture.
17. Fente USB: sortie DC 5V 1A. charger l'appareil mobile.
18. Port de la carte TF: insérez une carte TF avec .mp3 pour le contenu de lecture.
19. Micro 1: insérez un câble micro de 6,35 mm (TS / TRS).



LMS-210 DISPLAY

Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX /FM. When a USB flash drive/TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.

1. AC POWER INPUT

Model No: LMS-210
 FCC ID: OGGTQ1314
 AC Power: 100-240Hz 60/50Hz

<p>1</p> <p>2</p> <p>3</p> <p>4</p>	<p>1. Diaphragm: Speak Into the Diaphragm to transmit your voice to the LMS-210</p> <p>2. ON/MUTE/OFF Switch: Activate the microphone, mute, or turn OFF the mic using the switch.</p> <p>3. Battery Compartment: Twist to open and install 2 x AA batteries (batteries not included)</p> <p>4. Transmitter: Keep the transmitter pointed at the LMS-210 and cleared from obstacles for the best reception.</p>	<p>1. Diafragma: hable en el diafragma para transmitir su voz al LMS-210</p> <p>2. Interruptor ON / MUTE / OFF: active el micrófono, silencio o apague el micrófono usando el interruptor.</p> <p>3. Compartimento de la batería: gire para abrir e instalar 2 pilas AA (pilas no incluidas)</p> <p>4. Transmisor: Mantenga el transmisor apuntando al LMS-210 y despejado de obstáculos para una mejor recepción</p>	<p>1. Diaphragme: Parlez dans le diaphragme pour transmettre votre voix au LMS-210</p> <p>2. Commutateur ON / MUTE / OFF: permet d'activer le microphone, de couper le son ou d'éteindre le micro à l'aide du commutateur.</p> <p>3. Compartiment à piles: tournez pour ouvrir et installer 2 piles AA (piles non incluses)</p> <p>4. Émetteur: gardez l'émetteur pointé vers le LMS-210 et dégagé des obstacles pour une meilleure réception.</p>
---	---	---	--

<p>1. For battery installation, twist the battery compartment to the Left to open.</p> <p>1. Para la instalación de la batería, gire el compartimiento de la batería hacia la izquierda para abrirlo.</p> <p>1. Pour l'installation de la batterie, tournez le compartiment de la batterie vers la gauche pour l'ouvrir.</p>	<p>2. Install 2xAA batteries and make sure the +/- are installed correctly. Follow the printed symbols on the mic.</p> <p>2. Instale baterías 2xAA y asegúrese de que +/- estén instaladas correctamente. Siga los símbolos impresos en el micrófono.</p> <p>2. Installez 2 piles AA et assurez-vous que les +/- sont correctement installés. Suivez les symboles imprimés sur le micro</p>	<p>3. After installing the battery, close the compartment by turning it clockwise.</p> <p>3. Después de la instalación de la batería, cierre el compartimento girando hacia la derecha.</p> <p>3. Après avoir installé la batterie, fermez le compartiment en le tournant dans le sens des aiguilles d'une montre.</p>
---	--	---

Battery: 2xAA , 1.5V

* Please remove the batteries if its not being used for a long period of time to prevent damage.
 * Retire las baterías si no las va a utilizar durante un período prolongado para evitar daños.
 * Veuillez retirer les piles si elles ne sont pas utilisées pendant une longue période pour éviter tout dommage.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



www.qfxusa.com