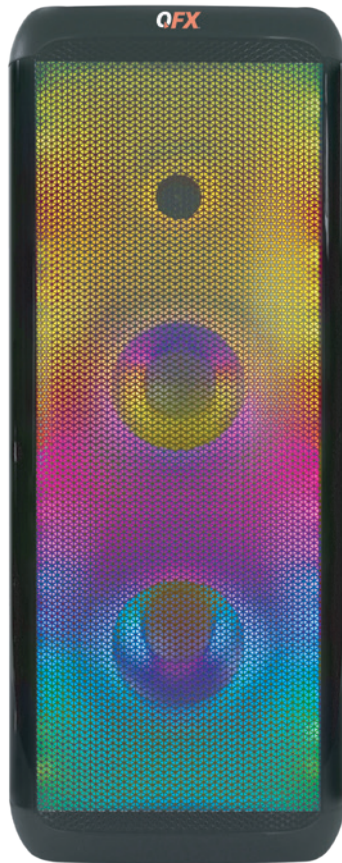 


LMS-28

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth.

Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.

Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

**ATTENTION**

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.

Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

Questions? Comments? Contact Us Anytime
Preguntas? Comentarios? Contáctenos en cualquier momento
Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)

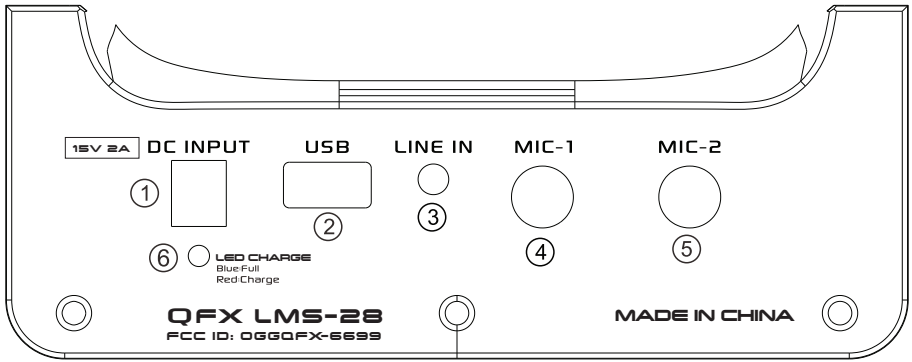 


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

Follow Us



QFXUSA.COM

BACK PANEL

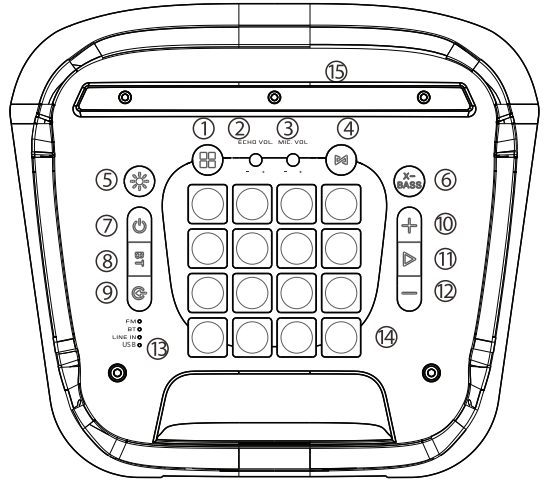 
1. DC Input: Charge the unit using the provided power adapter (15V, 2A).
2. USB Input: Insert a USB with .mp3 content for playback.
3. AUX Input: Insert a 3.5mm TRS form an external audio device.
4. Mic 1: Insert a 6.35mm TRS microphone cable for use.
5. Mic 2: Insert a 6.35mm TRS microphone cable for use.
6. LED Charge: Charging light indicator. Red = charging, Blue = full charge

1. Entrada de CC: cargue la unidad con el adaptador de corriente provisto (15 V, 2 A).
2. Entrada USB: inserte un USB con contenido .mp3 para su reproducción.
3. Entrada AUX: Inserte un TRS de 3,5 mm desde un dispositivo de audio externo.
4. Micrófono 1: inserte un cable de micrófono TRS de 6,35 mm para su uso.
5. Micrófono 2: Inserte un cable de micrófono TRS de 6,35 mm para su uso.
6. Carga LED: indicador de luz de carga. Rojo = cargando, Azul = carga completa

1. Entrée CC: Chargez l'unité à l'aide de l'adaptateur secteur fourni (15 V, 2 A).
2. Entrée USB: insérez une clé USB avec un contenu .mp3 pour la lecture.
3. Entrée AUX: insérez un TRS de 3,5 mm à partir d'un périphérique audio externe.
4. Mic 1: Insérez un câble de microphone TRS 6,35 mm pour utilisation.
5. Mic 2: Insérez un câble de microphone TRS 6,35 mm pour utilisation.
6. Charge LED: Indicateur lumineux de charge. Rouge = charge, bleu = charge complète

TOP PANEL FUNCTIONS

1. SFX Bank Select: Select from 4 SFX banks. Each bank contains 16 sounds.
2. Echo Vol: Microphone echo volume.
3. Mic Vol: Adjust the Microphone Volume.
4. TWS: Press for TWS Pairing with another LMS-28.
5. LED: Toggle through the LED Light presets.
6. X-Bass: Press to boost the bass frequencies.
7. Power: Press to turn the unit ON/OFF.
8. BT: Press and hold for Bluetooth mode
9. Mode Select: Toggle through different modes USB/AUX/BT/FM
10. +: Press and hold to increase the volume: USB/BT Mode = Next song FM Radio Mode = Next Station to increase sound on mode USB/BT/AUX/FM/64 sound effects.
11. Play/Stop/Scan: In USB/BT Mode press to play/stop the track. In FM Radio Mode press and hold to scan local FM channel automatically.
12. -: Press and hold to decrease the volume: USB/BT Mode = Previous song FM Radio Mode = Previous Station
13. LED Indicator: Indicates the current Mode.
14. Trigger Pads: Press to playback a SFX.
15. Dock: Prop up a fitting tablet.



TROUBLESHOOTING

FAULT	POSSIBLE CAUSE	SOLUTION
No sound	<ol style="list-style-type: none"> 1. No input sound source 2. Volume is too low 	<ol style="list-style-type: none"> 1. Use a better music signal 2. Adjust the volume
Distortion	<ol style="list-style-type: none"> 1. Volume is too high 2. Speaker may be damaged 	<ol style="list-style-type: none"> 1. Turn down the volume 2. If the speaker is damaged, repair or replace it.
Karaoke does not work	<ol style="list-style-type: none"> 1. The microphone plug is not fully inserted. 2. The microphone switch is not ON 3. The microphone volume knob is at its lowest position 	<ol style="list-style-type: none"> 1. Plug microphone properly into the socket. 2. Turn ON the microphone switch 3. Adjust the microphone volume
MP3s do not play	<ol style="list-style-type: none"> 1. The song format in the USB is incorrect. 2. USB format is wrong 	<ol style="list-style-type: none"> 1. Convert file to .mp3 2. Reformat USB

CHARGING THE SPEAKER

When the battery is losing power a "low battery" voice will prompt.

Connect the power adapter to recharge.

Charging time is approximately 4-6 hours.

Once fully charged, the battery light indicator will change to Blue.

Unplug the adapter after a full charge otherwise the battery may get damaged. Turn OFF the unit

to save charge.

WARNING



1. DO NOT place objects on top of the device, as objects may scratch the device.



5. DO NOT use the device in the rain.



2. DO NOT expose the device to dirty or dusty environments.



6. Please check with your local authority or retailer for proper disposal of electronic products



3. DO NOT insert any foreign objects into the device.



7. DO NOT disassemble the device. Only a certified service technician should perform repair.



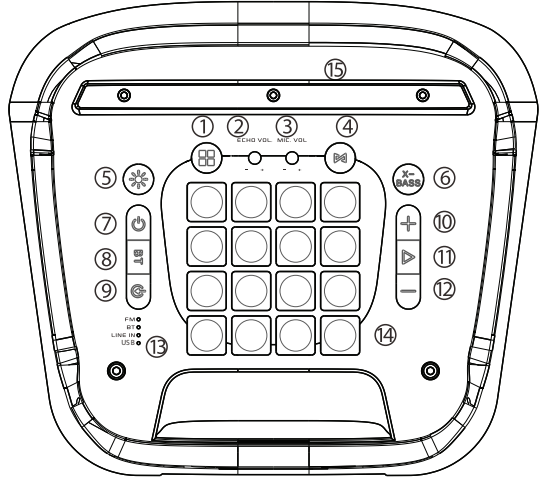 
4. DO NOT expose the device to strong magnetic or electrical field



8. The device has apertures to disperse heat. DO NOT block the device ventilation; the device may become hot and malfunction as a result.

FUNCIONES DEL PANEL SUPERIOR

1. Selección de banco SFX: seleccione entre 4 bancos SFX. Cada banco contiene 16 sonidos.
2. Echo Vol: Volumen de eco del micrófono.
3. Mic Vol: ajusta el volumen del micrófono.
4. TWS: presione para emparejar TWS con otro LMS-28.
5. LED: alterna entre los ajustes preestablecidos de luz LED.
6. X-Bass: presione para aumentar las frecuencias graves.
7. Encendido: presione para encender/apagar la unidad.
8. BT: presione y mantenga presionado para el modo Bluetooth
9. Selección de modo: alternar entre diferentes modos USB/AUX/BT/FM
10. +: Mantenga presionado para aumentar el volumen: Modo USB/BT = Siguiente canción
Modo de radio FM = Siguiente estación para aumentar el sonido en el modo USB/BT/AUX/FM/64 efectos de sonido.
11. Reproducir /Detener /Escanear: En modo USB/BT presione para reproducir / detener la pista. En el modo de radio FM, mantenga pulsado para buscar automáticamente el canal FM local.
12. -: Mantenga presionado para disminuir el volumen: Modo USB/BT = Canción anterior
Modo de radio FM = emisora anterior
13. Indicador LED: Indica el modo actual.
14. Trigger Pads: presione para reproducir un SFX.
15. Muelle: Levante una tableta de ajuste.



SOLUCIÓN DE PROBLEMAS

FAULT	POSSIBLE CAUSE	SOLUTION
No hay sonido	1. No hay conexión 2. Volume muy bajo	1. Busque mejor señal 2. Ajuste el Volume
Distortion	1. Volume muy fuerte 2. Altavoz esta danado	1. Bajar el volume 2. Cambiar el cono
Karaoke no funciona	1. No esta enchufado bien 2. No esta encendido el Microfono 3. El volume del microfono esta abajo	1. Enchufe bien el microfono 2. encienda el microfono 3.ajuste el volume del microfono
MP3s no toca	1. Mp3 formato esta mal 2. Formato equivocado	1. Convierte a .mp3 2. Formato de USB

WARNING

CARGANDO EL ALTAVOZ

Cuando la batería está perdiendo energía, se indicará una voz de "batería baja". Conecta el adaptador de corriente para recargar. El tiempo de carga es de aproximadamente 4-6 horas. Una vez que esté completamente cargada, el indicador de luz de la batería cambiará a azul. Desenchufe el adaptador después de una carga completa, de lo contrario, la batería podría dañarse. Apague la unidad para ahorrar carga.



1. NO coloque objetos en la parte superior del dispositivo, ya que los objetos pueden rayar el dispositivo.



5. NO use el dispositivo en la lluvia.



2. NO exponga el dispositivo a entornos sucios o polvorientos.



6. Consulte con su local autoridad o minorista para eliminación de productos electrónicos



3. NO inserte ninguna objetos en el dispositivo.



7. DO NOT disassemble the device Only a certified service technician should perform repair.



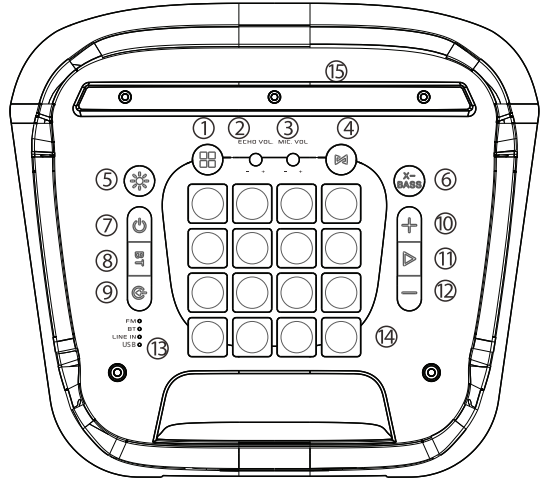 
4. NO exponga el dispositivo a fuerte magnético o eléctrico campo



8. El dispositivo tiene aberturas para Dispersar el calor. No bloquee la ventilación del dispositivo, el dispositivo puede calentarse y funcionar mal como resultado

FONCTIONS DU PANNEAU SUPÉRIEUR

1. SFX Bank Select: Sélectionnez parmi 4 banques SFX. Chaque banque contient 16 sons.
2. Echo Vol: Volume d'écho du microphone.
3. Mic Vol: ajustez le volume du microphone.
4. TWS: Appuyez sur pour le couplage TWS avec un autre LMS-28.
5. LED: bascule entre les préreglages LED Light.
6. X-Bass: Appuyez pour amplifier les basses fréquences.
7. Alimentation: Appuyez pour allumer / éteindre l'appareil.
8. BT: Appuyez et maintenez pour le mode Bluetooth
9. Sélection du mode: basculez entre les différents modes USB/AUX/BT/FM
10. +: Appuyez et maintenez pour augmenter le volume: Mode USB/BT = chanson suivante
Mode Radio FM = Station suivante pour augmenter le son sur les effets sonores en mode USB/BT/AUX/FM/G4.
11. Lecture/Arrêt/Balayage: En mode USB/BT, appuyez pour lire/arrêter la piste.
En mode Radio FM, maintenez la touche enfoncée pour balayer automatiquement la chaîne FM locale.
12. -: Appuyez et maintenez pour diminuer le volume: Mode USB/BT = chanson précédente
Mode Radio FM = Station précédente
13. Indicateur LED: indique le mode actuel.
14. Trigger Pads: Appuyez pour lire un SFX.
15. Station d'accueil: installez une tablette adaptée.



DÉPANNAGE

FAULT	POSSIBLE CAUSE	SOLUTION
Pas de son	1. Aucune source sonore d'entrée 2. Le volume est trop bas	1. Utilisez un meilleur signal musical 2. Réglez le volume
Distorsion	1. Le volume est trop élevé 2. Le haut-parleur est peut-être endommagé	1. Baissez le volume 2. Si le haut-parleur est endommagé, le réparer ou le remplacer.
Le karaoké fait ne marche pas	1. La fiche du microphone es pas complètement inséré. 2. Le commutateur de microphone n'est pas allumé 3. Le volume du microphone le potard est à son plus bas positionner	1. Branchez correctement le microphone dans la prise. 2. Allumez le microphone changer 3. Ajustez le microphone le volume
Les MP3 ne sont pas lus	1. Le format de la chanson sur l'USB est incorrect. 2. Le format USB est incorrect	1. Convertissez le fichier en .mp3 2. Reformatez l'USB

WARNING

CHARGER L'ENCEINTE

Lorsque la batterie perd de la puissance, une voix «batterie faible» s'affiche. Connectez le adaptateur secteur pour recharger. Le temps de charge est d'environ 4 à 6 heures.

Une fois complètement chargé, le voyant lumineux de la batterie passera au bleu. Débranchez le adaptateur après une charge complète, sinon la batterie peut être endommagée. Éteignez l'appareil pour économiser la charge.



1. NE placez PAS d'objets sur le dessus de l'appareil, car les objets peuvent rayer le dispositif



5. N'UTILISEZ PAS l'appareil dans la pluie.



2. NE PAS exposer l'appareil aux environnements sales ou poussiéreux.



6. Veuillez vérifier avec votre local autorité ou détaillant pour une élimination des produits électroniques



3. N'insérez AUCUN objets dans l'appareil..



7. NE démontez PAS l'appareil Seul un technicien de service certifié devrait effectuer la réparation.



4. N'exposez PAS l'appareil à fort magnétique ou électrique domaine



8. L'appareil a des ouvertures pour disperser la chaleur. Ne pas bloquer la ventilation de l'appareil, l'appareil peut devenir chaud et dysfonctionner par conséquent

**TWS CONNECTION**

TWS connection: TWS Connection is only for two speakers of the same make and model.

1. Turn on both speakers and put them in Bluetooth Mode
2. Press the TWS button on one speaker until you will hear a sound. When both speakers make a sound you have made a successful connection.
3. Search and connect to 'LMS-28' on your phone's Bluetooth settings
4. Open your favorite music app and enjoy True Wireless Stereo.

**TWS CONNECTION**

Conexión TWS: La conexión TWS es solo para dos altavoces de la misma marca y modelo.

1. Enciende ambos altavoces y ponlos en modo Bluetooth.
2. Presione el botón TWS en un altavoz hasta que escuche un sonido. Cuando ambos altavoces emitan un sonido, habrá realizado una conexión correcta.
3. Busque y conéctese a "LMS-28" en la configuración de Bluetooth de su teléfono
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.

**CONNEXION TWS**

Connexion TWS: La connexion TWS est uniquement pour deux enceintes de la même marque et du même modèle.

1. Allumez les deux haut-parleurs et mettez-les en mode Bluetooth
2. Appuyez sur le bouton TWS d'un haut-parleur jusqu'à ce que vous entendiez un son. Lorsque les deux enceintes émettent un son, vous avez établi une connexion réussie.
3. Recherchez et connectez-vous à «LMS-28» dans les paramètres Bluetooth de votre téléphone.
4. Ouvrez votre application musicale préférée et profitez de True Wireless Stereo.

Follow Us

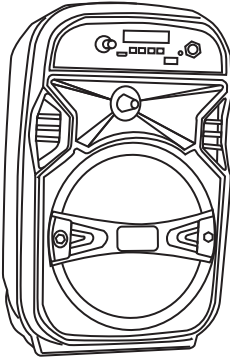 
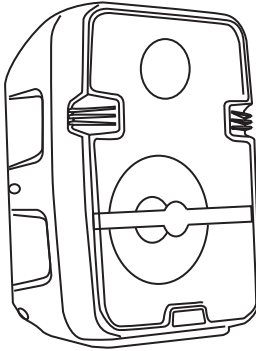 
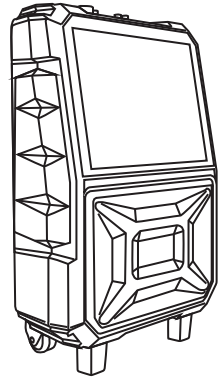 
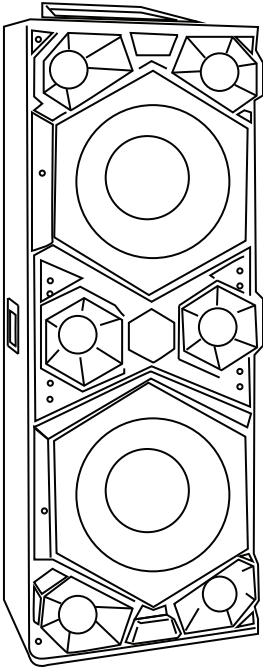 
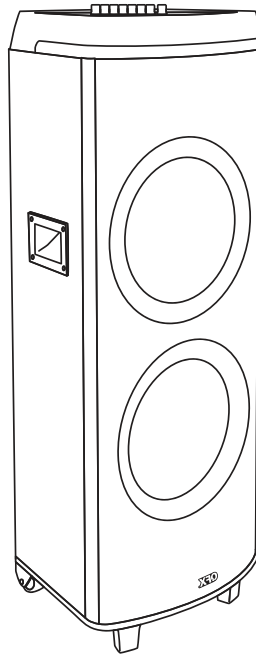 


QFXUSA.COM

**REMEMBER TO FOLLOW US ON SOCIAL
MEDIA FOR NEW RELEASES, SHOW
VIDEOS, PICTURES AND
INSTRUCTIONAL VIDEOS**



WHERE THE PARTY BEGINS

BT-60**BT-65****KAR-927****E-1500****LCS-120**

**IF YOU
ENJOY
YOUR
LMS-28
CHECK OUT
THESE
OTHER
MODELS!**



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your LMS-28 Journey!
Tag us **@QFXUSA** to share your stories.

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your LMS-28 Journey!
Tag us **@QFXUSA** to share your stories.