


LMS-60

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

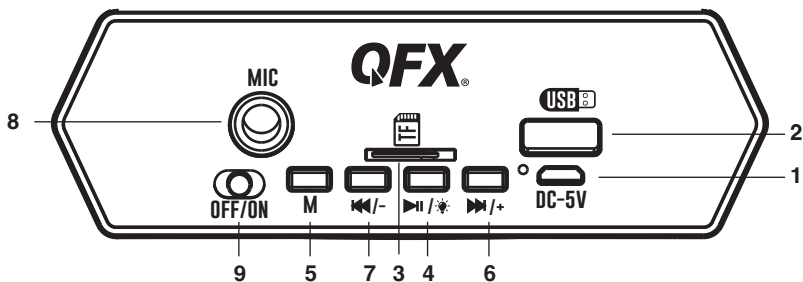

FUNCTIONS:

1. **DC-5V:** USB charging port (DC-5V / 1A minimum)
2. **USB:** Play MP3 music files stored on USB drives
3. **TF:** Play MP3 music files stored on TF cards
4. **▶||/⏸:** In USB/TF/Bluetooth modes, short-press for play or pause. Press and hold to change the RGB party light mode. In FM mode, short-press to select station or press and hold for automatic radio station search.
5. **M:** Mode button to change sources (Bluetooth, USB/TF, FM radio)
6. **▶▶:** In FM/USB/TF/Bluetooth modes, short-press to move to next channel/track. Press and hold to increase the volume.
7. **◀◀:** Under FM/USB/TF/Bluetooth mode, short-press to move to previous channel/track. Press and hold to decrease the volume.
8. **MIC:** ¼" microphone input
9. **ON/OFF:** Power switch

FUNCIONES:

1. **DC-5V:** Puerto de carga USB (DC-5V / 1A mínimo)
2. **USB:** Reproduce archivos de música MP3 almacenados en unidades USB
3. **TF:** reproduce archivos de música MP3 almacenados en tarjetas TF
4. **▶||/⏸:** En los modos USB/TF/Bluetooth, presione brevemente para reproducir o pausar. Mantenga presionado para cambiar el modo de luz de fiesta RGB. En el modo FM, presione brevemente para seleccionar la estación o presione y mantenga presionado para la búsqueda automática de estaciones de radio.
5. **M:** Botón de modo para cambiar de fuente (Bluetooth, USB/TF, radio FM)
6. **▶▶:** En los modos FM/USB/TF/Bluetooth, presione brevemente para pasar al siguiente canal/pista. Mantenga presionado para aumentar el volumen.
7. **◀◀:** En el modo FM/USB/TF/Bluetooth, presione brevemente para pasar al canal/pista anterior. Mantenga presionado para disminuir el volumen.
8. **MIC:** Entrada de micrófono de ¼"
9. **EN/APAGADO:** interruptor de encendido

LES FONCTIONS:

1. **DC-5V :** Port de charge USB (DC-5V / 1A minimum)
2. **USB :** Lecture de fichiers musicaux MP3 stockés sur des clés USB
3. **TF :** Lecture de fichiers musicaux MP3 stockés sur des cartes TF
4. **▶||/⏸:** En modes USB/TF/Bluetooth, appuyez brièvement pour lire ou mettre en pause. Maintenez enfoncé pour changer le mode d'éclairage de fête RVB. En mode FM, appuyez brièvement pour sélectionner la station ou appuyez et maintenez pour la recherche automatique de la station de radio.
5. **M :** Bouton de mode pour changer de source (Bluetooth, USB/TF, radio FM)
6. **▶▶ :** En modes FM/USB/TF/Bluetooth, appuyez brièvement pour passer à la chaîne/piste suivante. Maintenez enfoncé pour augmenter le volume.
7. **◀◀ :** En mode FM/USB/TF/Bluetooth, appuyez brièvement pour passer à la chaîne/piste précédente. Maintenez enfoncé pour diminuer le volume.
8. **MIC :** entrée micro ¼"
9. **MARCHE/ARRÊT :** interrupteur d'alimentation

BLUETOOTH

Turn your Bluetooth-enabled device on. Turn on the speaker and it will start up in Bluetooth mode. Pair the speaker to "QFX LMS-60". After pairing, you can play the music from your device. Short-press **▶||** to Play/Pause, press **◀◀** and **▶▶** to go to the previous or next track. Press and hold **▶▶** or **◀◀** to turn the speaker volume up or down.

TRUE WIRELESS STEREO (TWS)

In order to use True Wireless Stereo (TWS), you must own two LMS-60 speakers. To do so, turn the power on both LMS-60 speakers. Establish a Bluetooth connection on both speakers by searching "QFX LMS-60" in the list of Bluetooth devices. Then on only one of the speakers, press the M (Mode) button for a few seconds and then the two speakers will auto-connect in TWS mode. You can now play your favorite music over Bluetooth in True Wireless Stereo.

USB/TF CARD

Insert the USB or TF card into the USB/TF slot. It will automatically start to play the MP3 music files stored on either the USB drive or TF card. Short-press **▶||** to Play/Pause, press **◀◀** and **▶▶** to go to the previous or next track. Press and hold **▶▶** or **◀◀** to turn the speaker volume up or down.

FM RADIO

Press the M (Mode) button to change to FM radio mode. Then press the **▶||** button to search FM channels automatically. This operation will scan all FM stations and save them to memory. The scan procedure will take several minutes to complete and should not be interrupted. Once complete, short-press **◀◀** or **▶▶** to move forward or backward stations. Press and hold **▶▶** or **◀◀** to turn the speaker volume up or down.

CHARGING

Plug the USB cable into the USB charging port on the speaker and then connect the USB connector to a DC 5V / 1A minimum power source. The charging LED will be a red color while charging and then turn off once fully charged.

BLUETOOTH

Encienda su dispositivo habilitado para Bluetooth. Encienda el altavoz y se iniciará en modo Bluetooth. Empareje el altavoz con "QFX LMS-60". Después del emparejamiento, puede reproducir la música desde su dispositivo. Presione brevemente para Reproducir/Pausar, presione y para ir a la pista anterior o siguiente. Mantenga presionado o para subir o bajar el volumen del altavoz.

VERDADERO ESTÉREO INALÁMBRICO (TWS)

Para usar True Wireless Stereo (TWS), debe tener dos altavoces LMS-60. Para hacerlo, encienda ambos altavoces LMS-60. Establezca una conexión Bluetooth en ambos altavoces buscando "QFX LMS-60" en la lista de dispositivos Bluetooth. Luego, en solo uno de los altavoces, presione el botón M (Modo) durante unos segundos y luego los dos altavoces se conectarán automáticamente en modo TWS. Ahora puede reproducir su música favorita a través de Bluetooth en True Wireless Stereo.

TARJETA USB/TF

Inserte la tarjeta USB o TF en la ranura USB/TF. Comenzará automáticamente a reproducir los archivos de música MP3 almacenados en la unidad USB o en la tarjeta TF. Presione brevemente para Reproducir/Pausar, presione y para ir a la pista anterior o siguiente. Mantenga presionado o para subir o bajar el volumen del altavoz.

RADIO FM

Presione el botón M (Modo) para cambiar al modo de radio FM. Luego presione el botón para buscar canales FM automáticamente. Esta operación escaneará todas las estaciones de FM y las guardará en la memoria. El procedimiento de escaneo tardará varios minutos en completarse y no debe interrumpirse. Una vez completado, presione brevemente o para avanzar o retroceder estaciones. Mantenga presionado o para subir o bajar el volumen del altavoz.

CARGANDO

Enchufe el cable USB en el puerto de carga USB del altavoz y luego conecte el conector USB a una fuente de alimentación mínima de CC de 5 V/1 A. El LED de carga será de color rojo durante la carga y luego se apagará una vez que esté completamente cargado.

BLUETOOTH

Allumez votre appareil compatible Bluetooth. Allumez le haut-parleur et il démarrera en mode Bluetooth. Associez le haut-parleur à "QFX LMS-60". Après le jumelage, vous pouvez écouter la musique de votre appareil. Appuyez brièvement sur Lecture/Pause, appuyez sur et pour passer à la piste précédente ou suivante. Appuyez longuement sur ou pour augmenter ou diminuer le volume du haut-parleur.

VÉRITABLE STÉRÉO SANS FIL (TWS)

Pour utiliser True Wireless Stereo (TWS), vous devez posséder deux haut-parleurs LMS-60. Pour ce faire, mettez sous tension les deux enceintes LMS-60. Établissez une connexion Bluetooth sur les deux enceintes en recherchant « QFX LMS-60 » dans la liste des appareils Bluetooth. Ensuite, sur un seul des haut-parleurs, appuyez sur le bouton M (Mode) pendant quelques secondes, puis les deux haut-parleurs se connecteront automatiquement en mode TWS. Vous pouvez désormais écouter votre musique préférée via Bluetooth en True Wireless Stereo.

CARTE USB/TF

Insérez la carte USB ou TF dans la fente USB/TF. Il commencera automatiquement à lire les fichiers musicaux MP3 stockés sur la clé USB ou la carte TF. Appuyez brièvement sur Lecture/Pause, appuyez sur et pour passer à la piste précédente ou suivante. Appuyez longuement sur ou pour augmenter ou diminuer le volume du haut-parleur.

RADIO FM

Appuyez sur le bouton M (Mode) pour passer en mode radio FM. Appuyez ensuite sur le bouton pour rechercher automatiquement les chaînes FM. Cette opération balayera toutes les stations FM et les enregistrera dans la mémoire. La procédure de numérisation prendra plusieurs minutes et ne doit pas être interrompue. Une fois terminé, appuyez brièvement sur ou pour avancer ou reculer les stations. Appuyez longuement sur ou pour augmenter ou diminuer le volume du haut-parleur.

MISE EN CHARGE

Branchez le câble USB dans le port de chargement USB de l'enceinte, puis connectez le connecteur USB à une source d'alimentation CC 5V / 1A minimum. La LED de charge sera de couleur rouge pendant la charge, puis s'éteindra une fois complètement chargée.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.





This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 864-6900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2022 ©



www.qfxusa.com



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your LMS-60 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

