

WIRELESS CLIP-ON MICROPHONE OPERATING INSTRUCTIONS

HOW DO YOU OPERATE IT?

1. Open the bottom cover (4) of the transmitter, insert the battery (size 9V) with the correct polarity and close the bottom cover until it clicks shut.
2. Insert the Microphone Connector (9) into the socket (1) of transmitter.
3. Open the battery cover (5) of the receiver, insert the battery (size AA) into receiver with correct polarity and close the battery cover.
4. Plug the receiver into the microphone input. Set both switch (2) of transmitter and switch (8) of receiver to ON position, then indicator light (3) are on (7). It indicates unit is ready for operation.

ATTENTION:

1. If acoustic quality and volume are abnormal, or receiving distance shorten, the batteries in transmitter and receiver should be replaced. You can carefully trim the frequency by adjusting the screws (6) in receiver with a screwdriver.
2. If your microphone isn't used for a long period of time, the battery should be taken out to avoid the deterioration and the damage of components.
3. If two wireless microphones are used at the same time, you should use them with one Red Light and the other Green Light. Can't be used with the Light on the same color.
4. If the microphone is too close to the speaker or the volume of the amplifier is too loud, shrill sound occurs, that may damage the amplifier or speaker. To avoid this problem, please keep the microphone away from the speaker and turn down the volume of the amplifier.

SPECIFICATIONS:

- | | |
|----------------------------|--|
| 1. Modulation..... | FM |
| 2. Frequency Response..... | .80 to 12500Hz |
| 3. Output Impedance..... | .680ohm |
| 4. Operating Voltage..... | .9v DC for transmitter
1.5v DC for Receiver |
| 5. Effective Distance..... | 20m |

