

PBX-1206SM

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING

WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

BATTERY

The PBX-1206SM is a battery powered PA loudspeaker.

Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (3~4 hours to fully charge the battery). Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, Please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume, The unit may work and charge with lower level volume. The volume level would be increased as the unit is charging.

ADVERTENCIA

PARA REDUCIR EL RIESGO DE DESCARGAS ELÉCTRICAS, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. CONSULTE TODO EL SERVICIO A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción. Limpiar solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando este símbolo aparezca en este manual de instrucciones y seguir todas las precauciones indicadas.

BATERÍA

El PBX-1206SM es un altavoz de megafonía alimentado por batería.

Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente está conectado a una fuente de energía, comenzará a cargarse automáticamente (3 ~ 4 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería es roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Una vez completada la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se usa durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta a la fuente de alimentación. Se sugiere cargar por un tiempo antes de usar con un volumen del 100%. La unidad puede funcionar y cargar con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.

AVERTISSEMENT

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, N'ENLEVEZ PAS LE COUVERCLE DE CET ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR. RÉFÉREZ TOUTES LES RÉPARATIONS À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, sources de chaleur telles que radiateurs, registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque ce symbole apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

BATTERIE

Le PBX-1206SM est un haut-parleur de sonorisation alimenté par batterie.

Assurez-vous que vous avez complètement chargé la batterie avant la première utilisation pour maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à charger (3 à 4 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être désactivé pour éviter que l'appareil ne vide la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perdra progressivement de sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant d'utiliser avec un volume de 100 %, l'appareil peut fonctionner et se charger avec un volume de niveau inférieur. Le niveau de volume serait augmenté pendant que l'appareil se recharge.




CONTROL PANEL

PBX-1206SM REAR PANEL

1. Master volume Knob : Adjust from Min to Max
(Power Switch: ON/OFF)
2. Tone Knob: Control bass&treble
3. Microphone Volume Knob: Adjust from Min to Max
4. Mode Button: Toggle between AUX, USB, TF, FM, BT by short press, press and hold to turn light on or off
Previous Track Button: Select previous track
Play/Pause Button(TWS connection)
Next Track Button: Select next track
5. TF Card Slot
6. USB Slot
7. AUX IN
8. Microphone Input
9. Battery Indicator Light
10. Power Supply: DC 5V

PBX-1206SM PANEL TRASERO

1. Perilla de volumen principal: ajuste de mínimo a máximo
(Interruptor de encendido: ENCENDIDO /APAGADO)
2. Perilla de tono: controla los graves y agudos
3. Perilla de volumen del micrófono: ajuste de mínimo a máximo
4. Botón de modo: alterna entre AUX, USB, TF, FM, BT presionando brevemente, mantén presionado para encender o apagar la luz
Botón de pista anterior: selecciona la pista anterior
Botón de reproducción / pausa (conexión TWS)
Botón de pista siguiente: seleccione la pista siguiente
5. Ranura para tarjeta TF
6. Ranura USB
7. ENTRADA AUX
8. Entrada de micrófono
9. Luz indicadora de batería
10. Fuente de alimentación: DC 5V

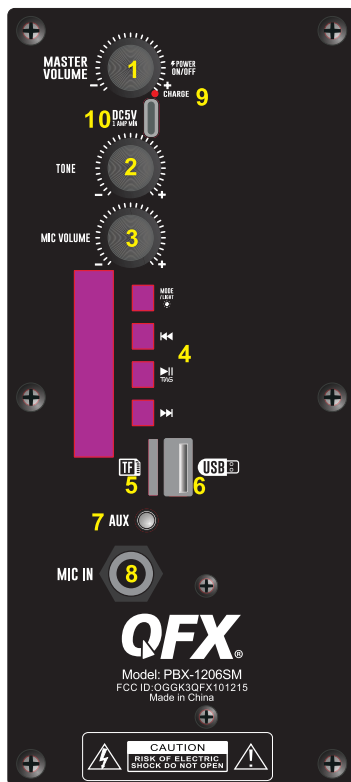

PANNEAU ARRIÈRE DU PBX-1206SM

1. Bouton de volume principal : Réglez du minimum au maximum (interrupteur d'alimentation : ON/OFF)
2. Bouton de tonalité : Contrôlez les graves et les aigus
3. Bouton de volume du microphone : Réglez du minimum au maximum
4. Bouton Mode : Basculez entre AUX, USB, TF, FM, BT en appuyant brièvement, appuyez et maintenez pour allumer ou éteindre la lumière
Bouton de piste précédente : Sélectionnez la piste précédente
Bouton Lecture/Pause (connexion TWS)
Bouton de piste suivante : Sélectionnez la piste suivante
5. Fente pour carte TF
6. Fente USB
7. Entrée AUXILIAIRE
8. Entrée microphone
9. Témoin lumineux de batterie
10. Alimentation : DC 5V



WHERE THE PARTY BEGINS™

TWS CONNECTION

TWS connection: TWS Connection is only for two speakers of the same make and model.

- 1) Turn on and switch both PBX-1206SM units to Bluetooth mode.
- 2) Keep both units within 1.5 feet of each other.
- 3) Press and hold the Play/Pause/TWS button for 3 seconds on one PBX-1206SM to begin the pairing process. When pairing is complete, you will here a sound.
- 4) To connect the phone, open the Bluetooth settings, search and connect to "QFX PBX-1206SM". You are now ready to enjoy True Wireless Stereo.
- 5) To exit TWS, press and hold the Play/Pause button for 3 seconds.

CONNEXION TWS

Connexion TWS: La connexion TWS est uniquement pour deux enceintes de la même marque et du même modèle.

- 1) Allumez et basculez les deux unités PBX-1206SM en mode Bluetooth.
- 2) Gardez les deux unités à moins de 1,5 pied l'une de l'autre.
- 3) Appuyez sur le bouton Lecture / Pause/TWS et maintenez-le enfoncé pendant 3 secondes sur un PBX-1206SM pour commencer le processus de couplage. Lorsque l'appairage est terminé, vous entendrez ici un son.
- 4) Pour connecter le téléphone, ouvrez les paramètres Bluetooth, recherchez et connectez-vous à "QFX PBX-1206SM". Vous êtes maintenant prêt à profiter de True Wireless Stereo.
- 5) Pour quitter TWS, maintenez le bouton Lecture / Pause enfoncé pendant 3 secondes.

CONEXIÓN TWS

Conexión TWS: La conexión TWS es solo para dos altavoces de la misma marca y modelo

- 1) Encienda y cambie ambas unidades PBX-1206SM al modo Bluetooth.
- 2) Mantenga ambas unidades a una distancia de 1,5 pies entre sí.
- 3) Mantenga presionado el botón Reproducir / Pausa/TWS durante 3 segundos en un PBX-1206SM para comenzar el proceso de emparejamiento. Cuando se complete el emparejamiento, escuchará un sonido.
- 4) Para conectar el teléfono, abra la configuración de Bluetooth, busque y conéctese a "QFX PBX-1206SM". Ahora está listo para disfrutar de True Wireless Stereo.
- 5) Para salir de TWS, mantenga presionado el botón Reproducir/Pausa durante 3 segundos.





BLUETOOTH: FM RADIO

BLUETOOTH:

•Bluetooth mode: use the MODE button to enable Bluetooth on the PBX-1206SM. Open the Bluetooth settings on your mobile device and search for QFX PBX-1206SM. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

•Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el PBX-1206SM. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX PBX-1206SM. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

•Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le PBX-1206SM. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX PBX-1206SM. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

FM RADIO:

• Frequency-Modulated stations operate in a frequency band extending from 87.5 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press the Play/Pause button to scan available frequencies in the area.

• Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz a 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir / Pausa para buscar las frecuencias disponibles en el área.

•Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture / Pause enfoncé pour balayer les fréquences disponibles dans la zone.

DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX /FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Press "play/pause" button for auto scan all channels.

AJUSTES DEL SISTEMA DE PANTALLA

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB / TF/BT/AUX / FM. Cuando se inserta una unidad de tarjeta de memoria flash USB / TF en la entrada USB / TF, la unidad automáticamente cambiar al modo USB / TF y comenzar la reproducción de archivos de audio .mp3 del flash USB Card unidad / TF.
2. Track Número: El número que se está reproduciendo de la pista USB / TF se mostrará Modo
3. FM: Todos los canales de FM pantalla here. Presione el botón "reproducir / pausa" para escanear automáticamente todos los canales


PARAMÈTRES DU SYSTÈME D'AFFICHAGE

1. Mode d'entrée : l'écran d'affichage LED affichera les informations du mode d'entrée pour USB/TF/BT/AUX/FM. Lorsqu'une clé USB/carte TF est insérée dans l'entrée USB/TF, l'appareil se met automatiquement passez en mode USB/TF et commencez à lire des fichiers audio MP3 à partir de la clé USB/carte TF.
2. Numéro de piste : le numéro de piste en cours de lecture à partir de l'USB/TF s'affiche.
3. Mode FM : Toutes les chaînes FM s'affichent ici. Appuyez sur le bouton "play/pause" pour balayer automatiquement toutes les chaînes.



REMOTE CONTROL

REMOTE CONTROL

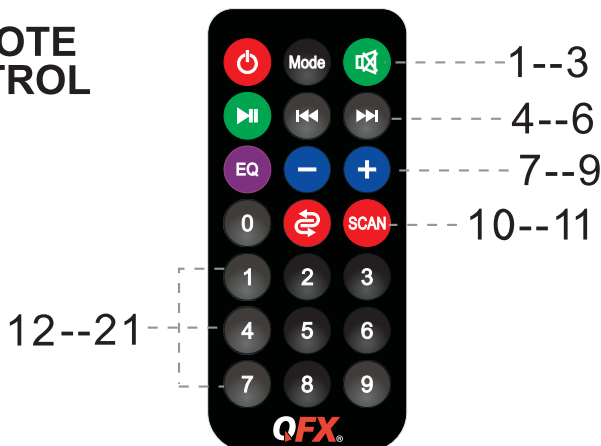

1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB, TF, FM, AUX, BT
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous channel
6. Next Track: Select next channel.
7. EQ: Select EQ mode.
8. VOL-: Reduce the master volume
9. VOL+: Increase the master volume
10. REP: Repeat the playing track.
11. Press to Scan Channel in FM Mode
- 12-21. KEY Number for selecting the certain track for USB flash drive or TF card.

1. ESPERA: Hacer que la unidad sea el modo de espera.
2. Botón de modo de entrada: Cambia entre USB, TF, FM, AUX, BT
3. Silencio: silencia la pista
4. PLAY / PAUSA
5. Pista anterior: Seleccionar el canal permeable
6. Pista siguiente: Seleccionar el siguiente canal.
7. EQ: Seleccionar el modo EQ.
8. VOL-: Reducir el volumen maestro
9. VOL+: Incerase el volumen maestro
10. REP: Repetir la pista de juego.
11. Presión larga para explorar el canal en modo FM
- 12-21. KEY Número para seleccionar la pista determinada para la unidad flash USB o tarjeta de TF.

1. STANDBY : Mettre l'appareil en mode veille.
2. Bouton de mode d'entrée : Basculer entre USB, TF, FM, AUX, BT
3. Muet : Coupez le son de la piste
4. LECTURE/PAUSE
5. Piste précédente : sélectionner la chaîne précédente
6. Piste suivante : Sélectionnez la chaîne suivante.
7. EQ : sélectionnez le mode EQ.
8. VOL- : Réduire le volume principal
9. VOL+ : Augmente le volume principal
10. REP : Répète la piste en cours de lecture.
11. Appuyez sur pour balayer la chaîne en mode FM
- 12-21. KEY Numéro de sélection d'une certaine piste pourClé USB ou carte TF.



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX**. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your PBX-1206SM Journey!
Tag us **@QFXUSA** to share your stories.