

PBX-1206

QFX
WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING

WARNING

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

BATTERY

The PBX-1206 is a lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (2~4 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is low, the battery indicator light is red. When the battery is charged fully, the light indicator will turn off. Upon completion of the charging, please disconnect the unit. With standard usage, a fully charged battery can play for about 1 hours. Battery can be recharged about 300 times in its lifetime. When not in use, the speaker should always be set to "OFF" to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

ADVERTENCIA

PARA REDUCIR EL RIESGO DE DESCARGAS ELÉCTRICAS, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. CONSULTE TODO EL SERVICIO A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción. Limpiar solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando este símbolo aparezca en este manual de instrucciones y seguir todas las precauciones indicadas.

BATERÍA

El PBX-1206 es un altavoz de megafonía alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente está conectado a una fuente de alimentación, comenzará a cargarse automáticamente (2~4 horas para cargar completamente la batería de litio) Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la carga de la batería es baja, la luz indicadora de batería es roja. Cuando la batería esté completamente cargada, el indicador luminoso se apagará. Una vez completada la carga, desconecte la unidad. Con el uso estándar, una batería completamente cargada puede funcionar durante aproximadamente 1 horas. La batería se puede recargar unas 300 veces durante su vida útil. Cuando no esté en uso, el altavoz siempre debe estar en "APAGADO" para evitar que la unidad agote la batería. Cuando la unidad no se usa durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días.

AVERTISSEMENT

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, N'ENLEVEZ PAS LE COUVERCLE DE CET ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR. RÉFÉREZ TOUTES LES RÉPARATIONS À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, sources de chaleur telles que radiateurs, registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque ce symbole apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

BATTERIE

Le PBX-1206 est un haut-parleur PA alimenté par batterie au lithium. Assurez-vous que vous avez complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commence automatiquement à se charger (2~4 heures pour charger complètement la batterie au lithium) Même si la batterie est faible, il s'allume lorsqu'il est connecté à une source d'alimentation. Lorsque la charge de la batterie est faible, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant lumineux s'éteint. Une fois le chargement terminé, veuillez déconnecter l'appareil. Avec une utilisation standard, une batterie complètement chargée peut jouer pendant environ 1 heures. La batterie peut être rechargée environ 300 fois au cours de sa vie. Lorsqu'elle n'est pas utilisée, l'enceinte doit toujours être réglée sur «OFF» pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

CONTROL PANEL

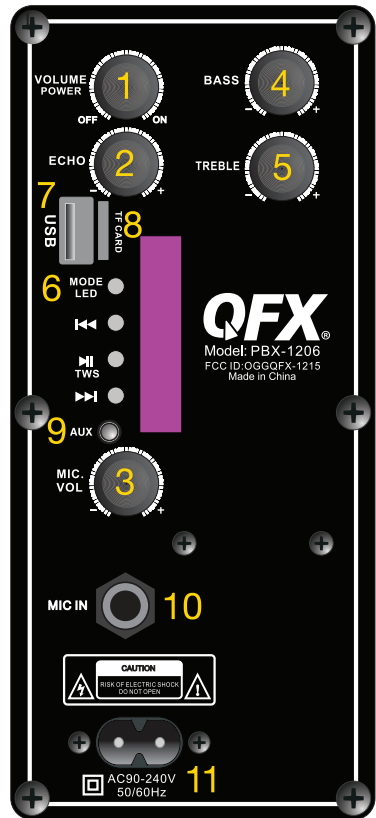 
1. Master Volume: Adjust from Min to Max (Power Switch: ON/OFF)
2. Mic Echo: Adjust from Min to Max.
3. Mic Volume: Adjust from Min to Max
4. Bass Knob: Boost the Bass EQ.
5. Treble Knob: Boost the Treble EQ.
6. Global Controls:
 - Mode : Press to toggle between AUX, USB, TF, FM, BT; Press and hold to turn ON/OFF the LED lights.
 - PREV: Select previous track.
 - PLAY/PAUSE/TWS: Play and pause music. TWS sync button.
 - NEXT: Select next track.
7. USB: Insert a USB device for (.mp3 format) playback.
8. TF CARD: Insert a TF Card for (.mp3 format) playback.
9. AUX IN: Connect an external audio player with a 3.5mm audio cable.
10. Mic Input: Insert a 6.35MM TRS cable
11. Power Supply: AC90-240V 50/60Hz

PANEL DE CONTROL

1. Volumen principal: ajuste de mínimo a máximo (interruptor de encendido: encendido / apagado)
2. Mic Echo: ajuste de Min a Max.
3. Volumen del micrófono: ajuste de mínimo a máximo
4. Botón de graves: refuerza el ecualizador de graves.
5. Perilla de agudos: refuerza el ecualizador de agudos.
6. Controles globales:
 - Modo: presione para alternar entre AUX, USB, TF, FM, BT; presione y mantenga para ENCENDER / APAGAR las luces LED.
 - PREV: selecciona la pista anterior.
 - REPRODUCIR / PAUSA / TWS: reproducir y pausar música. Botón de sincronización TWS.
 - SIGUIENTE: selecciona la pista siguiente.
7. USB: Inserte un dispositivo USB para la reproducción (formato .mp3) o cargue un dispositivo móvil (DC 5V).
8. TARJETA TF: Inserte una tarjeta TF para la reproducción (formato .mp3).
9. AUX IN: conecte un reproductor de audio externo con un cable de audio de 3,5 mm.
10. Entrada de micrófono: inserte un cable TRS de 6,35 mm
11. Fuente de alimentación: AC90-240V 50 / 60Hz

PANNEAU DE COMMANDE

1. Master Volume: Ajustez de Min à Max (interrupteur d'alimentation: ON / OFF)
2. Mic Echo: Ajustez de Min à Max.
3. Volume du micro: Ajustez de Min à Max
4. Bouton Bass: Augmente l'égalisation des basses.
5. Bouton Treble: Augmente l'égalisation des aigus.
6. Contrôles globaux:
 - Mode: appuyez pour basculer entre AUX, USB, TF, FM, BT; Appuyez et maintenez pour allumer / éteindre les lumières LED.
 - PREV: Sélectionnez la piste précédente.
 - PLAY / PAUSE / TWS: lecture et pause musique. Bouton de synchronisation TWS.
 - SUIVANT: sélectionnez la piste suivante.
7. USB: insérez un périphérique USB pour la lecture (format .mp3) ou chargez un appareil mobile (DC 5V).
8. TF CARD: insérez une carte TF pour la lecture (au format .mp3).
9. AUX IN: Connectez un lecteur audio externe avec un câble audio de 3,5 mm.
10. Entrée micro: insérez un câble TRS 6,35 mm
11. Alimentation: AC90-240V 50 / 60Hz





TWS: BLUETOOTH: FM RADIO

TWS CONNECTION

TWS connection: TWS Connection is only for two speakers of the same make and model.

- 1) Turn on and switch both PBX-1206 units to Bluetooth mode.
- 2) Keep both units within 1.5 feet of each other.
- 3) Press and hold the Play/Pause button for 3 seconds on one PBX-1206 to begin the pairing process. When pairing is complete, you will here a sound.
- 4) You are now ready to enjoy True Wireless Stereo.
- 5) To exit TWS, press and hold the Play/Pause button for 3 seconds.

CONNEXION TWS

Connexion TWS: La connexion TWS est uniquement pour deux enceintes de la même marque et du même modèle.

- 1) Allumez et basculez les deux unités PBX-1206 en mode Bluetooth.
- 2) Gardez les deux unités à moins de 1,5 pied l'une de l'autre.
- 3) Appuyez sur le bouton Lecture / Pause et maintenez-le enfoncé pendant 3 secondes sur un PBX-1206SM pour commencer le processus de couplage. Lorsque l'appairage est terminé, vous entendrez ici un son.
- 4) Vous êtes maintenant prêt à profiter de True Wireless Stereo.
- 5) Pour quitter TWS, maintenez le bouton Lecture / Pause enfoncé pendant 3 secondes.

CONEXIÓN TWS

Conexión TWS: La conexión TWS es solo para dos altavoces de la misma marca y modelo

- 1) Encienda y cambie ambas unidades PBX-1206SM al modo Bluetooth.
- 2) Mantenga ambas unidades a una distancia de 1,5 pies entre sí.
- 3) Mantenga presionado el botón Reproducir / Pausa durante 3 segundos en un PBX-1206 para comenzar el proceso de emparejamiento. Cuando se complete el emparejamiento, escuchará un sonido
- 4) Ahora está listo para disfrutar de True Wireless Stereo.
- 5) Para salir de TWS, mantenga presionado el botón Reproducir/Pausa durante 3 segundos.



BLUETOOTH:

•Bluetooth mode: use the MODE button to enable Bluetooth on the PBX-1206. Open the Bluetooth settings on your mobile device and search for QFX PBX-1206. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

•Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el PBX-1206. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX PBX-1206. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

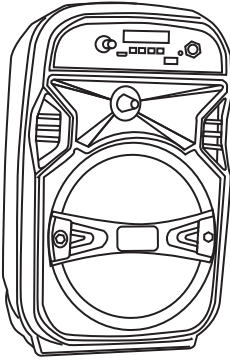 
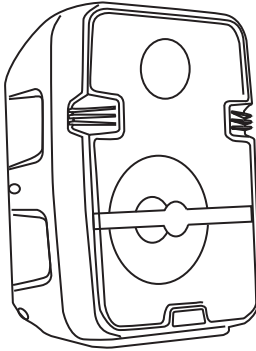 
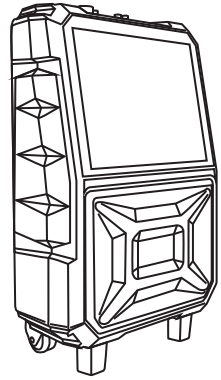 
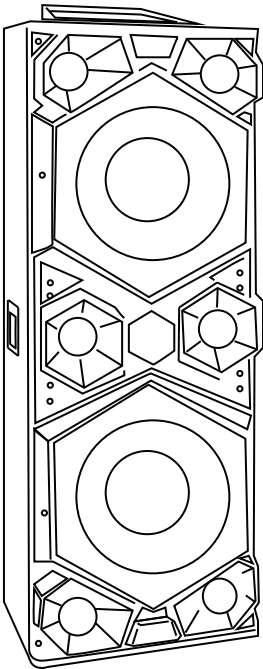 
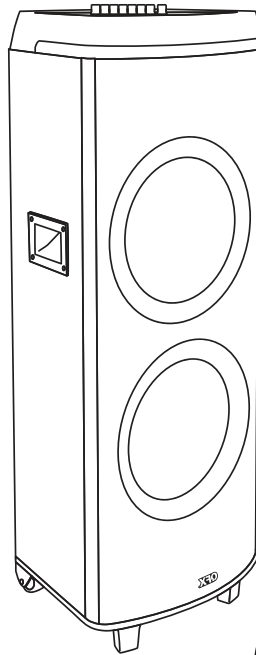 
•Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le PBX-1206. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX PBX-1206. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

FM RADIO:

• Frequency-Modulated stations operate in a frequency band extending from 87.8 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press and hold the Play/Pause button to scan available frequencies in the area. Extend the telescoping antenna to enhance reception. Available stations will be stored in presets P1-99.

• Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.8 MHz a 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, mantenga presionado el botón Reproducir / Pausa para buscar las frecuencias disponibles en el área. Extienda la antena telescópica para mejorar la recepción. Las emisoras disponibles se almacenarán en las presintonías P1-99

•Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.8 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, maintenez le bouton Lecture / Pause enfoncé pour balayer les fréquences disponibles dans la zone. Déployez l'antenne télescopique pour améliorer la réception. Les stations disponibles seront mémorisées dans les préséglages P1-99.

BT-65**BT-60****KAR-927****E-1500****LCS-120**

**CHECK OUT
THESE
OTHER
MODELS!**



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your PBX-1206 Journey!
Tag us **@QFXUSA** to share your stories.