

PBX-155SM

# QFX<sup>®</sup>

WHERE THE PARTY BEGINS<sup>™</sup>



INSTRUCTION MANUAL

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN  
 To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

**ATTENTION**

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

**PBX - 1555M BATTERY**

The PBX - 1555M is a lithium battery powered PA loudspeaker.

Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (5~6 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is low, the battery indicator light will turn red. When the battery charge is full, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. With standard usage, a fully charged battery can play for about 1 hour. Battery can be recharged about 300 times in its lifetime. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

**PBX - 1555M BATERÍA**

El PBX - 1555M es un altavoz de megafonía alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente está conectado a una fuente de alimentación, comenzará a cargarse automáticamente (5 ~ 6 horas para cargar completamente la batería de litio) Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la carga de la batería es baja, la luz indicadora de la batería se volverá roja. Cuando la carga de la batería esté completa, la luz indicadora se apagará. Una vez completada la carga, desconecte la unidad. Con el uso estándar, una batería completamente cargada puede funcionar durante aproximadamente 1 hora. La batería se puede recargar unas 300 veces durante su vida útil. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se usa durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días.

**PBX - 1555M BATTERIE**

Le PBX - 1555M est un haut-parleur PA alimenté par batterie au lithium.

Assurez-vous que vous avez complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (5 à 6 heures pour charger complètement la batterie au lithium) Même si la batterie est faible, il s'allumera lorsqu'il est connecté à une source d'alimentation. Lorsque la charge de la batterie est faible, le voyant de la batterie devient rouge. Lorsque la charge de la batterie est pleine, le voyant lumineux s'éteint. Une fois le chargement terminé, veuillez déconnecter l'appareil. Avec une utilisation standard, une batterie complètement chargée peut jouer pendant environ 1 heure. La batterie peut être rechargée environ 300 fois au cours de sa vie. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être réglé sur OFF pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

Questions? Comments? Contact Us Anytime  
 Preguntas? Comentarios? Contáctenos en cualquier momento  
 Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)  
 Mon-Fri 9AM - 5PM (PST)

 


support@qfxusa.com  
 Mon-Fri 9AM - 5PM (PST)

Follow Us



**QFXUSA.COM**

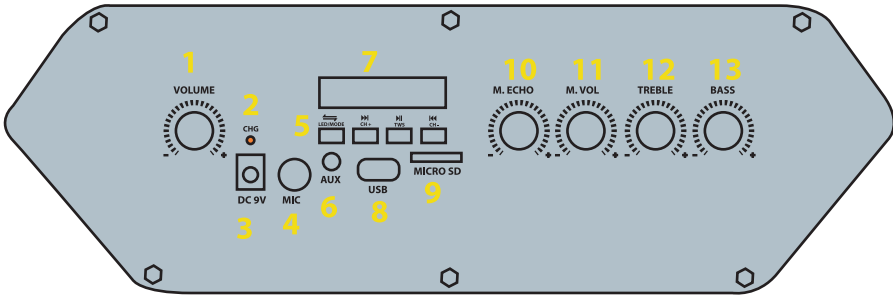**PBX-155SM CONTROL PANEL**

1. MASTER VOLUME: Turn to increase or decrease the volume. Turn to power ON/OFF the unit.
2. CHARGE LIGHT: ON=Charging, OFF= Full.
3. POWER SUPPLY: DC 9V Input.
4. MIC: Insert a 6.35mm TRS mic cable for use.
5. Global Controls:
  - LED/Mode: Toggle between LINE, USB, SD, FM, BT. Press and hold to turn ON/OFF the party Lights.
  - Next Track: Select next track or FM Station.
  - Play/Pause/TWS: Play and Pause track. In BT mode, Press and hold for TWS sync. In FM mode press and hold to begin auto scan.
  - Previous Track : Select previous track or FM station.
6. AUX: Connect an external audio device using a 3.5mm TRS cable.
7. DISPLAY SCREEN: Displays function information.
8. USB: Insert a USB flashdrive with mp3 formatted music.
9. MICRO SD: Insert a Micro SD card with mp3 formatted music.
10. MIC ECHO: Adjust the mic echo from Min to Max.
11. MIC VOL: Adjust fromthe mic volume from Min to Max.
12. TREBLE: Boost the TREBLE from Min to Max.
13. BASS: Boost the BASS from Min to Max.

**PANNEAU ARRIÈRE DU PBX-155SM**

1. MASTER VOLUME : Tournez pour augmenter ou diminuer le volume. Mettez l'appareil sous/hors tension.
2. VOYANT DE CHARGE : ALLUMÉ = En charge, ÉTEINT = Plein.
3. ALIMENTATION ÉLECTRIQUE : Entrée CC 9 V.
4. MIC : Insérez un câble micro TRS de 6,35 mm pour l'utiliser.
5. COMMANDES GLOBALES:
  - LED / Mode : Basculez entre LINE, USB, SD, FM, BT. Appuyez et maintenez enfoncé pour allumer / éteindre les lumières de la fête.
  - Piste suivante : sélectionnez la piste ou la station FM suivante.
  - Lecture / Pause / TWS : Lecture et Pause de la piste. En mode BT, appuyez sur et maintenez pour la synchronisation TWS. En mode FM, maintenez enfoncé pour lancer le balayage automatique.
  - Piste précédente : sélectionnez la piste ou la station FM précédente.
6. AUX : connectez un périphérique audio externe à l'aide d'un câble TRS de 3,5 mm.
7. ÉCRAN D'AFFICHAGE : Affiche les informations sur les fonctions.
8. USB : Insérez une clé USB contenant de la musique au format mp3.
9. MICRO SD : Insérez une carte Micro SD avec de la musique au format mp3.
10. MIC ECHO : Ajustez l'écho du micro de Min à Max.
11. MIC VOL : Réglez le volume du micro de Min à Max.
12. TREBLE : augmentez les TREBLE de Min à Max.
13. BASS : augmentez le BASS de Min à Max.

**PANEL TRASERO DE PBX-155SM**

1. MASTER VOLUME: Gírelo para subir o bajar el volumen. Encienda / apague la unidad.
2. LUZ DE CARGA: ENCENDIDO = Cargando, APAGADO = Lleno.
3. FUENTE DE ALIMENTACION: Entrada DC 9V.
4. MIC: Inserte un cable de micrófono TRS de 6,35 mm para su uso.
5. CONTROLES GLOBALES:
  - LED / Modo: alterna entre LINE, USB, SD, FM, BT. Manténgalo pulsado para ENCENDER / APAGAR las luces de fiesta.
  - Pista siguiente: seleccione la siguiente pista o estación FM.
  - Reproducir / Pausar / TWS: reproducir y pausar la pista. En modo BT, presione y manténgalo pulsado para sincronizar TWS. En el modo FM, mantenga pulsado para comenzar la búsqueda automática.
  - Pista anterior: seleccione la pista anterior o la estación de FM.
6. AUX: conecte un dispositivo de audio externo con un cable TRS de 3,5 mm.
7. PANTALLA DE VISUALIZACIÓN: muestra información sobre la función.
8. USB: inserte una unidad flash USB con música en formato mp3.
9. MICRO SD: Inserte una tarjeta Micro SD con música en formato mp3.
10. MIC ECHO: Ajusta el eco del micrófono de Min a Max.
11. MIC VOL: Ajuste del volumen del micrófono de Min a Max.
12. AGUDOS: Aumente los AGUDOS de mínimo a máximo.
13. BASS: aumenta el BASS de mínimo a máximo.

Follow Us



QFXUSA.COM

**WHERE THE PARTY BEGINS™**

**TWS CONNECTION**

*TWS Connection is only for two speakers of the same make and model.*

1. Turn ON the units and enable Bluetooth mode on both speakers. They should read BLUE.
2. Press the Play/Pause/**TWS** button for 3 seconds on one of the speakers to sync both units together.(they must be the same make and model to function).
3. On your mobile device under the Bluetooth menu, search for QFX PBX-155SM and connect.
4. Open your favorite music app and enjoy True Wireless Stereo.
5. To Exit TWS press and hold the Play/Pause/**TWS** button.

**CONNEXION TWS**

*La connexion TWS est uniquement pour deux enceintes de la même marque et du même modèle.*

1. Mettez les appareils sous tension et activez le mode Bluetooth sur les deux haut-parleurs. Ils devraient lire BLUE.
2. Appuyez sur le bouton Play/Pause/**TWS** pendant 3 secondes sur l'un des haut-parleurs pour synchroniser les deux appareils ensemble (ils doivent être de la même marque et du même modèle pour fonctionner).
3. Sur votre appareil mobile dans le menu Bluetooth, recherchez QFX PBX-155SM et connectez-vous.
4. Ouvrez votre application musicale préférée et profitez de True Wireless Stereo.
5. Pour quitter TWS, maintenez le bouton Play/Pause/**TWS** enfoncé.

**CONEXIÓN TWS**

*La conexión TWS es solo para dos altavoces de la misma marca y modelo.*

1. Encienda las unidades y habilite el modo Bluetooth en ambos altavoces. Deben leer BLUE.
2. Pulse el botón Play/Pause/**TWS** durante 3 segundos en uno de los altavoces para sincronizar ambas unidades (deben ser de la misma marca y modelo para funcionar).
3. En su dispositivo móvil en el menú de Bluetooth, busque QFX PBX-155SM y conéctese.
4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.
5. Para salir de TWS, presione y mantenga presionado el botón Play/Pause/**TWS**.

**BLUETOOTH:**

•Bluetooth mode: use the MODE button to enable Bluetooth on the PBX-155SM. Open the Bluetooth settings on your mobile device and search for QFX PBX-155SM. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

•Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el PBX-155SM. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX PBX-155SM. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

•Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le PBX-155SM. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX PBX-155SM. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

**FM RADIO:**

 
• Frequency-Modulated stations operate in a frequency band extending from 87.5 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press and hold the Play/Pause button to scan available frequencies in the area. Available stations will be stored in presets P1-99.

• Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz a 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, mantenga presionado el botón Reproducir / Pausa para buscar las frecuencias disponibles en el área. Las emisoras disponibles se almacenarán en las presintonías P1-99

• Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87,5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, maintenez le bouton Lecture / Pause enfoncé pour balayer les fréquences disponibles dans la zone. Les stations disponibles seront mémorisées dans les préréglages P1-99.

1. STANDBY: Make the unit to be standby mode.
2. Mode Button: Select USB, FM, AUX, BT
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous track or channel.
6. Next Track: Select next track or channel.
7. EQ: Select EQ mode.
8. VOL-: Decrease Volume
9. VOL+: Increase Volume
10. REP: Repeat the playing track.
11. Press to Scan Channel in FM Mode
- 12-21. Number keys to select track from the USB and TF Card.

12--21

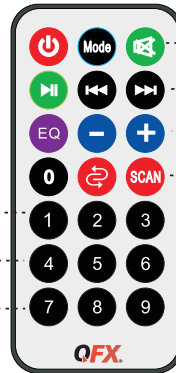

1--3

4--6

7--9

10--11

1. STANDBY: Ponga la unidad en modo de espera.
2. Botón de modo: seleccione USB, FM, AUX, BT
3. Silenciar: silencia la pista.
4. REPRODUCIR / PAUSAR
5. Pista anterior: seleccione la pista o canal anterior.
6. Siguiete pista: seleccione la siguiente pista o canal.
7. EQ: seleccione el modo EQ.
8. VOL-: Disminuir el volumen
9. VOL +: aumentar el volumen
10. REP: Repite la pista en reproducción.
11. Presione para buscar canales en modo FM
- 12-21. Teclas numéricas para seleccionar la pista de la USB y tarjeta TF.



1. STANDBY: Met l'appareil en mode veille.
2. Bouton de mode: sélectionnez USB, FM, AUX, BT
3. Muet: couper le son de la piste
4. JOUER / PAUSE
5. Piste précédente: sélectionnez la piste ou la chaîne précédente.
6. Piste suivante: sélectionnez la piste ou la chaîne suivante.
7. EQ: sélectionnez le mode EQ.
8. VOL-: Diminuer le volume
9. VOL +: augmenter le volume
10. REP: Répète la piste en cours de lecture.
11. Appuyez sur pour balayer la chaîne en mode FM
- 12-21. Touches numériques pour sélectionner la piste de la carte USB et TF.

## SPEAKER STAND:

  
- A: Take out the FASTENER, TRIPOD, and TUBE from the box.
- B: Install the FASTENER on the TRIPOD.
- C: Insert the TUBE through the FASTENER and into the TRIPOD. Adjust the desired height, tighten, and insert the PIN in the lowest hole.

- A: Saque el SUJETADOR, TRÍPODE y TUBO de la caja.
- B: Instale el FASTENER en el TRIPODE.
- C: Inserte el TUBO a través del SUJETADOR y en el TRIPODE. Ajuste la altura deseada, apriete e inserte el PIN en el orificio más bajo.

- A: Retirez la FIXATION, le TRÉPIED et le TUBE de la boîte.
- B: Installez la FIXATION sur le TRÉPIED.
- C: Insérez le TUBE à travers la FIXATION et dans le TRÉPIED. Ajustez la hauteur désirée, serrez et insérez le PIN dans le trou le plus bas.

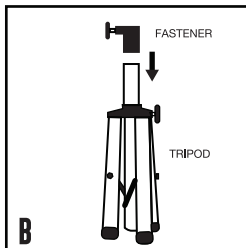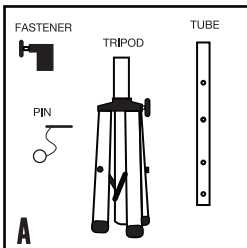

FOLLOW US @QFXUSA

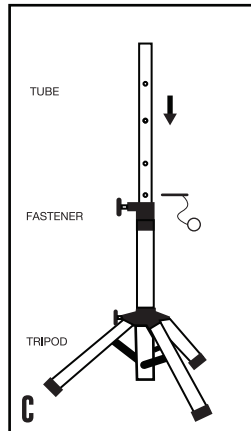 



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX**. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA® , Inc.**  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

| PRODUCT CATEGORY  | HANDLING | LABOR  | PARTS  |
|---|----------|--------|--------|
| Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers | \$5.00   | 1 Year | 1 Year |
| Personal Stereos  | \$10.00  | 1 Year | 1 Year |
| Portable Radio/Cassette   | \$15.00  | 1 Year | 1 Year |
| Large Portable Radio Cassette                                     | \$20.00  | 1 Year | 1 Year |
| Mobile Audio  | \$10.00  | 1 Year | 1 Year |
| Pro Audio SBX Systems   | \$75.00  | 1 Year | 1 Year |
| Pro Audio PBX Systems   | \$75.00  | 1 Year | 1 Year |
| Televisions   | \$25.00  | 1 Year | 1 Year |
| Telephones  | \$10.00  | 1 Year | 1 Year |

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



[www.qfxusa.com](http://www.qfxusa.com)

# THANK YOU.

Enjoy your speaker and make many memories with it because  
**QFX is Where the Party Begins!**

We would love to hear about your PBX-155SM Journey!  
Tag us **@QFXUSA** to share your stories.