 


# **QFX**

WHERE THE PARTY BEGINS™



 
 
 
## INSTRUCTION MANUAL

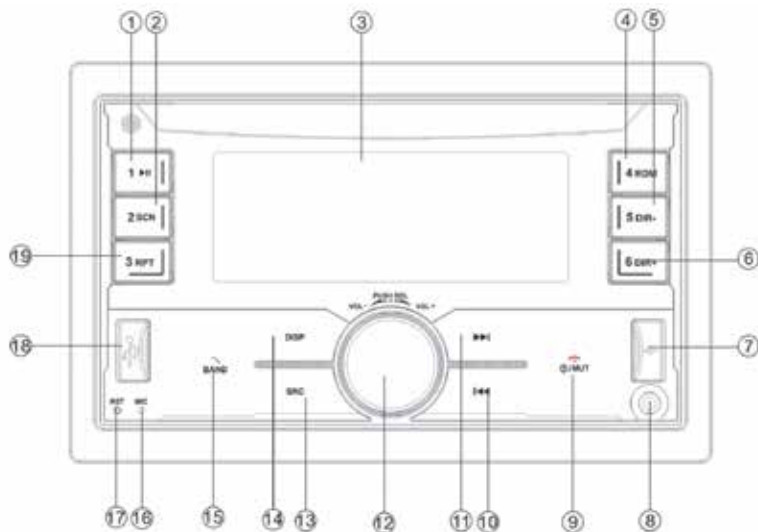

1. Play/Pause: Play or pause audio track (Program 1).
2. SCN: press to play the first 10 second of a file (Program 2).
3. LCD: LCD Displays screen.
4. RDM: Press to randomize tracks in USB/TF Mode. Press again to exit (Program 4).
5. DIR-: Press and hold to enter directory. Press for previous (-10) selection in the directory. (Program 5).
6. DIR+: Press and hold to enter directory. Press for next (+10) selection in the directory (Program 6).
7. USB Ports: Charging 5V, 1A USB port.
8. Aux-Input: Connect an external audio player.
9. Power/Mute/Phone: Press and hold to turn ON/OFF the unit. Press to mute an audio track. Press to end call.
10. Previous: Radio station or USB/TF track.
11. Next: Radio station or USB/TF track.
12. Volume Knob: Turn to increase and decrease the volume. Press to select.
13. SRC: Select source.
14. Display: Press to displays the unit's function.
15. Band: Press to select radio band. Turn the volume knob to toggle through. Press the volume knob to select.
16. MIC: Built-in microphone for talk back (Phone).
17. Reset: Factory default
18. USB Ports: Music Playback Port.
19. RPT: Press to select repeat mode one, all files or, all folders(Program 3).

1. Reproducir / Pausar: reproduce o pausa la pista de audio (Programa 1).
2. SCN: presione para reproducir los primeros 10 segundos de un archivo (Programa 2).
3. LCD: Pantalla de visualizaciones LCD.
4. RDM: presione para aleatorizar pistas en modo USB/TF. Presione nuevamente para salir (Programa 4).
5. DIR-: presione y mantenga presionado para ingresar al directorio. Presione para la selección anterior (-10) en el directorio. (Programa 5).
6. DIR+ : presione y mantenga presionado para ingresar al directorio. Presione para la siguiente selección (+10) en el directorio (Programa 6).
7. Puertos USB: puerto USB de carga de 5 V, 1A.
8. Entrada auxiliar: conecte un reproductor de audio externo.
9. Encendido/Silencio/Teléfono: presione y mantenga presionado para ENCENDER / APAGAR la unidad. Presione para silenciar una pista de audio. Presione para finalizar la llamada.
10. Anterior: estación de radio o pista USB / TF.
11. Siguiente: estación de radio o pista USB / TF.
12. Perilla de volumen: gírela para subir y bajar el volumen. Presione para seleccionar.
13. SRC: Seleccionar fuente.
14. Pantalla: presione para mostrar la función de la unidad.
15. Banda: presione para seleccionar la banda de radio. Gire la perilla de volumen para alternar. Presione la rueda de volumen para seleccionar.
16. MIC: micrófono incorporado para contestar (teléfono).
17. Restablecer: valor predeterminado de fábrica
18. Puertos USB: puerto de reproducción de música.
19. RPT: presione para seleccionar el modo de repetición uno, todos los archivos o todas las carpetas (Programa 3).

1. Lecture/Pause : Lecture ou pause d'une piste audio (Programme 1).
2. SCN : appuyez pour lire les 10 premières secondes d'un fichier (Programme 2).
3. LCD : écran d'affichage à cristaux liquides.
4. RDM : Appuyez pour randomiser les pistes en mode USB/TF. Appuyez à nouveau pour quitter (Programme 4).
5. DIR- : Appuyez et maintenez enfoncé pour entrer dans le répertoire. Appuyez sur pour la sélection précédente (-10) dans le répertoire. (Programme 5).
6. DIR+ : Appuyez et maintenez enfoncé pour entrer dans le répertoire. Appuyez sur pour la sélection suivante (+10) dans le répertoire (Programme 6).
7. Ports USB : charge 5V, 1A port USB.
8. Aux-Input : Connectez un lecteur audio externe.
9. Alimentation/Muet/Téléphone : Appuyez et maintenez enfoncé pour allumer/éteindre l'appareil. Appuyez pour couper une piste audio. Appuyez pour terminer l'appel.
10. Précédent : Station de radio ou piste USB/TF.
11. Suivant : Station de radio ou piste USB/TF.
12. Bouton de volume : Tournez pour augmenter et diminuer le volume. Appuyez pour sélectionner.
13. SRC : sélectionnez la source.
14. Affichage : Appuyez pour afficher la fonction de l'unité.
15. Bande : Appuyez pour sélectionner la bande radio. Tournez le bouton de volume pour basculer. Appuyez sur le bouton de volume pour sélectionner.
16. MIC : microphone intégré pour la conversation (téléphone).
17. Réinitialiser : par défaut
18. Ports USB : Port de lecture de musique.
19. RPT : Appuyez pour sélectionner le mode de répétition un, tous les fichiers ou tous les dossiers (programme 3).

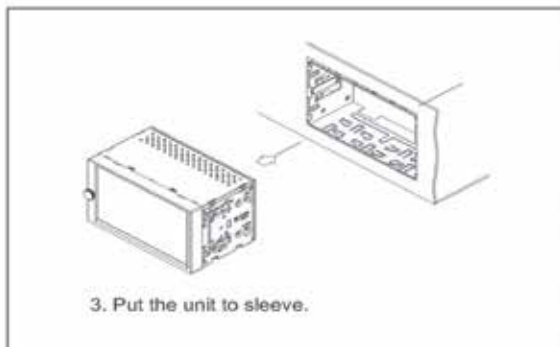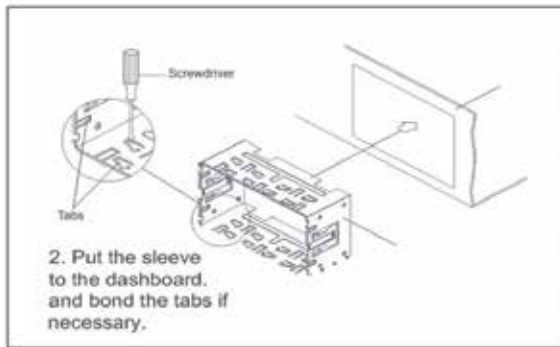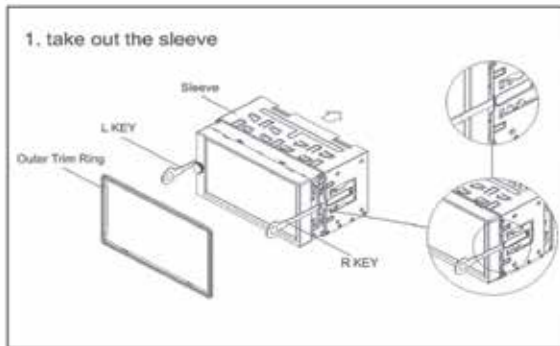

1. Take out the sleeve.
2. Put the sleeve in the dashboard and bond the tabs if necessary
3. Put the unit into the sleeve.

1. Saque la manga.
2. Coloque la funda en el tablero y pegue las pestañas si es necesario
3. Coloque la unidad en la funda.

1. Retirez le manchon.
2. Mettre le manchon dans le tableau de bord et coller les languettes si nécessaire
3. Mettez l'appareil dans le manchon.

**CLOCK:** Press and hold "DISP" to enter clock settings. Use the volume knob to set the HOUR. Press the volume knob to set the MINUTE. Once the hour and minutes are set, Press and Hold the "DISP" button to lock in the time.

**VOLUME KNOB:** Turn to adjust the volume. Press the enter selection.

**NEXT/PREVIOUS:** Press and hold in FM/AM mode for manual search.

**BAND:** In AM/FM mode select a radio station and press and hold a program button (1-6) to store the radio station.

**BLUETOOTH:** Use the SRC button to select "BT". On your mobile device enable Bluetooth and search for QFX FX-911. Select QFX FX-911 to pair with the unit. Select your favorite music app at play back your music. To receive a Phone call Press the "BAND" button. To end a call press the "POWER" button. If the unit asks for a password, enter "0000".

**RELOJ:** Mantenga presionado "DISP" para ingresar a la configuración del reloj. Use la perilla de volumen para configurar la HORA. Presione la perilla de volumen para configurar los MINUTOS. Una vez configurados la hora y los minutos, presione y mantenga presionado el botón "DISP" para fijar la hora.

**PERILLA DE VOLUMEN:** Gírela para ajustar el volumen. Presione la selección de entrada.

**SIGUIENTE / ANTERIOR:** Mantenga presionado en el modo FM / AM para la búsqueda manual.

**BANDA:** En el modo AM / FM, seleccione una estación de radio y mantenga presionado un botón de programa (1-6) para almacenar la estación de radio.

**BLUETOOTH:** Utilice el botón SRC para seleccionar "BT". En su dispositivo móvil, habilite Bluetooth y busque QFX FX-911. Seleccione QFX FX-911 para emparejar con la unidad. Seleccione su aplicación de música favorita para reproducir su música. Para recibir una llamada telefónica Presione el botón "BAND". Para finalizar una llamada, presione el botón "ENCENDIDO". Si la unidad solicita una contraseña, ingrese "0000".

**HORLOGE :** Appuyez et maintenez enfoncée la touche « DISP » pour entrer les paramètres de l'horloge. Utilisez le bouton de volume pour régler l'HEURE. Appuyez sur le bouton de volume pour régler les MINUTES. Une fois l'heure et les minutes réglées, maintenez enfoncé le bouton « DISP » pour verrouiller l'heure.

**BOUTON DE VOLUME :** Tournez pour régler le volume. Appuyez sur la sélection d'entrée.

**SUIVANT/PRÉCÉDENT :** Appuyez et maintenez en mode FM/AM pour une recherche manuelle.

**BANDE :** En mode AM/FM, sélectionnez une station de radio et maintenez enfoncée une touche de programme (1-6) pour mémoriser la station de radio.

**BLUETOOTH :** Utilisez le bouton SRC pour sélectionner « BT ». Sur votre appareil mobile, activez Bluetooth et recherchez QFX FX-911. Sélectionnez QFX FX-911 à coupler avec l'unité. Sélectionnez votre application musicale préférée pour lire votre musique. Pour recevoir un appel téléphonique Appuyez sur le bouton « BAND ». Pour terminer un appel, appuyez sur le bouton « POWER ». Si l'appareil demande un mot de passe, entrez « 0000 ».

#### PHONE:

Press "BAND" key to answer the incoming call. Press "POWER" key to reject or hang up the call. Use your mobile phone to dial a call. During a phone call, press the "BAND" button to transfer between the mobile phone and the unit.

Presione la tecla "BAND" para contestar la llamada entrante. Presione la tecla "ENCENDIDO" para rechazar o colgar la llamada. Utilice su teléfono móvil para realizar una llamada. Durante una llamada telefónica, presione el botón "BAND" para transferir entre el teléfono móvil y la unidad.

Appuyez sur la touche "BAND" pour répondre à l'appel entrant. Appuyez sur la touche "POWER" pour rejeter ou raccrocher l'appel. Utilisez votre téléphone portable pour passer un appel. Lors d'un appel téléphonique, appuyez sur le bouton « BAND » pour effectuer le transfert entre le téléphone mobile et l'appareil.

 
Power Supply Requirements:	DC 12 Volts, Negative Ground
Chassis Dimension:	183 (W) x 90 (D) x 102(H)
Maximum Output Power:	4x40 watts
Current Drain :	10 Ampere (max.)
Radio:	87.5 - 108 MHz
Stereo Separation:	>25dB
Sensitivity:	(S/N=30dB) 4µV
Frequency Coverage:	522 to 1620kHz



1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)

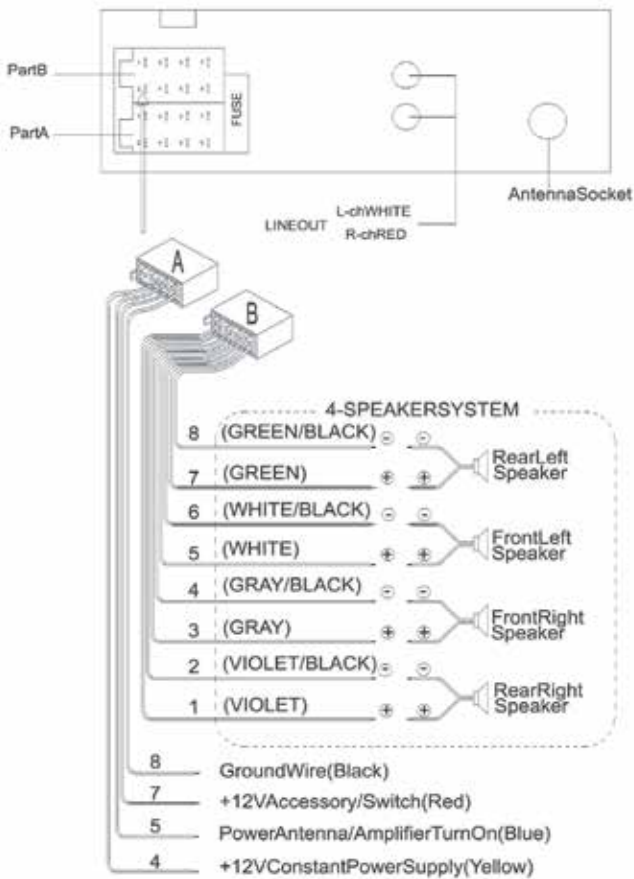

1. This player can only be used by the 12V DC cathode grounding electrical system.
2. Do not connect the battery terminal until the player is fully well installation.
3. Please make sure to connect the yellow wire to the positive of the battery(+).
4. When changing the fuse, please make sure the specifications are the same as the instruction manual..
5. Using a 4-8 ohm speaker for best results.

1. Este reproductor solo puede ser utilizado por el sistema eléctrico de puesta a tierra del cátodo de 12V CC.
2. No conecte el terminal de la batería hasta que el reproductor esté completamente instalado.
3. Asegúrese de conectar el cable amarillo al positivo de la batería (+).
4. Al cambiar el fusible, asegúrese de que las especificaciones sean las mismas que las del manual de instrucciones.
5. Utilice un altavoz de 4-8 ohmios para obtener mejores resultados.

1. Ce lecteur ne peut être utilisé que par le système électrique de mise à la terre de la cathode 12 V CC.
2. Ne connectez pas la borne de la batterie tant que le lecteur n'est pas complètement installé.
3. Assurez-vous de connecter le fil jaune au positif de la batterie (+).
4. Lorsque vous changez le fusible, assurez-vous que les spécifications sont les mêmes que celles du manuel d'instructions.
5. Utilisation d'un haut-parleur de 4 à 8 ohms pour de meilleurs résultats.



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA®**, Inc.  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2021 ©



www.qfxusa.com

# THANK YOU.

## FOLLOW US @QFXUSA



Enjoy your speaker and make many memories with it because  
**QFX is Where the Party Begins!**

We would love to hear about your FX-911 Journey!  
Tag us **@QFXUSA** to share your stories.