


LMS-4

**QFX**  
WHERE THE PARTY BEGINS™



**INSTRUCTION MANUAL**



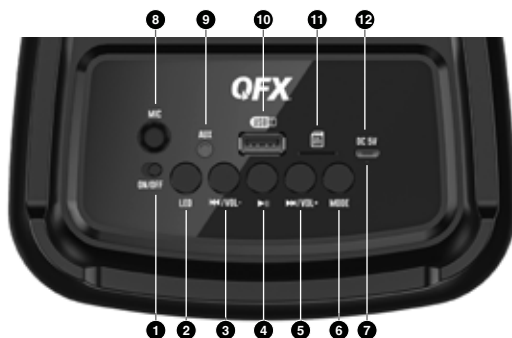

## FUNCTIONS:

1. OFF / ON power
2. LED: Toggle RGB light modes and light off.
3. ◀/VOL- : Short-press for previous track. Long-press to turn volume down
4. ▶/| : Short-press to play/pause music. Long-press to scan/auto-search in FM mode
5. ▶/VOL+ : Short-press to play next track. Long-press to turn volume up
6. MODE: Toggle between Bluetooth-connect, FM, USB / TF music; Aux input modes. Long-press in Bluetooth mode to select TWS function.
7. Charging/Play LED
8. MIC: Mic input 1/4" jack
9. AUX: Aux input 3.5mm jack
10. USB port for MP3 music
11. TF card slot for MP3 music
12. DC 5V: USB charging port

## FUNCIONES:

1. APAGADO / ENCENDIDO
2. LED: Alternar los modos de luz RGB y apagar la luz.
3. ◀/VOL- : Presione brevemente para la pista anterior. Mantenga presionado para bajar el volumen
4. ▶/| : Presione brevemente para reproducir/pausar música. Mantenga presionado para escanear/buscar automáticamente en modo FM
5. ▶/VOL+ : Presione brevemente para reproducir la siguiente pista. Mantenga presionado para subir el volumen
6. MODO: alternar entre conexión Bluetooth, FM, música USB / TF; Modos de entrada auxiliar. Mantenga presionado en modo Bluetooth para seleccionar la función TWS.
7. LED de carga/reproducción
8. MIC: jack de entrada de micrófono de 1/4"
9. AUX: conector de entrada auxiliar de 3,5 mm
10. Puerto USB para música MP3
11. Ranura para tarjeta TF para música MP3
12. CC 5 V; puerto de carga USB

## LES FONCTIONS:

1. ARRÊT/MARCHE
2. LED : Basculer les modes d'éclairage RVB et éteindre la lumière.
3. ◀/VOL- : Appui court pour la piste précédente. Appui long pour baisser le volume
4. ▶/| : Appuyez brièvement pour lire/mettre en pause la musique. Appuyez longuement pour scanner/rechercher automatiquement en mode FM
5. ▶/VOL+ : Appuyez brièvement pour lire la piste suivante. Appuyez longuement pour augmenter le volume
6. MODO : basculer entre la connexion Bluetooth, la musique FM, USB/TF ; Modes d'entrée auxiliaire. Appuyez longuement en mode Bluetooth pour sélectionner la fonction TWS.
7. LED de charge/lecture
8. MIC : Prise d'entrée micro 1/4"
9. AUX : prise d'entrée auxiliaire de 3,5 mm
10. Port USB pour la musique MP3
11. Fente pour carte TF pour la musique MP3
12. DC 5V : port de charge USB

**BLUETOOTH**

Turn the speaker on and enable your Bluetooth device. Search "QFX LMS-4" to pair the two devices. Once paired, it will automatically re-pair whenever the speakers are turned on and with Bluetooth enabled on your devices. After pairing the device, you can play music. Press ►|| button to play/pause. Press ◀◀ or ▶▶ to hear the previous track or next track.

**USB/TF CARD**

Insert a USB drive or TF card (32GB max) into the USB/TF ports. The speaker will read and play MP3 music automatically. Press ►|| button to play/pause. Press ◀◀ or ▶▶ to hear the previous track or next track.

**FM RADIO**

Long-Press ►|| to auto search FM channels automatically in FM mode. This operation will scan all FM stations and pre-record them into memory. The scan procedure may take several minutes and must not be interrupted. Once completed, press ◀◀ or ▶▶ button to change to the previous or next stored radio station. Short-press ►|| to mute the sound of the FM radio.

**TWS**

Two LMS-4 speakers can be connected to one wireless device at the same time. First, turn the speakers on and keep the speakers all in Bluetooth Mode, then choose one unit and long-press "MODE" button for several seconds. Then you will hear a sound to indicate that the two units have paired successfully. Please ensure before pairing that the two units are not connected with other devices.

**CHARGING**

Plug the USB cable into the speaker's charging port and connect it to the power source. The red LED indicator on panel will be on when the unit is charging. The red LED light will turn off when the speaker full charge.

**LED STATUS**

Quick flashing Blue LED  
Slow flashing Blue LED  
Solid Blue LED  
Solid Red LED

**DESCRIPTION**

Searching bluetooth-connect or FM scanning mode  
Playing music  
Pause or no music playing  
Charging

**BLUETOOTH**

Encienda el altavoz y habilite su dispositivo Bluetooth. Busque "QFX LMS-4" para emparejar los dos dispositivos. Una vez emparejados, se volverán a emparejar automáticamente siempre que los altavoces estén encendidos y con Bluetooth habilitado en sus dispositivos. Después de emparejar el dispositivo, puede reproducir música. Presione el botón ►|| para reproducir/pausar Presione ◀◀ o ▶▶ para escuchar la pista anterior o siguiente.

**TARJETA USB/TF**

Inserte una unidad USB o una tarjeta TF (32 GB máx.) en los puertos USB/TF. El altavoz leerá y reproducirá música MP3 automáticamente. Presione el botón ►|| para reproducir/pausar. Presione ◀◀ o ▶▶ para escuchar la pista anterior o la pista siguiente.

**RADIO FM**

Mantenga presionado ►|| para buscar automáticamente canales FM automáticamente en modo FM. Esta operación escaneará todas las estaciones de FM y las pregrabará en la memoria. El procedimiento de exploración puede tardar varios minutos y no debe interrumpirse. Una vez completado, presione el botón ◀◀ o ▶▶ para cambiar a la estación de radio almacenada anterior o siguiente. Presione brevemente ►|| para silenciar el sonido de la radio FM.

**TWS**

Se pueden conectar dos altavoces LMS-4 a un dispositivo inalámbrico al mismo tiempo. Primero, encienda los altavoces y manténgalos en modo Bluetooth, luego elija una unidad y mantenga presionado el botón "MODE" durante varios segundos. Luego escuchará un sonido para indicar que las dos unidades se han emparejado correctamente. Antes de realizar el emparejamiento, asegúrese de que las dos unidades no estén conectadas con otros dispositivos.

**CARGA**

Enchufé el cable USB en el puerto de carga del altavoz y conéctelo a la fuente de alimentación. El indicador LED rojo en el panel estará encendido cuando la unidad se esté cargando. La luz LED roja se apagará cuando el altavoz se cargue por completo.

**ESTADO DEL LED**

LED azul intermitente rápido  
LED azul intermitente lento  
LED azul sólido  
LED rojo sólido

**DESCRIPCIÓN**

Búsqueda de conexión bluetooth o modo de escaneo FM  
Tocando musica  
Pausar o no reproducir música  
cargando

**BLUETOOTH**

Allumez le haut-parleur et activez votre appareil Bluetooth. Recherchez "QFX LMS-4" pour coupler les deux appareils. Une fois couplé, il se reconnectera automatiquement chaque fois que les haut-parleurs sont allumés et avec Bluetooth activé sur vos appareils. Après avoir couplé l'appareil, vous pouvez écouter de la musique. Appuyez sur le bouton ►|| pour Appuyez sur ◀◀ ou ▶▶ pour écouter la piste précédente ou la piste suivante.

**CARTE USB/TF**

Insérez une clé USB ou une carte TF (32 Go max) dans les ports USB/TF. Le haut-parleur lira et jouera automatiquement la musique MP3. Appuyez sur le bouton ►|| pour lire/mettre en pause. Appuyez sur ◀◀ ou ▶▶ pour écouter la piste précédente ou la piste suivante.

**RADIO FM**

Appuyez longuement sur ►|| pour rechercher automatiquement les chaînes FM en mode FM. Cette opération balayera toutes les stations FM et les pré-enregistrera dans la mémoire. La procédure de numérisation peut prendre plusieurs minutes et ne doit pas être interrompue. Une fois terminé, appuyez sur le bouton ◀◀ ou ▶▶ pour passer à la station de radio mémorisée précédente ou suivante. Appuyez brièvement sur ►|| pour couper le son de la radio FM.

**TWS**

Deux haut-parleurs LMS-4 peuvent être connectés à un appareil sans fil en même temps. Tout d'abord, allumez les haut-parleurs et gardez-les tous en mode Bluetooth, puis choisissez une unité et appuyez longuement sur le bouton "MODE" pendant plusieurs secondes. Ensuite, vous entendrez un son pour indiquer que les deux unités se sont jumelées avec succès. Veuillez vous assurer avant le jumelage que les deux unités ne sont pas connectées à d'autres appareils.

**MISE EN CHARGE**

Branchez le câble USB dans le port de charge du haut-parleur et connectez-le à la source d'alimentation. L'indicateur LED rouge sur le panneau s'allume lorsque l'appareil est en charge. Le voyant LED rouge s'éteint lorsque le haut-parleur est complètement chargé.

**ÉTAT DES VOYANTS**

LED bleue à clignotement rapide  
LED bleue clignotant lentement  
LED bleu solide  
LED rouge solide

**LA DESCRIPTION**

Recherche de mode de connexion Bluetooth ou de balayage FM  
Jouer de la musique  
Pause ou aucune musique en cours de lecture  
Mise en charge



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA®**, Inc.  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2022 ©



1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

# THANK YOU.

Enjoy your speaker and make many memories with it because  
**QFX is Where the Party Begins!**

We would love to hear about your LMS-4 Journey!  
Tag us **@QFXUSA** to share your stories.