

PBX-1215

QFX[®]

 
WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL

Please read the operating instruction carefully before using the PBX-1215.

CONTROL PANEL

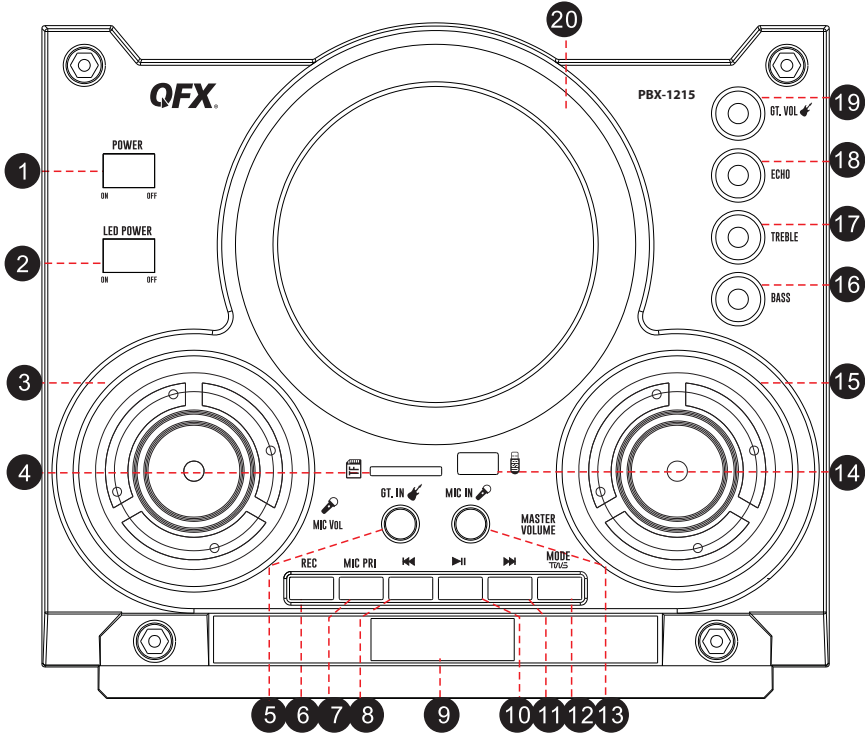


- | | |
|--|---|
| <ul style="list-style-type: none"> 1. POWER: Power On/Off button 2. LED POWER: Front LED light switch 3. MIC. VOL: Microphone volume 4. SD card input 5. GUITAR INPUT: Guitar input jack 6. REC: Recording function 7. MIC PRIORITY: Music volume will lower when you speak into the mic 8. PREV/CH: Short press for Previous Track in MP3 mode; Short press for previous channel in FM mode. 9. LED DISPLAY: LED display 10. PLAY/SCAN: Short press to play or pause in MP3 mode; Short press to Auto Scan and Preset available frequencies in FM mode. | <ul style="list-style-type: none"> 11. NEXT/CH+: Short press for next Track in MP3 mode; Short press for next channel in FM mode. 12. MODE: Toggle to select Bluetooth, Line, FM, USB/TF. Long press the MODE button to enable the TWS function 13. MIC. INPUT: Wired microphone input 14. USB: USB music player 15. VOLUME: Master volume control 16. BASS: Bass control 17. TREBLE: Treble control 18. ECHO: Microphone echo 19. GT. VOL: Guitar volume 20. DOME LIGHT: Disco ball party lights |
|--|---|



- 21. AUX INPUT: Audio input
- 22. DC 12V INPUT: External DC 12V
- 23. DC INPUT: DC 15V input

 REMOTE CONTROL

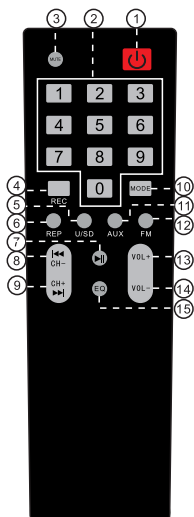

- 1. Power On/Off: Turns the Power On/Off
- 2. Number: Number keypad (0-10)
- 3. MUTE: Press to mute the Volume
- 4. REC: Recording
- 5. U/SD: signal input
- 6. REP: Press to repeat and/or shuffle
- 7. Press to Play or Pause
- 8. Previous Track/Channel
- 9. Next Track/Channel
- 10. MODE: Select source (BT, Line, FM, USB/TF)
- 11. AUX: Aux input
- 12. FM: FM radio
- 13. VOL+: Volume up
- 14. VOL- :Volume down
- 15. EQ: Equalizer presets

CHARGING THE SPEAKER

1. Full recharge takes 8-12 hours.
2. Please use the supplied charging cable to charge the speaker.
3. When you are using your unit while it is plugged to an external power source, battery switch can be ON or OFF.
4. To protect the lifespan of the built-in battery, be sure to fully charge your unit on the same day the battery runs out. Not charging your unit right away can affect the performance of the battery.

WIRED MICROPHONE INSTRUCTIONS

1. Insert the microphone plug into the microphone input jack.
2. Adjust the microphone volume knob MIC VOL for proper volume.
3. Adjust the echo depth to the proper position.
4. Now you can start using your microphone.

BLUETOOTH

You can connect your compatible wireless bluetooth devices, such as a mobile phone, tablet etc., to listen to audio tracks. Press the MODE button on the speaker or remote control to enter wireless mode, indicated on the LED display. Select "QFX PBX-1215" in your device settings to pair, and once successful, you will hear a sound of notice on the speaker.

 
PRECAUTIONS

To prevent operational problems or serious damage to the speaker unit, please follow the below precautions:

1. Pull out the power cord from the end of the plug. Do not pull the wire.
2. The speaker should be kept away from other heat sources.
3. Do not attempt to open the internal speaker unit or change the circuitry as this may cause the unit to be damaged or cause an electrical shock.
4. If you are not going to use the unit for a long period of time, pull out the plug and store in a cool dry place.
5. Ensure the speaker is properly ventilated & kept in a dry location. It is recommended that the speaker be kept a minimum of 4 inches away from any wall or object.

WARNING: Do not use this Speaker in any wet location, in the rain or a location with high moisture. Do not place any liquids or other objects on the Speaker as this may cause an accidental short.

- * Specifications are subject to change without notice.
- * All Trademarks and trade names belong to their respective owners.

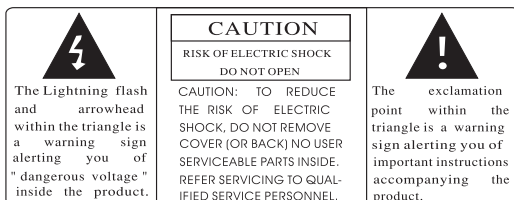

The exclamation mark inside an equilateral triangle is intended to alert user of the presence of the important operating and maintenance (servicing) instructions in the literature accompanying the product.

The lightning flash with arrowhead symbol inside an equilateral triangle is intended to alert User of the presence of un-insulated "hazardous voltage" within the product's enclosure, which may be of sufficient magnitude to induce a risk of electric shock to persons.

NOTES: Please do not attempt to open the back cover or power adapter as opening or removing the covers may expose you to dangerous voltage or other hazards, and it will also cause the restricted servicing to be disabled: There are no user servicing components inside.

TWS

TRUE WIRELESS STEREO



CONNECT 2

CONECTAR 2 • RELIER 2

PAIR 2 PBX-1215



STEP 1
PASO 1
ÉTAPE 1



 
BLUETOOTH

Push the Mode Button on both speakers until speakers are in Bluetooth Mode. Screen will display the word "Blue"

Presione el botón de modo en ambos altavoces hasta los altavoces están en Bluetooth Mode. La pantalla mostrará la palabra "Blue"

Appuyez sur le bouton Mode sur les deux haut-parleurs jusqu'à ce que les haut-parleurs soient en mode Bluetooth. L'écran affichera le mot «Blue»

STEP 2 PASO 2 ÉTAPE 2

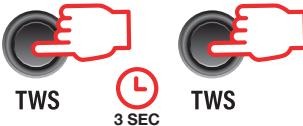

When both speakers are in Bluetooth mode, push and hold the TWS button for 3 seconds. You will hear a beep. Next time you put both speakers in Bluetooth mode at the same time, speakers will connect automatically.

Quando ambos altavoces estén en modo Bluetooth, presione y mantenga presionado el botón TWS durante 3 segundos. Oírás un bip. La próxima vez que pongas ambos altavoces en Bluetooth modo al mismo tiempo, los altavoces se conectarán automáticamente.

Lorsque les deux enceintes sont en mode Bluetooth, appuyez sur et maintenez le bouton TWS pendant 3 secondes. Vous entendrez un bip. La prochaine fois que vous mettez les deux haut-parleurs en Bluetooth en même temps, les haut-parleurs se connecteront automatiquement.

STEP 3 PASO 3 ÉTAPE 3

On your device, turn your Bluetooth settings "ON", you will then select "QFX PBX-1215". Enjoy TWS (True Wireless Stereo) sound from your phone via Bluetooth!

En su dispositivo, active la configuración de Bluetooth, luego seleccionará "QFX PBX-1215". Disfruta TWS (True Wireless Stereo) sonido desde su teléfono a través de Bluetooth!

Sur votre appareil, activez vos paramètres Bluetooth, vous sélectionnerez ensuite «QFX PBX-1215». Profitez de TWS (True Wireless Stereo) son de votre téléphone via Bluetooth!





LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX**. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

FOLLOW US @QFXUSA



QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

➔ support@qfxusa.com
☎ (800) 864-CLUB (2582) or (323) 864-6900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

 
Copyright Protected 2022 ©



www.qfxusa.com

Lea atentamente las instrucciones de funcionamiento antes de utilizar el PBX-1215.

PANEL DE CONTROL

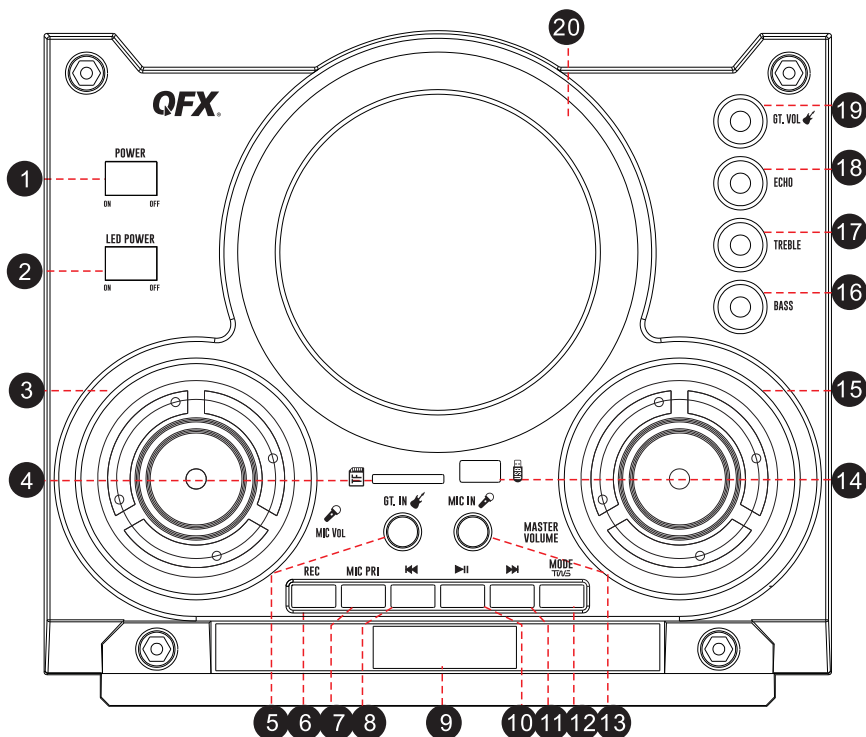


1. ENCENDIDO: botón de encendido/apagado
2. ALIMENTACIÓN LED: interruptor de luz LED frontal
3. MICRÓFONO. VOL: Volumen del micrófono
4. Entrada de tarjeta SD
5. ENTRADA DE GUITARRA: conector de entrada de guitarra
6. REC: función de grabación
7. PRIORIDAD DEL MICRÓFONO: el volumen de la música bajará cuando hable por el micrófono
8. PREV/CH: Presione brevemente para la pista anterior en el modo MP3; Pulsación corta para el canal anterior en modo FM.
9. PANTALLA LED: pantalla LED
10. PLAY/SCAN: presione brevemente para reproducir o pausar en modo MP3; Presione brevemente para escanear automáticamente y preestablecer las frecuencias disponibles en el modo FM.
11. NEXT/CH+: pulsación corta para la siguiente pista en modo MP3; Pulsación corta para el siguiente canal en modo FM.
12. MODO: Alterne para seleccionar Bluetooth, Línea, FM, USB/TF. Mantenga presionado el botón MODE para habilitar la función TWS
13. MICRÓFONO. ENTRADA: entrada de micrófono con cable
14. USB: reproductor de música USB
15. VOLUMEN: control de volumen maestro
16. GRAVES: control de graves
17. AGUDOS: control de agudos
18. ECO: eco del micrófono
19. GT. VOL: Volumen de la guitarra
20. LUZ DE DOMO: luces de fiesta de bola de discoteca



- 21. ENTRADA AUXILIAR: Entrada de audio
- 22. ENTRADA DE 12 V CC: 12 V CC externa
- 23. ENTRADA DE CC: entrada de CC de 15 V

 CONTROL REMOTO

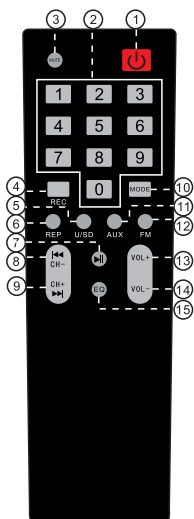

- 1. Encendido/apagado: enciende/apaga el encendido
- 2. Número: teclado numérico (0-10)
- 3. MUTE: presione para silenciar el volumen
- 4. REC: Grabación
- 5. U/SD: entrada de señal
- 6. REP: Presione para repetir y/o mezclar
- 7. Presione para Reproducir o Pausa
- 8. Pista/Canal anterior
- 9. Siguiete pista/canal
- 10. MODO: Seleccionar fuente (BT, Línea, FM, USB/TF)
- 11. AUX: entrada auxiliar
- 12. FM: Radio FM
- 13. VOL+: Subir volumen
- 14. VOL-: Bajar volumen
- 15. EQ: ajustes preestablecidos de ecualizador

CARGA DEL ALTAVOZ

1. La recarga completa tarda de 8 a 12 horas.
2. Utilice el cable de carga suministrado para cargar el altavoz.
3. Cuando esté usando su unidad mientras está enchufada a una fuente de alimentación externa, el interruptor de la batería puede estar ENCENDIDO o APAGADO.
4. Para proteger la vida útil de la batería integrada, asegúrese de cargar completamente su unidad el mismo día en que se agote la batería. No cargar su unidad de inmediato puede afectar el rendimiento de la batería.

INSTRUCCIONES DEL MICRÓFONO CON CABLE

1. Inserte el enchufe del micrófono en el conector de entrada del micrófono.
2. Ajuste la perilla de volumen del micrófono MIC VOL para el volumen adecuado.
3. Ajuste la profundidad del eco a la posición adecuada.
4. Ahora puede comenzar a usar su micrófono.

BLUETOOTH

Puede conectar sus dispositivos bluetooth inalámbricos compatibles, como un teléfono móvil, una tableta, etc., para escuchar pistas de audio. Presione el botón MODE en el altavoz o el control remoto para ingresar al modo inalámbrico, indicado en la pantalla LED. Seleccione "QFX PBX-1215" en la configuración de su dispositivo para emparejar, y una vez que lo haga, escuchará un sonido de aviso en el altavoz.

PRECAUCIONES

Para evitar problemas operativos o daños graves a la unidad de altavoz, siga las siguientes precauciones:

1. Saque el cable de alimentación del extremo del enchufe. No tire del cable.
2. El altavoz debe mantenerse alejado de otras fuentes de calor.
3. No intente abrir la unidad de altavoz interna ni cambiar los circuitos, ya que esto puede dañar la unidad o provocar una descarga eléctrica.
4. Si no va a utilizar la unidad durante un largo período de tiempo, desconecte el enchufe y guárdelo en un lugar fresco y seco.
5. Asegúrese de que el altavoz esté correctamente ventilado y guardado en un lugar seco. Se recomienda mantener el altavoz a una distancia mínima de 4 pulgadas de cualquier pared u objeto.

ADVERTENCIA: No utilice este altavoz en ningún lugar húmedo, bajo la lluvia o en un lugar con mucha humedad. No coloque líquidos u otros objetos sobre el altavoz, ya que esto puede provocar un cortocircuito accidental.

* Las especificaciones están sujetas a cambios sin previo aviso.

* Todas las marcas y nombres comerciales pertenecen a sus respectivos dueños.

	<p>PRECAUCIÓN RIESGO DE ELECTRICIDAD CHOQUE NO ABRIR</p>	
<p>El relámpago y punta de flecha en dentro del triángulo es una señal advertencia alertándote de "tensión" peligrosa dentro del producto.</p>	<p>TEN CUIDADO PARA REDUCIR EL RIESGO DESCARGA ELÉCTRICA. NO QUITAR CUBIERTA (O VOLVER) NO Usuario. PIEZAS REPARABLES AL INTERIOR. REFERIR SERVICIO A SERVICIO PERSONAL CALIFICADO</p>	<p>Signo de exclamación en el triángulo es un advertencias de alerta tu importante instrucciones apoyo el producto</p>

 
El signo de exclamación dentro de un triángulo equilátero está destinado a alertar al usuario de la presencia de las importantes instrucciones de operación y mantenimiento (servicio) en la literatura que acompaña al producto.

El rayo con el símbolo de punta de flecha dentro de un triángulo equilátero tiene la intención de alertar al Usuario de la presencia de "voltaje peligroso" no aislado dentro de la carcasa del producto, que puede ser de magnitud suficiente para inducir un riesgo de descarga eléctrica a las personas


NOTAS No intente abrir la tapa posterior o el adaptador de corriente, ya que abrir o quitar las tapas puede exponerlo a voltajes peligrosos u otros peligros, y también puede causar servicio restringido que se deshabilitará: no hay componentes de servicio de usuario en el interior.

Veuillez lire attentivement le mode d'emploi avant d'utiliser le PBX-1215.

CONTROL PANEL

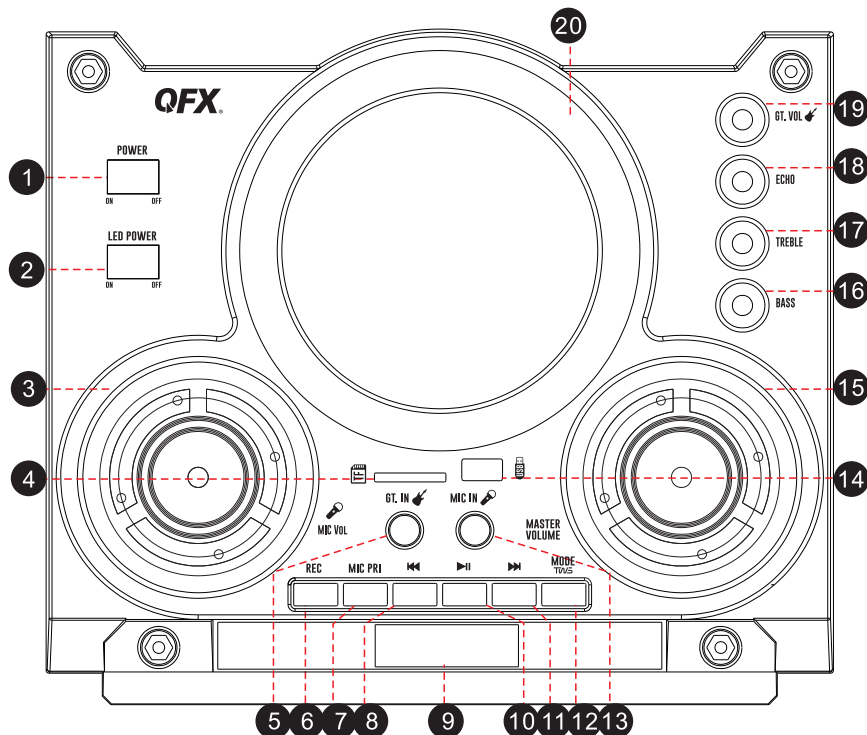


- | | |
|---|--|
| <p>1. ALIMENTATION : bouton Marche/Arrêt</p> <p>2. ALIMENTATION LED : interrupteur d'éclairage LED avant</p> <p>3. MIC. VOL : volume du micro</p> <p>4. Entrée de carte SD</p> <p>5. ENTRÉE GUITARE : Prise d'entrée guitare</p> <p>6. REC : fonction d'enregistrement</p> <p>7. MIC PRIORITY : le volume de la musique diminue lorsque vous parlez dans le micro</p> <p>8. PREV/CH : Appui court pour la piste précédente en mode MP3 ; Appui court pour la chaîne précédente en mode FM.</p> <p>9. AFFICHAGE LED : affichage LED</p> <p>10. PLAY/SCAN : Appuyez brièvement pour lire ou mettre en pause en mode MP3 ; Appuyez brièvement pour rechercher automatiquement et pré régler les fréquences disponibles en mode FM.</p> | <p>11. NEXT/CH+ : Appui court pour la piste suivante en mode MP3 ; Appui court pour la chaîne suivante en mode FM.</p> <p>12. MODE : Basculer pour sélectionner Bluetooth, Ligne, FM, USB/TF. Appuyez longuement sur le bouton MODE pour activer la fonction TWS</p> <p>13. CIM. ENTRÉE : Entrée microphone filaire</p> <p>14. USB : lecteur de musique USB</p> <p>15. VOLUME : Contrôle du volume principal</p> <p>16. BASSE : contrôle des basses</p> <p>17. AIGUS : contrôle des aigus</p> <p>18. ÉCHO : écho du microphone</p> <p>19. GT. VOL : Volume de la guitare</p> <p>20. DOME LIGHT: Lumières de fête boule disco</p> |
|---|--|

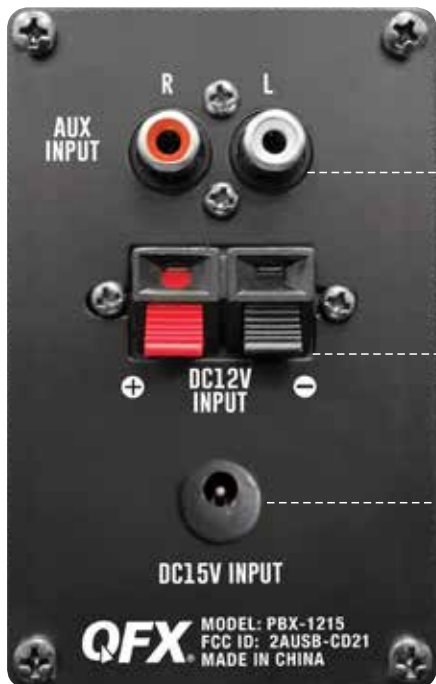 

- 21. ENTRÉE AUX : entrée audio
- 22. ENTRÉE CC 12V: CC externe 12V
- 23. ENTRÉE CC : entrée CC 15 V

 TÉLÉCOMMANDE

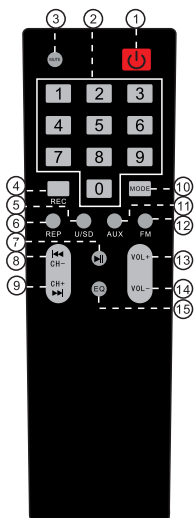

1. Marche/Arrêt : met l'appareil sous/hors tension
2. Numéro : clavier numérique (0-10)
3. MUTE : Appuyez pour couper le volume
4. REC : enregistrement
5. U/SD : entrée de signal
6. REP : Appuyez pour répéter et/ou mélanger
7. Appuyez sur pour jouer ou mettre en pause
8. Piste/chaîne précédente
9. Piste/chaîne suivante
10. MODE : Sélectionnez la source (BT, Ligne, FM, USB/TF)
11. AUX : entrée auxiliaire
12. FM : radio FM
13. VOL+ : augmenter le volume
14. VOL- : Diminuer le volume
15. EQ : Préréglages de l'égaliseur

CHARGER LE HAUT-PARLEUR

1. La recharge complète prend 8 à 12 heures.
2. Veuillez utiliser le câble de charge fourni pour charger le haut-parleur.
3. Lorsque vous utilisez votre appareil alors qu'il est branché à une source d'alimentation externe, l'interrupteur de la batterie peut être activé ou désactivé.
4. Pour protéger la durée de vie de la batterie intégrée, assurez-vous de charger complètement votre appareil le jour même où la batterie est épuisée. Ne pas charger votre appareil immédiatement peut affecter les performances de la batterie.

INSTRUCTIONS POUR LE MICROPHONE FILAIRE

1. Insérez la fiche du microphone dans la prise d'entrée du microphone.
2. Ajustez le bouton de volume du microphone MIC VOL pour un volume approprié.
3. Ajustez la profondeur de l'écho à la bonne position.
4. Vous pouvez maintenant commencer à utiliser votre microphone.

BLUETOOTH

Vous pouvez connecter vos appareils Bluetooth sans fil compatibles, tels qu'un téléphone mobile, une tablette, etc., pour écouter des pistes audio. Appuyez sur le bouton MODE du haut-parleur ou de la télécommande pour passer en mode sans fil, indiqué sur l'écran LED. Sélectionnez "QFX PBX-1215" dans les paramètres de votre appareil pour coupler, et une fois réussi, vous entendrez un son d'avertissement sur le haut-parleur.

PRÉCAUTIONS

Pour éviter des problèmes de fonctionnement ou des dommages graves au haut-parleur, veuillez suivre les précautions ci-dessous :

1. Débranchez le cordon d'alimentation de l'extrémité de la fiche. Ne tirez pas sur le fil.
2. Le haut-parleur doit être tenu à l'écart d'autres sources de chaleur.
3. N'essayez pas d'ouvrir le haut-parleur interne ou de modifier les circuits car cela pourrait endommager l'appareil ou provoquer un choc électrique.
4. Si vous n'utilisez pas l'appareil pendant une longue période, débranchez la fiche et rangez-la dans un endroit frais et sec.
5. Assurez-vous que le haut-parleur est correctement ventilé et conservé dans un endroit sec. Il est recommandé de maintenir le haut-parleur à au moins 4 pouces de tout mur ou objet.

AVERTISSEMENT : N'utilisez pas ce haut-parleur dans un endroit humide, sous la pluie ou dans un endroit très humide. Ne placez aucun liquide ou autre objet sur le haut-parleur car cela pourrait provoquer un court-circuit accidentel.

* Les spécifications peuvent être modifiées sans préavis.

* Toutes les marques et noms commerciaux appartiennent à leurs propriétaires respectifs.

	<p>MISE EN GARDE</p> <p>RISQUE D'ÉLECTRIQUE CHOC NE PAS OUVRIR ATTENTION POUR RÉDUIRE LE RISQUE D'ÉLECTRIQUE CHOC. NE PAS RETIRER LE COUVERCLE (OU RETOUR) AUCUN UTILISATEUR PIÈCES RÉPARABLES À L'INTÉRIEUR. RÉFÉRER SERVICE À SERVICE QUALIFIÉ PERSONNEL.</p>	
<p>Le flash de foudre et pointe de flèche à l'intérieur le triangle est un panneau d'avertissement alertant vous de "dangereux" "tension" à l'intérieur du produit.</p>		<p>Le point d'exclamation dans le triangle est un warningsign alerting vous important instructions accompagnement le produit</p>

Le point d'exclamation à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur de la présence des instructions importantes d'utilisation et de maintenance (entretien) dans la documentation accompagnant le produit. Le flash avec symbole de pointe de flèche à l'intérieur d'un triangle équilatéral est destiné à alerter l'utilisateur de la présence d'une "tension dangereuse" non isolée dans l'enceinte du produit, qui peut être d'une amplitude suffisante pour induire un risque de choc électrique pour les personnes

REMARQUES: N'essayez pas d'ouvrir le couvercle arrière ou l'adaptateur secteur car l'ouverture ou le retrait des couvercles peut vous exposer à une tension dangereuse ou à d'autres dangers, et cela entretien restreint à désactiver: il n'y a aucun composant d'entretien utilisateur à l'intérieur.