

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.

Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.

**WARNING!**

POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CETTE ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter un incendie ou un choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas ou n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que des radiateurs, des registres de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.

Les utilisateurs doivent faire preuve de plus de sécurité lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont indiquées.

PBX-157 BATTERY

The PBX-157 is a lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (4-5 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is charging, the battery indicator light is red. Once the battery is fully charged, the indicator light will turn off. After fully recharging the speaker, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

BATERÍA PBX-157

El PBX-157 es un altavoz PA alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (4-5 horas para cargar completamente la batería de litio). Incluso si la batería está baja, se encenderá cuando esté conectada a una fuente de alimentación. Cuando la energía de la batería se está cargando, la luz indicadora de la batería es roja. Una vez que la batería esté completamente cargada, la luz indicadora se apagará. Después de recargar completamente el altavoz, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días.

BATTERIE PBX-157

Le PBX-157 est un haut-parleur de sonorisation alimenté par batterie au lithium. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (4 à 5 heures pour charger complètement la batterie au lithium). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Une fois la batterie complètement chargée, le voyant s'éteint. Après avoir complètement rechargé le haut-parleur, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être réglé sur OFF pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perdra progressivement de sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

FUNCTIONS:


1. **POWER:** ON/OFF Power Switch
2. **VOLUME:** Speaker system volume control
3. **TREBLE:** Trebel Control
4. **BASS:** Bass Control
5. **MIC ECHO:** Mic Echo Control
6. **MIC VOL:** Mic Volume Control
7. **MODE/LED:** Button to toggle between sources (AUX, USB, TF, FM, BT). Press and hold to turn light on or off
 - ◀◀: Select previous track
 - ▶▶: Play or pause music track. See TWS instruction below.
 - ▶▶: Press to select next track or station; press and hold to select/ exit Mic Priority
8. **TF:** TF Card Slot
9. **USB:** USB Port
10. **AUX:** Aux input for connecting external audio source
11. **MIC IN:** Microphone input jack
12. **DC 13.5V:** Power adapter input jack
13. **LED:** Battery indicator light

FUNCIONES:

1. **POWER:** Interruptor de encendido/apagado
2. **VOLUME:** control de volumen del sistema de altavoces
3. **TREBLE:** control de agudos
4. **BASS:** Control de graves
5. **ECHO:** Control de eco de micrófono
6. **MIC VOL:** control de volumen del micrófono
7. **MODE/LED:** Botón para alternar entre fuentes (AUX, USB, TF, FM, BT). Mantenga presionado para encender o apagar la luz
 - ◀◀: selecciona la pista anterior
 - ▶▶: reproducir o pausar la pista de música. Consulte las instrucciones de TWS a continuación.
 - ▶▶: presione para seleccionar la siguiente pista o estación; manténgalo presionado para seleccionar/salir de Prioridad de micrófono
8. **TF:** ranura para tarjeta TF
9. **USB:** puerto USB
10. **AUX:** Entrada auxiliar para conectar una fuente de audio externa
11. **MIC IN:** toma de entrada de micrófono
12. **DC 13.5V:** toma de entrada del adaptador de corriente
13. **LED:** luz indicadora de batería

LES FONCTIONS

1. **POWER :** interrupteur marche/arrêt
2. **VOLUME :** Contrôle du volume du système de haut-parleurs
3. **TREBLE :** contrôle des aigus
4. **BASS :** contrôle des basses
5. **ÉCHO :** contrôle de l'écho du micro
6. **MIC VOL :** Contrôle du volume du micro
7. **MODE/LED :** Bouton pour basculer entre les sources (AUX, USB, TF, FM, BT). Appuyez et maintenez enfoncé pour allumer ou éteindre la lumière
 - ◀◀ : sélectionner la piste précédente
 - ▶▶ : Lecture ou pause de la piste musicale. Voir les instructions TWS ci-dessous.
 - ▶▶ : Appuyez pour sélectionner la piste ou la station suivante ; appuyez et maintenez enfoncé pour sélectionner/quitter la priorité micro
8. **TF :** Emplacement pour carte TF
9. **USB :** Port USB
10. **AUX :** entrée Aux pour connecter une source audio externe
11. **MIC IN :** prise d'entrée microphone
12. **DC 13.5V :** prise d'entrée de l'adaptateur secteur
13. **LED :** Voyant de la batterie

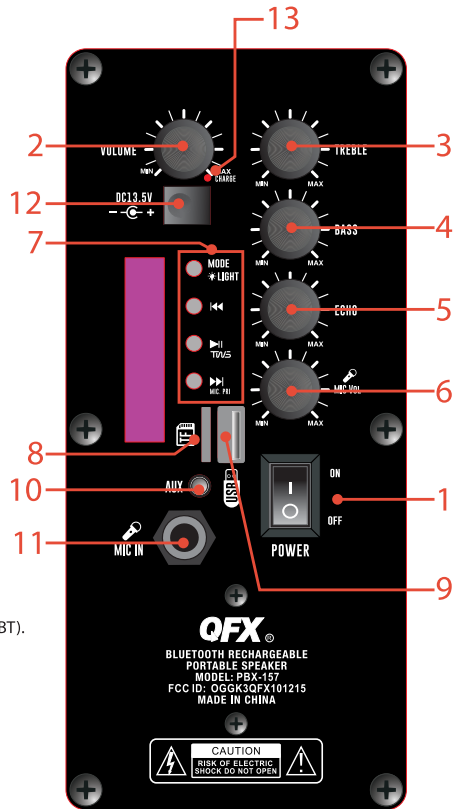

QFX
 BLUETOOTH RECHARGEABLE
 PORTABLE SPEAKER
 MODEL PBX-157
 FCC ID: QGGK3QFX101215
 MADE IN CHINA



Follow Us



QFXUSA.COM



WHERE THE PARTY BEGINS™

DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the input mode for USB/TF/BT AUX/FM. When a USB flash drive or TF card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing MP3 audio files from the USB flash drive/TF card.
2. Track Number: The track number currently playing from the USB/TF will be shown on the display.
3. FM Mode: All FM stations will be displayed here. Short press "Play/Pause" button for auto scanning all channels. When using FM mode, it is suggested to turn off the LED lights for best performance.

AJUSTES DEL SISTEMA DE PANTALLA


1. Modo de entrada: la pantalla LED mostrará el modo de entrada para USB/TF/BT AUX/FM. Cuando una unidad flash USB o TF se inserta la tarjeta en la entrada USB/TF, la unidad cambiará automáticamente al modo USB/TF y comenzará a reproducir MP3 archivos de audio desde la unidad flash USB/tarjeta TF.
2. Número de pista: el número de pista que se está reproduciendo actualmente desde el USB/TF se mostrará en la pantalla.
3. Modo FM: Todas las estaciones de FM se mostrarán aquí. Presione brevemente el botón "Reproducir/Pausar" para escanear automáticamente todos los canales. Al usar el modo FM, se sugiere apagar las luces LED para un mejor rendimiento.

AJUSTEMENTS DU SYSTÈME DE PANTALLA

1. Mode d'entrée : l'écran d'affichage LED affichera le mode d'entrée pour USB/TF/BT AUX/FM. Lorsqu'un lecteur flash USB ou TF la carte est insérée dans l'entrée USB/TF, l'appareil passera automatiquement en mode USB/TF et commencera à lire le MP3 fichiers audio de la clé USB/carte TF.
2. Numéro de piste : Le numéro de piste en cours de lecture à partir de l'USB/TF s'affichera à l'écran.
3. Mode FM : Toutes les stations FM seront affichées ici. Appuyez brièvement sur le bouton "Lecture/Pause" pour balayer automatiquement tous les canaux. Lorsque vous utilisez le mode FM, il est suggéré d'éteindre les lumières LED pour de meilleures performances.

REMOTE CONTROL

1. : ON / Standby mode
2. **MODE**: Select USB,TF,FM,AUX, BT
3. : Mute Audio
4. : PLAY/PAUSE
5. : Select previous channel
6. : Select next channel.
7. **EQ**: Select EQ mode.
8. **VOL-**: Reduce the master volume
9. **VOL+**: Increase the master volume
10. **REP**: Repeat the playing track.
11. **SCAN**: Press to Scan Channel in FM Mode
12. **0-9**: for selecting the certain track for USB flash drive or TF card.

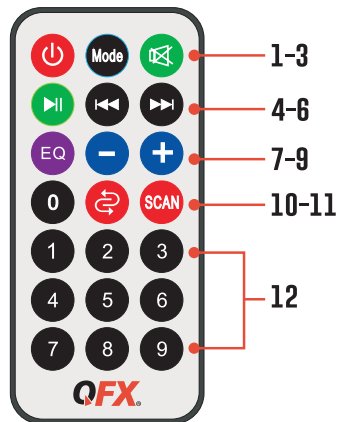**CONTROL REMOTO**

1. : ENCENDIDO / Modo de espera
2. **MODE**: seleccione USB, TF, FM, AUX, BT
3. : Silenciar el audio
4. : REPRODUCCIÓN/PAUSA
5. : Seleccione el canal anterior
6. : Seleccione el siguiente canal.
7. **EQ**: selecciona el modo EQ.
8. **VOL-**: Reduce el volumen maestro
9. **VOL+**: aumenta el volumen maestro
10. **REP**: repite la pista de reproducción.
11. **SCAN**: presione para escanear canales en modo FM
12. **0-9**: para seleccionar ciertos pista para unidad flash USB o tarjeta TF.

TÉLÉCOMMANDÉ

1. : Marche / Mode veille
2. **MODE**: sélectionnez USB, TF, FM, AUX, BT
3. : Couper le son
4. : LECTURE/PAUSE
5. : sélectionner la chaîne précédente
6. : Sélectionnez la chaîne suivante.
7. **EQ**: sélectionnez le mode EQ.
8. **VOL-**: Réduit le volume principal
9. **VOL+**: Augmente le volume principal
10. **REP**: Répète la piste en cours de lecture.
11. **SCAN**: Appuyez pour balayer la chaîne en mode FM
12. **0-9**: pour sélectionner le certain piste pour lecteur flash USB ou carte TF.

TWS
TRUE WIRELESS STEREO**Sync two speakers to play audio simultaneously**

1. TWS connection: True Wireless Stereo (TWS) requires two of the same model PBX-157 speakers to be used.
2. Turn on the speakers, press the MODE button to switch to BLUETOOTH mode, and the word "BLUE" on the LED screen will flash.
3. Then press and hold the Play/Pause (TWS) button of one of unit for 3 seconds. The two speakers will connect together.
4. Connect the mobile device: Open the phone Bluetooth settings on your mobile device, search and pair to Bluetooth Name "QFX PBX-157".
5. Now you can play music from your mobile device in True Wireless Stereo (TWS).
6. To exist TWS mode, press and hold the Play/Pause (TWS) button for 3 seconds.

TWS
TRUE WIRELESS STEREO**Sincroniza dos altavoces para reproducir audio simultáneamente**

1. Conexión TWS: True Wireless Stereo (TWS) requiere dos del mismo modelo Se utilizarán altavoces PBX-157.
2. Encienda los altavoces, presione el botón MODE para cambiar al modo BLUETOOTH, y la palabra "BLUE" en la pantalla LED parpadeará.
3. Luego, mantenga presionado el botón Reproducir/Pausar (TWS) de una de las unidades durante 3 segundos. Los dos altavoces se conectarán juntos.
4. Conecte el dispositivo móvil: abra la configuración de Bluetooth del teléfono en su móvil dispositivo, busque y empareje con el nombre de Bluetooth "QFX PBX-157".
5. Ahora puede reproducir música desde su dispositivo móvil en True Wireless Stereo (TWS).
6. Para salir del modo TWS, mantenga presionado el botón Reproducir/Pausar (TWS) durante 3 segundos.

TWS
TRUE WIRELESS STEREO**Synchronisez deux haut-parleurs pour lire de l'audio simultanément**

1. Connexion TWS : True Wireless Stereo (TWS) nécessite deux modèles identiques Haut-parleurs PBX-157 à utiliser.
2. Allumez les haut-parleurs, appuyez sur le bouton MODE pour passer en mode BLUETOOTH, et le mot "BLUE" sur l'écran LED clignotera.
3. Appuyez ensuite sur le bouton Lecture/Pause (TWS) de l'un des appareils et maintenez-le enfoncé pendant 3 secondes. Les deux haut-parleurs se connecteront ensemble.
4. Connectez l'appareil mobile : ouvrez les paramètres Bluetooth du téléphone sur votre mobile périphérique, recherchez et jumelez le nom Bluetooth « QFX PBX-157 ».
5. Vous pouvez maintenant écouter de la musique à partir de votre appareil mobile en True Wireless Stereo (TWS).
6. Pour activer le mode TWS, appuyez sur le bouton Lecture/Pause (TWS) et maintenez-le enfoncé pendant 3 secondes.

BLUETOOTH MODE: Toggle to Bluetooth mode. Enable Bluetooth on your Bluetooth device. Find "QFX PBX-157" to connect to the speaker. After a successful pairing, you can play the music from your device wirelessly through the speaker. You do not need to reconnect the Bluetooth when switching modes.

MODO BLUETOOTH: Cambia al modo Bluetooth. Habilite Bluetooth en su dispositivo Bluetooth. Busque "QFX PBX-157" para conectarse al altavoz. Después de un emparejamiento exitoso, puede reproducir la música de su dispositivo de forma inalámbrica a través del altavoz. No tienes que conectar el Bluetooth cuando cambie de modos.

MODE BLUETOOTH: Passez en mode Bluetooth. Activez Bluetooth sur votre appareil Bluetooth. Trouvez "QFX PBX-157" pour vous connecter au conférencier. Après un couplage réussi, vous pouvez écouter la musique de votre appareil sans fil via le haut-parleur. Tu n'as pas besoin de reconnectez le Bluetooth lorsque vous changez de mode.

FM RADIO / RADIO FM

Frequency-Modulated stations operate in a frequency band extending from 87.5 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press the Play/Pause button to scan available frequencies in the area.

Las estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz hasta 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir/Pausar para buscar las frecuencias disponibles en el área.

Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87.5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture/Pause pour balayer les fréquences disponibles dans la zone.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.

RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

📧 support@qfxusa.com
☎️ (800) 864-CLUB (2582) or (323) 864-6900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



www.qfxusa.com



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PBX-157 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

