

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

SAFETY

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN.

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety and follow all precautions as they are stated.

LA SEGURIDAD


PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. CONSULTE TODOS LOS SERVICIOS A UN TÉCNICO CALIFICADO.

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor. Limpie solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional y seguir todas las precauciones tal como se indican.

SÉCURITÉ

POUR RÉDUIRE LE RISQUE D'ÉLECTROCUTION, NE RETIREZ PAS LE COUVERCLE DE CETTE ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter un incendie ou un choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas ou n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que des radiateurs, des registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de plus de sécurité et suivre toutes les précautions telles qu'elles sont indiquées.

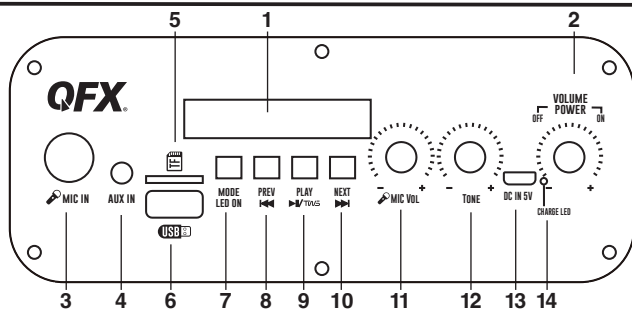

FUNCTIONS:

- 1. DISPLAY:** LED Display of Key Functions
- 2. POWER/VOLUME CONTROL:** ON/OFF Power and Master Volume Up/Down Control Knob
- 3. MIC IN:** 1/4" Microphone Input Jack
- 4. AUX IN:** 3.5mm Aux Input Jack to Connect to External Audio Source
- 5. TF CARD:** TF Card Slot to Play MP3 Music
- 6. USB:** USB Port to Play MP3 Music
- 7. MODE/LED ON:** Short-Press to Select AUX, USB/TF, FM or BT Modes. Press-and-Hold to Turn Party Light On or Off.
- 8. PREV ⏮:** Press to Select Previous Track or Radio Station
- 9. PLAY ▶||TWS Button:**
 - Short-press to play/pause music.
 - Press-and-hold to establish TWS wireless connection

- between two PBX-801 speakers. Under Bluetooth mode, press TWS button on **one speaker only** for 3 seconds to establish pairing with a second PBX-801 speaker (sold separately).
 - In FM mode, short-press to enter automatic scanning of radio stations. All scanned stations will be saved automatically.
- 10. NEXT ▶▶:** Press to Select Next Track or Radio Station
 - 11. MIC. VOL:** Microphone Volume Control Knob
 - 12. TONE:** Knob to Adjust the Tonal Balance
 - 13. DC IN 5V:** USB Charging Input (5VDC / 1A Minimum)
 - 14. LED:** Battery Charging LED Indicator (Red=Charging, Off=Fully Charged)

FUNCIONES:

- 1. PANTALLA:** Pantalla LED de funciones clave
- 2. CONTROL DE ENCENDIDO/VOLUMEN:** Perilla de control de encendido/apagado y volumen maestro arriba/abajo
- 3. ENTRADA DE MICRÓFONO:** Conector de entrada de micrófono de 1/4"
- 4. AUX IN:** conector de entrada auxiliar de 3,5 mm para conectar a una fuente de audio externa
- 5. TARJETA TF:** ranura para tarjeta TF para reproducir música MP3
- 6. USB:** puerto USB para reproducir música MP3
- 7. MODO/LED ENCENDIDO:** presione brevemente para seleccionar los modos AUX, USB/TF, FM o BT. Mantenga presionado para encender o apagar Party Light.
- 8. ANTERIOR ⏮:** presione para seleccionar la pista anterior o la estación de radio
- 9. Botón JUGAR ▶||TWS:**
 - Presione brevemente para reproducir/pausar música.

- Mantenga presionado para establecer una conexión inalámbrica TWS entre dos altavoces PBX-801. En el modo Bluetooth, presione el botón TWS en un altavoz solo durante 3 segundos para establecer el emparejamiento con un segundo altavoz PBX-801 (se vende por separado).
 - En el modo FM, presione brevemente para ingresar a la búsqueda automática de estaciones de radio. Todas las estaciones escaneadas se guardarán automáticamente.
- 10. SIGUIENTE ▶▶:** presione para seleccionar la siguiente pista o estación de radio
 - 11. MICRÓFONO. VOL:** perilla de control de volumen del micrófono
 - 12. TONE:** perilla para ajustar el balance tonal
 - 13. DC IN 5V:** Entrada de carga USB (5VDC / 1A mínimo)
 - 14. LED:** indicador LED de carga de la batería (rojo = cargando, apagado = completamente cargado).

LES FONCTIONS:

- 1. AFFICHAGE:** Affichage LED des fonctions clés
- 2. CONTRÔLE D'ALIMENTATION/VOLUME:** Marche/Arrêt et bouton de contrôle du volume principal haut/bas
- 3. MIC IN:** Prise d'entrée microphone 1/4"
- 4. AUX IN:** prise d'entrée auxiliaire 3,5 mm pour se connecter à une source audio externe
- 5. CARTE TF:** Emplacement pour carte TF pour lire de la musique MP3
- 6. USB:** port USB pour lire de la musique MP3
- 7. MODE/LED ON:** Appuyez brièvement pour sélectionner les modes AUX, USB/TF, FM ou BT. Appuyez et maintenez enfoncé pour allumer ou éteindre la lumière de fête.
- 8. PREV ⏮:** Appuyez pour sélectionner la piste ou la station de radio précédente
- 9. Bouton JOUER ▶||TWS:**
 - Appuyez brièvement pour lire/mettre en pause la musique.

- Maintenez enfoncé pour établir une connexion sans fil TWS entre deux haut-parleurs PBX-801. En mode Bluetooth, appuyez sur le bouton TWS d'un seul haut-parleur pendant 3 secondes pour établir le jumelage avec un deuxième haut-parleur PBX-801 (vendu séparément).
 - En mode FM, appuyez brièvement pour entrer dans le balayage automatique des stations de radio. Toutes les stations scannées seront enregistrées automatiquement.
- 10. NEXT ▶▶:** Appuyez pour sélectionner la piste ou la station de radio suivante
 - 11. MIC. VOL:** Bouton de contrôle du volume du microphone
 - 12. TONE:** bouton pour régler la balance tonale
 - 13. DC IN 5V:** entrée de charge USB (5VDC / 1A minimum)
 - 14. LED:** indicateur LED de charge de la batterie (rouge = charge, éteint = entièrement chargé).

POWER SOURCE

1. Charge the unit at least four hours prior to first use and then recharge it as needed in the future.
2. Turn to system on turning the power knob.

CHARGE THE BATTERY

When the battery is charging, the charge LED indicator will be red and turn off when fully charged.

1. Connect the USB charge cable to the DC5V interface of the speaker firmly.
2. Once the battery is fully charged, disconnect the USB charge cable from the speaker.
3. The speaker functions normally while charging.

FM FUNCTION

1. Short-press the MODE/LED ON button to toggle to FM mode.
2. Press the PLAY/PAUSE button on control panel to automatically search and save radio stations.
3. Then press PREVIOUS or NEXT to select and listen to saved radio stations.

BLUETOOTH

1. Long-press MODE/LED ON button to toggle to Bluetooth (BT) mode.
2. Open the Bluetooth setting on your phone, tablet or any other Bluetooth-enabled audio device and select "QFX PBX-801".
3. The unit and device will then connected via Bluetooth.

PBX-801 TRUE WIRELESS STEREO (TWS)

True Wireless Stereo (TWS) allows for two speakers of the same model to connect wirelessly in stereo. You will need two PBX-801 speakers in order for TWS operation to function. **To set up TWS:**

1. Turn on both PBX-801 speakers, toggle the MODE button to BLUETOOTH mode on both speakers.
2. To set up TWS operation, press the PLAY ► TWS button on only one speaker for 3 seconds. Then both speakers will connect together.
3. Next, connect your Bluetooth-enabled phone to the speaker. Go to your phone Bluetooth settings, search and connect to Bluetooth name "QFX PBX-801".
4. Once the connection has been established, you can play music from your phone and enjoy True Wireless Stereo audio playing through your two PBX-801 speakers.
5. To exit TWS mode, long press the PLAY ► TWS button for 3 seconds to exit TWS.

FUENTE DE ALIMENTACIÓN

1. Cargue la unidad al menos cuatro horas antes del primer uso y luego recárguela según sea necesario en el futuro.
2. Gire al sistema al girar la perilla de encendido.

CARGA LA BATERÍA

Cuando la batería se está cargando, el indicador LED de carga estará rojo y se apagará cuando esté completamente cargada.

1. Conecte firmemente el cable de carga USB a la interfaz DC5V del altavoz.
2. Una vez que la batería esté completamente cargada, desconecte el cable de carga USB del altavoz.
3. El altavoz funciona normalmente mientras se carga.

FUNCION FM

1. Presione brevemente el botón MODE/LED ON para cambiar al modo FM.
2. Presione el botón PLAY/PAUSE en el panel de control para buscar y guardar estaciones de radio automáticamente.
3. Luego presione ANTERIOR o SIGUIENTE para seleccionar y escuchar las estaciones de radio guardadas.

BLUETOOTH

1. Mantenga presionado el botón MODE/LED ON para cambiar al modo Bluetooth (BT).
2. Abra la configuración de Bluetooth en su teléfono, tableta o cualquier otro dispositivo de audio habilitado para Bluetooth y seleccione "QFX PBX-801".
3. La unidad y el dispositivo se conectarán a través de Bluetooth.

PBX-801 ESTÉREO INALÁMBRICO VERDADERO (TWS)

True Wireless Stereo (TWS) permite que dos altavoces del mismo modelo se conecten de forma inalámbrica en estéreo. Necesitará dos altavoces PBX-801 para que funcione la operación TWS. **Para configurar TWS:**

1. Encienda ambos altavoces PBX-801, cambie el botón MODE al modo BLUETOOTH en ambos altavoces.
2. Para configurar la operación TWS, presione el botón PLAY ►|| TWS en un solo altavoz durante 3 segundos. Entonces ambos altavoces se conectarán juntos.
3. A continuación, conecte su teléfono con Bluetooth al altavoz. Vaya a la configuración de Bluetooth de su teléfono, busque y conéctese al nombre de Bluetooth "QFX PBX-801".
4. Una vez que se haya establecido la conexión, puede reproducir música desde su teléfono y disfrutar de la reproducción de audio True Wireless Stereo a través de sus dos altavoces PBX-801.
5. Para salir del modo TWS, mantenga presionado el botón PLAY ►|| TWS durante 3 segundos para salir de TWS.

SOURCE D'ÉNERGIE

1. Chargez l'appareil au moins quatre heures avant la première utilisation, puis rechargez-le si nécessaire à l'avenir.
2. Allumez le système en tournant le bouton d'alimentation.

CHARGER LA BATTERIE

Lorsque la batterie est en charge, le voyant LED de charge est rouge et s'éteint lorsqu'il est complètement chargé.

1. Connectez fermement le câble de charge USB à l'interface DC5V du haut-parleur.
2. Une fois la batterie complètement chargée, débranchez le câble de charge USB de l'enceinte.
3. Le haut-parleur fonctionne normalement pendant la charge.

FONCTION FM

1. Appuyez brièvement sur le bouton MODE/LED ON pour basculer en mode FM.
2. Appuyez sur le bouton PLAY/PAUSE du panneau de commande pour rechercher et enregistrer automatiquement les stations de radio.
3. Appuyez ensuite sur PREVIOUS ou NEXT pour sélectionner et écouter les stations de radio enregistrées.

BLUETOOTH

1. Appuyez longuement sur le bouton MODE/LED ON pour basculer en mode Bluetooth (BT).
2. Ouvrez le paramètre Bluetooth sur votre téléphone, tablette ou tout autre appareil audio compatible Bluetooth et sélectionnez "QFX PBX-801".
3. L'appareil et l'appareil seront ensuite connectés via Bluetooth.

PBX-801 VÉRITABLE STÉRÉO SANS FIL (TWS)

True Wireless Stereo (TWS) permet à deux haut-parleurs du même modèle de se connecter sans fil en stéréo. Vous aurez besoin de deux haut-parleurs PBX-801 pour que le fonctionnement TWS fonctionne. **Pour configurer TWS:**

1. Allumez les deux haut-parleurs PBX-801, basculez le bouton MODE sur le mode BLUETOOTH sur les deux haut-parleurs.
2. Pour configurer le fonctionnement TWS, appuyez sur le bouton PLAY ►|| TWS sur un seul haut-parleur pendant 3 secondes. Ensuite, les deux haut-parleurs se connecteront ensemble.
3. Ensuite, connectez votre téléphone compatible Bluetooth au haut-parleur. Accédez aux paramètres Bluetooth de votre téléphone, recherchez et connectez-vous au nom Bluetooth "QFX PBX-801".
4. Une fois la connexion établie, vous pouvez écouter de la musique à partir de votre téléphone et profiter de l'audio True Wireless Stereo via vos deux haut-parleurs PBX-801.
5. Pour quitter le mode TWS, appuyez longuement sur le bouton PLAY ►|| TWS pendant 3 secondes pour quitter TWS.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2022 ©



www.qfxusa.com



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PBX-801 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

