

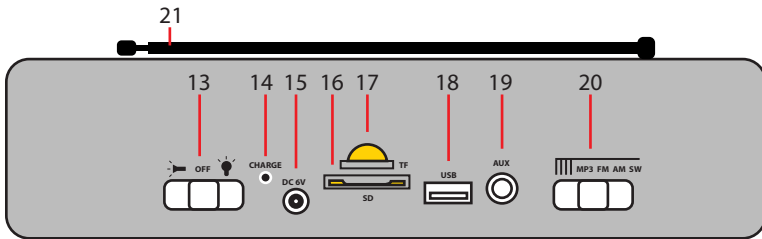
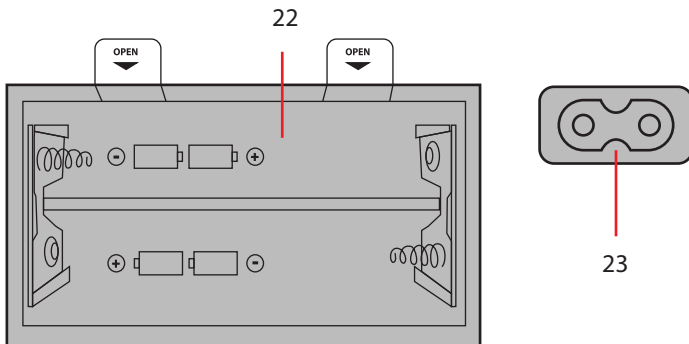
R-333BT

OFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

TOP**FRONT****BACK**

FUNCTION:

01. POWER/VOLUME: ON/OFF. Adjust the knob to increase or decrease the volume.
02. PLAY/PAUSE: Play or Pause current MP3 audio track.
03. MP3 LIGHT: Indicates that the MP3 mode is enabled.
04. FLOOD LIGHT: Front LED flood light.
05. PREVIOUS TRACK: Select previous MP3 audio track.
06. NEXT TRACK BUTTON: Select next MP3 audio track.
07. REPEAT: Press to select repeat mode, One/All tracks.
08. TUNNING: Turn the dial to fine tune the desired radio station.
09. EQ: Press to select one of the EQ presets.
10. MODE BUTTON: Press to enable AUX, USB/TF/SD, or BT mode.
11. STRAP: Adjust the caring strap to the perfect length.
12. FLASHLIGHT: Side LED flashlight.
13. LED SWITCH: Select the flashlight or Flood light using the switch.
14. CHARGE LIGHT: Shows when the unit is charging. 6-8 hours to fully charge.
15. DC 6V INPUT: Connect the provide power supply to recharge the unit.
16. SD Card Port: Insert a SD Card for music playback.
17. TF Card Port: Insert a TF Card for music playback.
18. USB Port: Insert a USB device for music playback.
19. AUX IN: Insert a 3.5mm TRS audio cable to play music form an external audio device.
20. RADIO SWITCH: Select from MP3, FM: 88.5-108MHz, AM: 530-1600KHz, or SW: 8-16MHz.
21. ANTENNA: Extend and adjust the antenna for better radio reception.
22. BATTERY COMPARTMENT: Insert 4 (1.5V UM-1) Batteries. Type-D. *Remove if recharging internal battery.
23. POWER SUPPLY: AC 100-240V 60/50Hz. For continuous use. *This will not charge the rechargeable battery.

FUNCION:

01. ENCENDIDO / VOLUMEN: ENCENDIDO / APAGADO. Ajuste la perilla para aumentar o disminuir el volumen.
02. REPRODUCCIÓN / PAUSA: Reproduce o pausa la pista de audio MP3 actual.
03. LUZ DE MP3: Indica que el modo MP3 está habilitado.
04. FLOOD LIGHT: Proyector LED frontal.
05. PISTA ANTERIOR: Selecciona la pista de audio MP3 anterior.
06. BOTÓN SIGUIENTE PISTA: Selecciona la siguiente pista de audio MP3.
07. REPETIR: Presione para seleccionar el modo de repetición, Una / Todas las pistas.
08. SINTONIZACIÓN: Gire el dial para sintonizar con precisión la estación de radio deseada.
09. EQ: Presione para seleccionar uno de los preajustes de EQ.
10. BOTÓN DE MODO: Presiónelo para habilitar el modo AUX, USB / TF / SD o BT.
11. CORREA: Ajuste la correa protectora a la longitud perfecta.
12. LINTERNA: Linterna LED lateral.
13. INTERRUPTOR DE LED: Seleccione la linterna o la luz de inundación usando el interruptor.
14. LUZ DE CARGA: Muestra cuando la unidad se está cargando.
15. ENTRADA DC 6V: Conecte la fuente de alimentación para recargar la unidad. 6-8 horas para cargar completamente.
16. PUERTO DE TARJETA SD: Inserte una tarjeta SD para reproducir música.
17. PUERTO PARA TARJETA TF: Inserte una tarjeta TF para reproducir música.
18. PUERTO USB: Inserte un dispositivo USB para reproducir música.
19. AUX IN: Inserte un cable de audio TRS de 3.5 mm para reproducir música desde un dispositivo de audio externo.
20. INTERRUPTOR DE RADIO: Seleccione entre MP3, FM: 88.5-108MHz, AM: 530-1600KHz, or SW: 8-16MHz.
21. ANTENA: Extienda y ajuste la antena para una mejor recepción de radio.
22. COMPARTIMENTO DE BATERÍAS: Inserte 4 baterías (1.5V UM-1). Tipo-D. *Retirar si está recargando la batería interna.
23. ALIMENTACIÓN: CA 100-240V 60 / 50Hz. Para uso continuo. * Esto no cargará la batería recargable.

**WHERE THE PARTY BEGINS™**

FUNCTION:

01. ALIMENTATION/VOLUME : MARCHE/ARRÊT. Ajustez le bouton pour augmenter ou diminuer le volume.
02. PLAY/PAUSE : Lecture ou pause de la piste audio MP3 actuelle.
03. LUMIÈRE MP3 : Indique que le mode MP3 est activé.
04. PROJECTEUR : Projecteur LED avant.
05. PISTE PRÉCÉDENTE : Sélectionnez la piste audio MP3 précédente.
06. BOUTON NEXT TRACK: Sélectionnez la piste audio MP3 suivante.
07. REPEAT : Appuyez pour sélectionner le mode de répétition, une/toutes les pistes.
08. TUNNING : Tournez la molette pour régler finement la station de radio souhaitée.
09. EQ : Appuyez pour sélectionner l'un des pré-réglages EQ.
10. BOUTON MODE : Appuyez pour activer le mode AUX, USB/TF/SD ou BT.
11. SANGLE : Ajustez la sangle de soins à la longueur parfaite.
12. LAMPE DE POCHE : lampe de poche à DEL latérale.
13. INTERRUPTEUR LED : Sélectionnez la lampe de poche ou le projecteur à l'aide de l'interrupteur.
14. VOYANT DE CHARGE : S'affiche lorsque l'appareil est en charge.
15. ENTRÉE CC 6V : Connectez l'alimentation électrique pour recharger l'unité. 6-8 heures pour charger complètement.
16. Port de carte SD : insérez une carte SD pour la lecture de musique.
17. Port de carte TF : insérez une carte TF pour la lecture de musique.
18. Port USB : Insérez un périphérique USB pour la lecture de musique.
19. AUX IN : Insérez un câble audio TRS 3.5 mm pour lire de la musique à partir d'un périphérique audio externe.
20. COMMUTATEUR RADIO : Sélectionnez parmi MP3, FM: 88.5-108MHz, AM: 530-1600KHz, or SW: 8-16MHz.
21. ANTENNE : Déployez et ajustez l'antenne pour une meilleure réception radio.
22. COMPARTIMENT DES PILES : Insérez 4 piles (1.5 V UM-1). Type-D. *Retirez si vous rechargez la batterie interne.
23. ALIMENTATION : CA 100-240V 60/50Hz. Pour une utilisation continue. *Cela ne chargera pas la batterie rechargeable..

BLUETOOTH:

-Bluetooth mode: use the MODE button to enable Bluetooth on the QFX R-333BT. Open the Bluetooth settings on your mobile device and search for QFX R-333BT. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

BLUETOOTH:

-Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el QFX R-333BT. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX R-333BT. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

BLUETOOTH:

-Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le QFX R-333BT. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX R-333BT. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



THE LIGHTNING FLASH AND ARROWHEAD WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF "DANGEROUS VOLTAGE" INSIDE THE PRODUCT.

CAUTION

RISK OF ELECTRIC SHOCK.
DO NOT OPEN.

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



THE EXCLAMATION POINT WITHIN THE TRIANGLE IS A WARNING SIGN ALERTING YOU OF IMPORTANT INSTRUCTIONS ACCOMPANYING THE PRODUCT.



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

1. Do not install this equipment in a confined area. Keep in well ventilated openings free of newspapers, table-cloths, curtains, etc.
2. WARNING: To reduce risk of fire or electric shock, do not expose this unit to rain or liquids.
3. WARNING: The internal or external batteries shall not be exposed to excessive heat such as fire and hot, direct sunlight. No flame sources, such as lighted candles, should be placed on the apparatus.
4. WARNING: The detachable power cord is for charging. Once fully charged, the unit will operate on internal rechargeable batteries.
5. Used, depleted batteries can be hazardous and should be discarded in a safe and environmentally sound manner.

Follow Us

**QFXUSA.COM****FOLLOW US ON SOCIAL MEDIA****WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN.
To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO A DENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO.

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

**ATTENTION**

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX.** In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.



QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

✉ support@qfxusa.com
☎ (800) 864-CLUB (2582) or (323) 864-6900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2022 ©



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your R-333BT journey!
Tag us **@QFXUSA** to share your stories.