

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

SAFETY

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN.

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety and follow all precautions as they are stated.

If you will not be using the speaker system for a prolonged period, remove the batteries from the unit.

LA SEGURIDAD

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. CONSULTE TODOS LOS SERVICIOS A UN TÉCNICO CALIFICADO.

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor. Limpie solamente con un paño seco. Los usuarios deben exhibir una seguridad adicional y seguir todas las precauciones tal como se indican.

Si no va a utilizar el sistema de altavoces durante un período prolongado, retire las pilas de la unidad.



SÉCURITÉ

POUR RÉDUIRE LE RISQUE D'ÉLECTROCUTION, NE RETIREZ PAS LE COUVERCLE DE CETTE ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter un incendie ou un choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas ou n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que des radiateurs, des registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de plus de sécurité et suivre toutes les précautions telles qu'elles sont indiquées.

Si vous n'utilisez pas le système d'enceintes pendant une période prolongée, retirez les piles de l'appareil.

 <p>The Lightning flash and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
--	---	---

 <p>El relámpago y punta de flecha en dentro del triángulo es una señal advertencia alertándote de "tensión" peligrosa dentro del producto.</p>	<p style="text-align: center;">PRECAUCIÓN</p> <p style="text-align: center;">RIESGO DE ELECTRICIDAD CHOCQUE NO ABRIR</p> <p>TEN CUIDADO PARA REDUCIR EL RIESGO DESCARGA ELÉCTRICA, NO QUITAR CUBIERTA (O VOLVER) NO USUARIO PIEZAS REPARABLES AL INTERIOR. REFERIR SERVICIO A SERVICIO PERSONAL CALIFICADO</p>	 <p>Signo de exclamación en el triángulo es un advertencias de alerta tu importante instrucciones apoyo el producto</p>
--	---	--

 <p>Le flash de foudre et pointe de fliche à l'intérieur le triangle est un panneau d'avertissement alertant vous de "dangereux" tension" à l'intérieur du produit.</p>	<p style="text-align: center;">MISE EN GARDE</p> <p style="text-align: center;">RISQUE D'ÉLECTRIQUE CHOC NE PAS OUVRI</p> <p>ATTENTION POUR RÉDUIRE LE RISQUE D'ÉLECTRIQUE CHOC, NE PAS RETIRER LE COUVERCLE (OU RETOUR) AUCUN UTILISATEUR PIÈCES REPARABLES À L'INTÉRIEUR. RÉFÉRER SERVICE À SERVICE QUALIFIÉ PERSONNEL.</p>	 <p>Le point d'exclamation dans le triangle est un warningsign alerting vous important instructions accompagnement le produit</p>
--	--	--



1. Telescoping Antenna: Extend to antenna to get optimal reception.
2. Swivel Handle: Convenient carrying handle.
3. Previous Track: Press to hear previous MP3 song/track from aUSB drive or TF card.
4. M: While USB or TF is plugged in, Press M to select either Bluetooth or USB/TF mode. Press-hold to turn the front disco circle lights on or off.
5. Play/Pause Button: Press to play and press again to pause.
6. Next Track: Press to hear next MP3 song/track from USB drive or TF card.
7. ON/OFF Power and Volume Control: turn the dial to power on and adjust volume level.
8. Function Switch: Adjust switch to select input source (Music, AM, FM or SW).
9. Bass Control: Turn dial to adjust bass level.
10. Radio Tuning Control: Turn dial to adjust radio stations.
11. Speaker: Integrated speaker.
12. Solar Panel: Adjustable angle solar recharging panel.
13. Battery Compartment: Includes an internal Li-Ion rechargeable battery inside the battery compartment. It can also be operated using 3 "C" dry cell batteries (not included).
14. Power Indicator light: On/off light
15. AUX Input Jack: Plug in the audio output of your favorite music player to this input.
16. TF Card Slot: Play MP3 formatted music stored on TF card slots.
17. Charging Indicator Light: The LED indicator lights up when charging.
18. USB Port: Play MP3 formatted music stored on USB drives.
19. DC 5V Input: Plug in the included USB cable to recharge the internal battery.
20. Front Disco Circle Light: Front party lights in any model While in USB/TF mode, the disco party lights will "dance" to the music. Press-hold to turn the M (mode) button to turn lights off or back on.

1. Antena telescópica: extienda la antena para obtener una recepción óptima.
2. Asa giratoria: Práctico asa de transporte.
3. Pista anterior: Presione para escuchar la canción/pista MP3 anterior desde una unidad USB o tarjeta TF.
4. M: mientras el USB o TF está conectado, presione M para seleccionar el modo Bluetooth o USB/TF. Mantén presionado para encender o apagar las luces circulares delanteras de la discoteca.
5. Botón Reproducir/Pausar: presione para reproducir y vuelva a presionar para pausar.
6. Pista siguiente: presione para escuchar la siguiente canción/pista MP3 desde la unidad USB o la tarjeta TF.
7. Control de encendido/apagado y volumen: gire el dial para encender y ajustar el nivel de volumen.
8. Interruptor de función: ajuste el interruptor para seleccionar la fuente de entrada (Música, AM, FM o SW).
9. Control de graves: gire el dial para ajustar el nivel de graves.
10. Control de sintonización de radio: gire el dial para ajustar las estaciones de radio.
11. Altavoz: Altavoz integrado.
12. Panel solar: panel de recarga solar de ángulo ajustable.
13. Compartimiento de la batería: incluye una batería interna recargable de iones de litio dentro del compartimiento de la batería. También puede funcionar con pilas secas de 3 "C" (no incluidas).
14. Luz indicadora de encendido: luz de encendido/apagado
15. Conector de entrada AUX: conecte la salida de audio de su reproductor de música favorito a esta entrada.
16. Ranura para tarjeta TF: reproduce música en formato MP3 almacenada en las ranuras para tarjetas TF.
17. Luz indicadora de carga: el indicador LED se enciende durante la carga.
18. Puerto USB: reproduce música en formato MP3 almacenada en unidades USB.
19. Entrada de CC de 5 V: enchufe el cable USB incluido para recargar la batería interna.
20. Luz circular frontal de discoteca: Luces delanteras de fiesta en cualquier modelo En el modo USB/TF, las luces de fiesta disco "bailan" al ritmo de la música. Mantenga presionado para girar el botón M (modo) para apagar o volver a encender las luces.

1. Antenne télescopique : Étendez-vous à l'antenne pour obtenir une réception optimale.
2. Poignée pivotante : poignée de transport pratique.
3. Piste précédente : Appuyez pour écouter la chanson/piste MP3 précédente à partir d'une clé USB ou d'une carte TF.
4. M: Lorsque USB ou TF est branché, appuyez sur M pour sélectionner le mode Bluetooth ou USB/TF. Appuyez longuement pour allumer ou éteindre les lumières du cerclé disco avant.
5. Bouton Lecture/Pause : Appuyez pour lire et appuyez à nouveau pour mettre en pause.
6. Piste suivante : appuyez pour écouter la chanson/piste MP3 suivante à partir d'une clé USB ou d'une carte TF.
7. Marche/Arrêt et contrôle du volume : tournez le cadran pour allumer et régler le niveau de volume.
8. Commutateur de fonction : Réglez le commutateur pour sélectionner la source d'entrée (Musique, AM, FM ou SW).
9. Contrôle des basses : tournez le cadran pour régler le niveau des basses.
10. Commande de syntonisation radio: tournez le cadran pour régler les stations de radio.
11. Haut-parleur : haut-parleur intégré.
12. Panneau solaire : panneau de recharge solaire à angle réglable.
13. Compartiment de la batterie: comprend une batterie interne rechargeable Li-Ion à l'intérieur du compartiment de la batterie. Il peut également fonctionner avec 3 piles sèches "C" (non incluses).
14. Voyant d'alimentation : voyant marche/arrêt
15. Prise d'entrée AUX : branchez la sortie audio de votre lecteur de musique préféré sur cette entrée.
16. Fente pour carte TF : écoutez de la musique au format MP3 stockée sur des fentes pour carte TF.
17. Voyant de charge : le voyant LED s'allume lors de la charge.
18. Port USB : Lecture de musique au format MP3 stockée sur des clés USB.
19. Entrée DC 5V : Branchez le câble USB inclus pour recharger la batterie interne.
20. Lumière circulaire disco avant : Lumières de fête avant dans n'importe quel modèle En mode USB/TF, les lumières de fête disco « danseront » au rythme de la musique. Maintenez enfoncé pour activer le bouton M (mode) pour éteindre ou rallumer les lumières.

BLUETOOTH MODE

- Slide the function switch to MUSIC.
- Enable Bluetooth on your device and select "QFX R-44" to search and pair it to the radio.
- Once connected, play music wirelessly using your favorite mobile app.

BATTERY OPERATION

- This unit has a pre-installed rechargeable battery inside the battery compartment.
- Make sure that no dry cell, "D" batteries are installed before recharging the internal battery.
- To prolong battery life, allow 6-8 hours for the speaker to be fully recharged.
- The unit may also be operated using 3 "D" dry cell, alkaline batteries (not included).

NOTE: After removing and reinstalling the rechargeable battery, connect to power (from AC or solar power) to activate recharging and then turn the unit power on.

MODO BLUETOOTH

- Deslice el interruptor de función a MÚSICA.
- Habilite Bluetooth en su dispositivo y seleccione "QFX R-44" para buscarlo y sincronizarlo con la radio.
- Una vez conectado, reproduzca música de forma inalámbrica con su aplicación móvil favorita.

FUNCIONAMIENTO A BATERÍA

- Esta unidad tiene una batería recargable preinstalada dentro del compartimiento de la batería.
- Asegúrese de que no haya instaladas pilas secas tipo "D" antes de recargar la batería interna.
- Para prolongar la duración de la batería, espere de 6 a 8 horas para que el altavoz se recargue por completo.
- La unidad también puede funcionar con pilas alcalinas de celda seca 3 "D" (no incluidas).

NOTA: Después de retirar y volver a instalar la batería recargable, conéctela a la alimentación (de CA o energía solar) para activar la recarga y luego encienda la unidad.

MODE BLUETOOTH

- Faites glisser le commutateur de fonction sur MUSIC.
- Activez Bluetooth sur votre appareil et sélectionnez "QFX R-44" pour le rechercher et le coupler à la radio.
- Une fois connecté, écoutez de la musique sans fil à l'aide de votre application mobile préférée.

FONCTIONNEMENT SUR BATTERIE

- Cet appareil est équipé d'une batterie rechargeable préinstallée à l'intérieur du compartiment de la batterie.
- Assurez-vous qu'aucune pile sèche "D" n'est installée avant de recharger la batterie interne.
- Pour prolonger la durée de vie de la batterie, attendez 6 à 8 heures pour que l'enceinte soit entièrement rechargée.
- L'appareil peut également fonctionner avec 3 piles sèches alcalines « D » (non incluses).

REMARQUE : Après avoir retiré et réinstallé la batterie rechargeable, connectez-la à l'alimentation (de l'alimentation secteur ou solaire) pour activer la recharge, puis allumez l'appareil.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



www.qfxusa.com



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your R-44 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

