


J-300BT

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

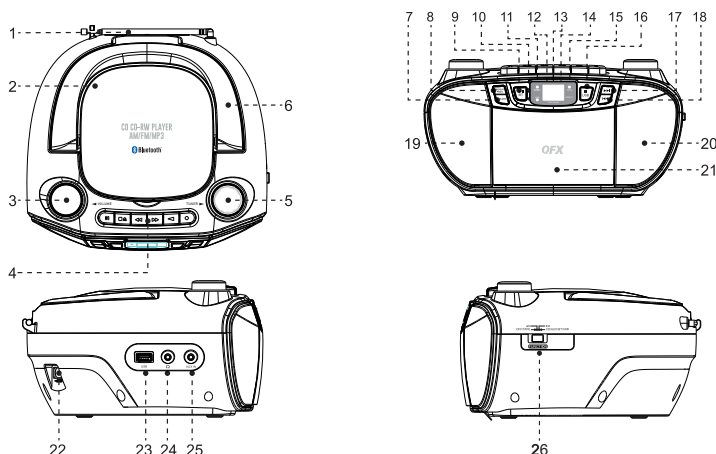


- | | | | |
|-----|--|-----|---|
| 1. | Telescoping Antenna | 1. | Antena telescópica |
| 2. | CD Door | 2. | Puerta del CD |
| 3. | Volume Control | 3. | Control del volumen |
| 4. | Cassette Tape Controls (Play, Record, Next, Previous, Open) | 4. | Controles de cinta de casete (reproducir, grabar, siguiente, anterior, abrir) |
| 5. | Radio Station Tuning Dial | 5. | Dial de sintonización de emisoras de radio |
| 6. | Foldable Carrying Handle | 6. | Asa de transporte plegable |
| 7. | MP3 Folder Button | 7. | Botón de carpeta MP3 |
| 8. | REPEAT PROG. Button | 8. | REPETIR PROG. Botón |
| 9. | BT MODE BUTTON and PLAY/PAUSE BUTTON | 9. | BOTÓN DE MODO BT y BOTÓN DE REPRODUCCIÓN/PAUSA |
| 10. | USB MODE INDICATOR | 10. | INDICADOR DE MODO USB |
| 11. | Power LED Indicator | 11. | Indicador LED de encendido |
| 12. | LED Display | 12. | Pantalla LED |
| 13. | Play/Pause LED Indicator | 13. | Indicador LED de reproducción/pausa |
| 14. | Repeat LED Indicator | 14. | Indicador LED de repetición |
| 15. | Program LED Indicator | 15. | Indicador LED de programa |
| 16. | STOP BUTTON and USB/CD FUNCTION BUTTON | 16. | BOTÓN DE PARADA y BOTÓN DE FUNCIÓN USB/CD |
| 17. | Next Button | 17. | Siguiente botón |
| 18. | Previous Button | 18. | Botón anterior |
| 19. | Left Speaker | 19. | Altavoz izquierdo |
| 20. | Right Speaker | 20. | Altavoz derecho |
| 21. | Tape Door | 21. | Puerta de cinta |
| 22. | AC Power Jack | 22. | Conector de alimentación de CA |
| 23. | USB Port | 23. | Puerto USB |
| 24. | Stereo Headphone Jack | 24. | Conector para auriculares estéreo |
| 25. | AUX Input Jack | 25. | Conector de entrada auxiliar |
| 26. | Function Selector (Power OFF/TAPE / AM / FM / CD/AUX/BT/USB) | 26. | Selector de funciones (Apagado/TAPE/AM/FM/CD/AUX/BT/USB) |

Power Sources

This unit operates on 120VAC, 60Hz or 6 x DC 1.5V "C" (UM-2) batteries.

AC Operation

1. Plug the detachable AC cord into a standard AC outlet (120V~60Hz).
2. When the AC power cord (included) is connected to the AC POWER JACK (#22) on the back of the unit and the other end is plugged into a 120V AC~ 60Hz wall outlet, the unit will disconnect the batteries automatically, and operate on AC Power only.
3. Slide the FUNCTION SELECTOR (#26) to "CD/AUX/BT/USB" position for "CD/AUX/BT/USB" play, "FM" for FM radio, "AM" for AM radio and "POWER OFF" for unit power off.

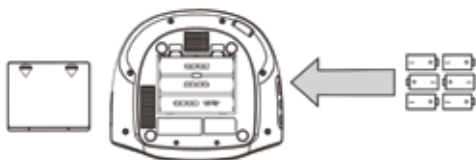

Battery Operation

1. Remove the BATTERY DOOR on the bottom of the unit.
2. Install 6 x DC1.5V "C" (UM - 2) batteries (not included) according to the polarity diagram inside the battery compartment. Be sure that the batteries are installed following the correct + - polarity.
3. Close the BATTERY DOOR

Battery Care

1. Danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type.
2. Do not mix old and new batteries.
3. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
4. If the unit is not to be used for an extended period of time, remove the batteries. Old or leaking batteries can cause damage to the unit and may void the warranty.
5. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions).
6. Do not dispose of batteries in fire, batteries may leak or explode.

Battery Replacement

When the output sound of this unit becomes distorted or the CD player operation appears unstable, the batteries may be weak. Replace all exhausted batteries at the same time as soon as possible to avoid battery leakage and return to full operation.

AM / FM Radio

1. Slide the FUNCTION SELECTOR (#26) to AM or FM position.
2. Rotate the TUNING CONTROL (#5) to your desired radio station according to the dial scale on the knob.
3. Rotate the VOLUME CONTROL (#3) to adjust to the desired output level.
4. To turn off the radio, slide the FUNCTION SELECTOR (#26) to OFF position.

Radio Reception Tips

AM - The AM antenna is located inside the cabinet of the unit. If AM reception is weak, change the position of unit until the internal antenna picks up the strongest signal.
During FM reception, always keep the FM TELESCOPIC ANTENNA (#1) fully extended for best performance. However, if FM reception is weak, try repositioning the unit near an open window until you get the best reception.

CD Operation

PLEASE READ THIS IMPORTANT INFORMATION:

You can set the unit to repeatedly play CD-DA tracks on an audio CD, MP3 files on a CD-R/CD-RW disc, or MP3 files on a USB device in normal, folder and program play modes. Do not attach a label or seal to either side of the CD-R/RW disc. It may cause a malfunction.

Play Mode

1. Slide the FUNCTION SELECTOR (#26) to the CD/USB position. The LED DISPLAY (#12) will light.
2. Open the CD DOOR (#2), load a CD with the label side facing upward and then close the CD door (#2).
3. Disc information (total number of tracks) will appear on the LED DISPLAY (#12).
4. Press PLAY/PAUSE BUTTON (#9) to start playing the CD; the PLAY/PAUSE INDICATOR (#13) will light steadily.
5. While playing, press the PLAY/PAUSE BUTTON (#9) to pause, the PLAY/PAUSE INDICATOR (#15) will flash. Press PLAY/PAUSE BUTTON (#9) again to resume playing.
6. Adjust the VOLUME CONTROL (#5) to the desired volume level.
7. Press STOP BUTTON (#16) to stop playing.
8. To turn off the CD player, slide the FUNCTION SELECTOR (#26) to POWER OFF position.

NOTE: If skipping occurs during CD play, try turning the volume down. Do not open the CD DOOR when a CD is playing.

Repeat Mode

Repeat 1: Tap the REPEAT PROG BUTTON (#8), the REPEAT INDICATOR (#14) will flash. The current track will be repeated until it is interrupted.

Repeat All: Tap the REPEAT PROG BUTTON (#8) again, the REPEAT INDICATOR (#14) will light up and stay lit. The whole disc will be played repeatedly.

To Cancel Repeat Function: Tap the PLAY MODE (#7) again. The REPEAT INDICATOR (#14) will turn off.

Skip and Search CD Tracks

1. During Play or Pause mode, tap the NEXT BUTTON (#17) or PREVIOUS BUTTON (#18) to go to the next

CD track or go back to the beginning of the current CD track.

2. During Play or Pause mode, press and hold the NEXT BUTTON (#17) or PREVIOUS BUTTON (#18) to search within the current CD track with audible high-speed playback.

Programmed Play Order

This function allows music tracks to be played in a programmed sequence.

NOTE: Program can only be set in STOP mode.

1. Press the REPEAT PROG BUTTON(#8) once. The program number 01 and the PROGRAM INDICATOR (#15) both will flash.
2. Tap the REPEAT PROG BUTTON(#8) or PREVIOUS BUTTON (#18) to select the track to be programmed.
3. Press the PLAY MODE (#7) again to store the selection. The program number will advance to 02 and flash to prompt for the next input.
4. You may repeat steps 2 to 3 to program up to 20 tracks. As soon as you have entered the 20th track, the LED DISPLAY (#12) will automatically show the programmed tracks one by one in their correct sequence starting from the first. At the end of program review, program number 01 and the PROGRAM INDICATOR (#15) will both flash.
5. Press the CD PLAY/PAUSE BUTTON (#9) to complete and start program play. The PROGRAM INDICATOR (#15) will light up. Press the CD STOP BUTTON (#16) to stop.
6. Normally all the programmed tracks will be played through once and then stop. However, you may use the REPEAT function to repeatedly play a certain track (Repeat 1) or all tracks (Repeat All) in the program
7. To cancel program play, press the CD STOP BUTTON (#16) twice while program playback is running or open the CD DOOR in stop mode. The PROGRAM INDICATOR (#15) light will turn off.

AUX Input

This unit provides an AUX IN JACK (#24) to connect to the output of external audio device like MP3 players, CD players, smart phones, etc. to listen through this unit.

1. Connect an audio cable with a 3.5mm stereo plug (not included) to the AUX input.
2. Set the FUNCTION SELECTOR (#25) to CD/AUX/BT/USB position and use onboard controls to adjust volume, etc. You may need to adjust the volume on your external audio device as well for optimal sound level.

Bluetooth (BT) Operation

1. Set the FUNCTION SELECTOR (#26) to the CD/AUX/BT/USB position.
2. Press the BT MODE PLAY PAUSE Button, the display will show a flashing "BT".
3. If the unit has never been paired with a Bluetooth device before or cannot find the last paired device, the display and the BT indicator will keep on flashing.
4. Enable Bluetooth on your device and search for "QFX J-300BT". Select "QFX J-300BT" on the Bluetooth device to connect.
5. After successfully paired the unit, you can now start playing music from your Bluetooth device wirelessly.
6. Press the BT MODE PLAY PAUSE Button again to disconnect.

Play a Cassette Tape

- Use Type I (normal) tapes only.
- Type II (high position), Type III (ferro-chrome) and Type IV (metal) tapes are not supported.
- If there is tape slack, rewind the slack using a pencil to avoid damaging the tape or unit.



1. Press  , insert a cassette tape into the cassette tape compartment (2) and then close the compartment cover.
2. Press  to start playback.

More Functions

Stop playback

Press 

Pause playback

Press 

Fast-forward or rewind

Press  or 

Eject the cassette

Press 

To resume playback, press the button again

LISTENING TO MUSIC ON A USB DEVICE:

You can listen to audio files stored on a USB device (a digital music player or USB storage media). Audio files in MP3, WMA formats* can be played on this unit.

* Files with copyright protection (Digital Rights Management) cannot be played on this unit.

Compatible USB devices Compatibility requirements for the USB devices are as follows. Before using a device with this unit, check that it meets the requirements.

- Compliance with USB 2.0 (Full Speed)

- Supports Mass Storage mode*

* Mass Storage mode is a mode that allows a USB device to become accessible to a host device, enabling file transfers. Most USB devices support Mass Storage mode

1. Connect the USB device to the (USB) port (#23)
2. Press Hold down STOP /USB(#16) until "US" flashes on the display.
3. Press PLAY/PAUSE BUTTON (#9) to start playing the USB; the PLAY/PAUSE INDICATOR (#13) will light steadily.
4. Press STOP ■ BUTTON (#16) to stop playing.

NOTE: Plug in a USB drive with MP3 formatted music into the USB port and enjoy many hours of long playing music, The LED display will show the track numbers from 1 up to track 99. If you have more than 99 tracks, it will display "FF" for any higher track numbers.

Record a Cassette Tape

- Check the following items before starting operation.
 - Use Type I (normal) tapes only. Type II (high position), Type III (ferro-chrome) and Type IV (metal) tapes are not supported.
 - Make sure that the overwrite protection tab has not been removed. If the tab has been removed, cover the broken tab using adhesive tape.
 - Be sure to connect the AC power cord to avoid an unexpected recording failure.
1. Press FUNCTION SELECTOR (#26) to the CD/AUX/BT or AM/FM to turn the power of the unit on and set
 - Make sure that the overwrite protection tab has not been removed. If the tab has been removed, cover the broken tab using adhesive tape.
 - Be sure to connect the AC power cord to avoid an unexpected recording failure.
 1. Press FUNCTION SELECTOR (#25) to the CD/AUX/BT or AM/FM to turn the power of the unit on and set the source that you want to record (from CD, AUX, BT, AM or FM)
 2. Press , insert a cassette tape into the cassette tape compartment (2) and then close the compartment cover.
 3. Press  to start recording (the play button will depress automatically at the same time).

Tape Recording from CD, Radio or AUX Input

- Playback starts automatically and recording of all the tracks/files on the disc proceeds from the first track/file. When the tape reaches the end, recording stops automatically.
- When recording a radio program or sound from external audio devices (portable player, phone, etc.), recording will continue until the tape reaches the end of that side. You can turn the tape over and record on the other side.

Headphone Output

Insert your headphones into the HEADPHONE JACK (#24). The sound from the built-in speakers will be off while headphones are plugged in. This is useful for private listening. Avoid excessive volume levels for long period of time when using the earphones. Prolonged use at high levels may impair your hearing.

SAFETY

Care and Maintenance

- Do not touch the playback side of the disc or touch the tape mechanism.
- Do not attach paper or tape to disc.
- Do not use any type of solvent such as thinner, benzene, commercially available cleaners or antistatic spray for vinyl. It may damage the disc or cassette tapes.
- Do not subject the unit to excessive force, shock, dust or extreme temperature.
- Do not cover the unit while in use. Allow a minimum of 4" of unimpeded space around the unit to provide sufficient ventilation.
- Do not store discs or cassette tapes in a place subject to direct sunlight or near heat source.
- Switch the unit off at the mains and unplug it if you are leaving it unattended for long period (holidays, etc.).
- Avoid leaving batteries inside if you leave the radio unattended for long periods as they may leak and possibly cause damage to the unit.

Fuentes de energía

Esta unidad funciona con baterías de 120 V CA, 60 Hz o 6 x CC 1,5 V "C" (UM-2).

Operación de CA

1. Enchufe el cable de CA desmontable en un tomacorriente de CA estándar (120 V~60 Hz).
2. Cuando el cable de alimentación de CA (incluido) está conectado al ENCHUFE DE ALIMENTACIÓN DE CA (#22) en la parte posterior de la unidad y el otro extremo está conectado a un tomacorriente de pared de 120 V CA ~ 60 Hz, la unidad desconectará las baterías automáticamente y funcionará solo con alimentación de CA.
3. Deslice el SELECTOR DE FUNCIÓN (#25) a la posición "CD/AUX/BT" para reproducir CD/AUX/BT, "FM" para radio FM, "AM" para radio AM y "POWER OFF" para apagar la unidad.

Funcionamiento de la batería

1. Retire la PUERTA DE LA BATERÍA en la parte inferior de la unidad.
2. Instale 6 baterías de CC de 1,5 V "C" (UM - 2) (no incluidas) de acuerdo con el diagrama de polaridad dentro del compartimiento de la batería. Asegúrese de que las baterías estén instaladas siguiendo la polaridad + - correcta.
3. Cierre la PUERTA DE LA BATERÍA

Cuidado de la batería

1. Peligro de explosión si la batería se reemplaza incorrectamente. Reemplace sólo con el mismo tipo o equivalente.
 2. No mezcle pilas viejas y nuevas.
 3. No mezcle pilas alcalinas, estándar (carbono-zinc) o recargables (níquel-cadmio).
-
1. Si no va a utilizar la unidad durante un período de tiempo prolongado, retire las pilas. Las baterías viejas o con fugas pueden dañar la unidad y anular la garantía.
 2. Do not try to recharge batteries not intended to be recharged; they can overheat and rupture. (Follow battery manufacturer's directions).
 3. Do not dispose of batteries in fire, batteries may leak or explode.

Cambio de batería

Cuando el sonido de salida de esta unidad se distorsiona o el funcionamiento del reproductor de CD parece inestable, es posible que las pilas estén descargadas. Reemplace todas las baterías agotadas al mismo tiempo lo antes posible para evitar fugas de batería y volver a funcionar por completo.

Radio AM/FM

1. Deslice el SELECTOR DE FUNCIONES (#26) a la posición AM o FM.
2. Gire el CONTROL DE SINTONIZACIÓN (#3) a la estación de radio que desee de acuerdo con la escala del dial en la perilla.
3. Gire el CONTROL DE VOLUMEN (#5) para ajustar el nivel de salida deseado.
4. Para apagar la radio, deslice el SELECTOR DE FUNCIONES (#26) a la posición APAGADO.

Consejos de recepción de radio

AM: la antena AM está ubicada dentro del gabinete de la unidad. Si la recepción de AM es débil, cambie la posición de la unidad hasta que la antena interna capte la señal más fuerte.
Durante la recepción de FM, mantenga siempre la ANTENA TELESCÓPICA de FM (#1) completamente extendida para obtener el mejor rendimiento. Sin embargo, si la recepción de FM es débil, intente reposicionar la unidad cerca de una ventana abierta hasta obtener la mejor recepción.

Operación de CD**POR FAVOR LEA ESTA INFORMACIÓN IMPORTANTE:**

Puede configurar la unidad para que reproduzca repetidamente pistas CD-DA en un CD de audio, archivos MP3 en un disco CD-R/CD-RW o archivos MP3 en un dispositivo USB en los modos de reproducción normal, de carpeta y de programa. No coloque etiquetas ni sellos en ninguno de los lados del disco CD-R/RW. Puede causar un mal funcionamiento.

Modo de juego

1. Deslice el SELECTOR DE FUNCIONES (#26) a la posición CD/USB. La PANTALLA LED (#12) se iluminará.
2. Abra la PUERTA del CD (#2), cargue un CD con el lado de la etiqueta hacia arriba y luego cierre la puerta del CD (#2).
3. La información del disco (número total de pistas) aparecerá en la PANTALLA LED (#12).
4. Presione el BOTÓN REPRODUCIR/PAUSA (#9) para comenzar a reproducir el CD; el INDICADOR DE REPRODUCCIÓN/PAUSA (#13) se iluminará de manera constante.
5. Mientras reproduce, presione el BOTÓN REPRODUCIR/PAUSA (#9) para hacer una pausa, el INDICADOR DE REPRODUCCIÓN/PAUSA (#15) parpadeará. Presione el BOTÓN REPRODUCIR/PAUSA (#9) nuevamente para reanudar la reproducción.
6. Ajuste el CONTROL DE VOLUMEN (#5) al nivel de volumen deseado.
7. Presione el BOTÓN DETENER ■ (#16) para detener la reproducción.
8. Para apagar el reproductor de CD, deslice el SELECTOR DE FUNCIONES (#26) a la posición APAGADO.

NOTA: Si se producen saltos durante la reproducción del CD, intente bajar el volumen. No abra la PUERTA del CD cuando se esté reproduciendo un CD.

Modo de repetición

Repetir 1: Toque el BOTÓN DE REPETICIÓN DE PROG(#8), el INDICADOR DE REPETIR (#14) parpadeará. La pista actual se repetirá hasta que se interrumpa.

Repetir todo: toque el BOTÓN DE REPETICIÓN DE PROG(#8) nuevamente, el INDICADOR DE REPETIR (#14) se encenderá y permanecerá encendido. Todo el disco se reproducirá repetidamente.

Para cancelar la función de repetición: toque el BOTÓN DE REPETICIÓN DE PROG(#8) nuevamente. El INDICADOR DE REPETIR (#14) se apagará.

Omitir y buscar pistas de CD

1. Durante el modo de reproducción o pausa, toque el BOTÓN SIGUIENTE (#17) o el BOTÓN ANTERIOR (#18) para ir a la siguiente pista del CD o volver al principio de la pista del CD actual.
2. Durante el modo Reproducir o Pausa, mantenga presionado el BOTÓN SIGUIENTE (#17) o el BOTÓN ANTERIOR (#18) para buscar dentro de la pista de CD actual con reproducción audible de alta velocidad.

Orden de juego programado

Esta función permite que las pistas de música se reproduzcan en una secuencia programada.

NOTA: El programa solo se puede configurar en el modo STOP.

1. Presione BOTÓN DE REPETICIÓN DE PROG(#8) una vez. El número de programa 01 y el INDICADOR DE PROGRAMA (#15) parpadearán.
2. Toque el BOTÓN DE REPETICIÓN DE PROG(#8) o el BOTÓN ANTERIOR (#18) para seleccionar la pista a programar.
3. Presione PLAY MODE (#7) nuevamente para almacenar la selección. El número de programa avanzará a 02 y parpadeará para solicitar la siguiente entrada.
4. Puede repetir los pasos 2 a 3 para programar hasta 20 pistas. Tan pronto como haya ingresado la vigésima pista, la PANTALLA LED (#12) mostrará automáticamente las pistas programadas una por una en su secuencia correcta comenzando desde la primera. Al final de la revisión del programa, el número de programa 01 y el INDICADOR DE PROGRAMA (#15) parpadearán.
5. Presione el BOTÓN DE REPRODUCCIÓN/PAUSA DEL CD (#9) para completar e iniciar la reproducción del programa. El INDICADOR DE PROGRAMA (#15) se encenderá. Presione el BOTÓN DE PARADA DEL CD (#16) para detener.
6. Normalmente, todas las pistas programadas se reproducirán una vez y luego se detendrán. Sin embargo, puede usar la función REPETIR para reproducir repetidamente una determinada pista (Repetir 1) o todas las pistas (Repetir todo) en el programa.
7. Para cancelar la reproducción del programa, presione el BOTÓN DE PARADA DEL CD (#16) dos veces mientras se ejecuta la reproducción del programa o abra la PUERTA DEL CD en el modo de parada. La luz del INDICADOR DE PROGRAMA (#15) se apagará.

Entrada auxiliar

Esta unidad proporciona un CONECTOR DE ENTRADA AUXILIAR (#25) para conectar a la salida de un dispositivo de audio externo como reproductores de MP3, reproductores de CD, teléfonos inteligentes, etc. para escuchar a través de esta unidad.

1. Conecte un cable de audio con conector estéreo de 3,5 mm (no incluido) a la entrada AUX.
2. Establezca el SELECTOR DE FUNCIÓN (#26) en la posición CD/AUX/BT/USB y use los controles integrados para ajustar el volumen, etc. Es posible que también deba ajustar el volumen en su dispositivo de audio externo para obtener un nivel de sonido óptimo.

Funcionamiento de Bluetooth (BT)

1. Coloque el SELECTOR DE FUNCIONES (#26) en la posición CD/AUX/BT/USB.
2. Presione el Botón PAUSA DE REPRODUCCIÓN EN MODO BT., la pantalla mostrará "BT" parpadeando.
3. Si la unidad nunca antes se ha emparejado con un dispositivo Bluetooth o no puede encontrar el último dispositivo emparejado, la pantalla y el indicador BT seguirán parpadeando.
4. Habilite Bluetooth en su dispositivo y busque "QFX J-300BT". Seleccione "QFX J-300BT" en el dispositivo Bluetooth para conectarse.
5. Después de emparejar con éxito la unidad, ahora puede comenzar a reproducir música desde su dispositivo Bluetooth de forma inalámbrica.
6. Presione el Botón PAUSA DE REPRODUCCIÓN EN MODO BT. nuevamente para desconectar.

Reproducir una cinta de casete

Utilice únicamente cintas Tipo I (normales).

Las cintas tipo II (posición alta), tipo III (ferrocromo) y tipo IV (metal) no son compatibles.

Si hay holgura en la cinta, rebobine la holgura con un lápiz para evitar dañar la cinta o la unidad.



1. Presione , inserte una cinta de casete en el compartimiento de la cinta de casete (2) y luego cierre la tapa del compartimiento.
2. Pulse  para iniciar la reproducción.

Más funciones

Detener la reproducción
 Pausar reproducción
 Avance rápido o rebobinado
 Expulsar el casete

Prensa  Para reanudar la reproducción, vuelva a pulsar el botón
 Prensa  Para reanudar la reproducción, vuelva a pulsar el botón
 Prensa  Para reanudar la reproducción, vuelva a pulsar el botón
 Prensa 

Reproductor de música USB

Puede escuchar archivos de audio almacenados en un dispositivo USB (un reproductor de música digital o un medio de almacenamiento USB). En esta unidad se pueden reproducir archivos de audio en formatos MP3 y WMA*.* Los archivos con protección de derechos de autor (Gestión de derechos digitales) no se pueden reproducir en esta unidad.

Dispositivos USB compatibles Los requisitos de compatibilidad para los dispositivos USB son los siguientes. Antes Al utilizar un dispositivo con esta unidad, verifique que cumpla con los requisitos.

- Cumplimiento de USB 2.0 (velocidad máxima)
- Admite el modo de almacenamiento masivo*

* El modo de almacenamiento masivo es un modo que permite que un dispositivo USB sea accesible para un dispositivo host, permitiendo transferencias de archivos. La mayoría de los dispositivos USB admiten el modo de almacenamiento masivo

1. Conecte el dispositivo USB al puerto (USB) (#23)
2. Presione y mantenga presionado STOP/USB(#16) hasta que "US" parpadee en la pantalla.
3. Presione el BOTÓN REPRODUCIR/PAUSA (#9) para comenzar a reproducir el USB; el INDICADOR DE REPRODUCCIÓN/PAUSA (#13) se iluminará de manera constante.
4. Presione el BOTÓN DETENER (#16) para detener la reproducción.

Grabar una cinta de casete

- Compruebe los siguientes elementos antes de iniciar la operación.
- Utilice únicamente cintas Tipo I (normales). Las cintas tipo II (posición alta), tipo III (ferrocromo) y tipo IV (metal) no son compatibles.
- Asegúrese de que la pestaña de protección contra sobrescritura no se haya eliminado. Si se ha quitado la pestaña, cubra la pestaña rota con cinta adhesiva.
- Asegúrese de conectar el cable de alimentación de CA para evitar una falla de grabación inesperada.
- Presione el SELECTOR DE FUNCIÓN (#25) en CD/AUX/BT o AM/FM para encender la unidad y configurar la fuente que desea grabar (desde CD, AUX, BT, AM o FM)
- Presione  inserte una cinta de casete en el compartimiento de la cinta de casete (2) y luego cierre la tapa del compartimento.
- Presione  para comenzar a grabar (el botón de reproducción se presionará automáticamente al mismo tiempo).

Grabación de cinta desde CD, radio o entrada AUX

La reproducción comienza automáticamente y la grabación de todas las pistas/archivos del disco continúa desde la primera pista/archivo. Cuando la cinta llega al final, la grabación se detiene automáticamente.

Al grabar un programa de radio o sonido de dispositivos de audio externos (reproductor portátil, teléfono, etc.), la grabación continuará hasta que la cinta llegue al final de ese lado. Puede dar vuelta la cinta y grabar en el otro lado.

Salida de auriculares

Inserte sus auriculares en el ENCHUFE PARA AURICULARES (#23). El sonido de los altavoces incorporados se apagará mientras los auriculares estén conectados. Esto es útil para escuchar en privado. Evite niveles de volumen excesivos durante largos períodos de tiempo cuando utilice los auriculares. El uso prolongado a niveles altos puede afectar su audición.

SEGURIDAD

Cuidado y mantenimiento

- No toque el lado de reproducción del disco ni toque el mecanismo de la cinta.
- No adjunte papel o cinta al disco.
- No use ningún tipo de solvente como diluyente, bencina, limpiadores disponibles en el mercado o aerosoles antiestáticos para vinilo. Puede dañar el disco o las cintas de casete.
- No someta la unidad a fuerza excesiva, golpes, polvo o temperaturas extremas.
- No cubra la unidad mientras está en uso. Deje un mínimo de 4" de espacio libre alrededor de la unidad para proporcionar suficiente ventilación.
- No almacene discos o cintas de cassette en un lugar expuesto a la luz solar directa o cerca de una fuente de calor.
- Apague la unidad de la red eléctrica y desenchúfela si la va a dejar desatendida durante un período prolongado (vacaciones, etc.).
- Evite dejar las baterías en el interior si deja la radio desatendida durante períodos prolongados, ya que pueden tener fugas y posiblemente causar daños a la unidad.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 864-6900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your J-300BT Journey!
Tag us **@QFXUSA** to share your stories.