

PBX-100

# **QFX**

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

THANK YOU FOR PURCHASING OUR SPEAKER. PLEASE READ THE MANUAL CAREFULLY BEFORE OPERATING.

### IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. Please adhere to all the instructions herein, and save this information in a safe place for future use.



 
1. Please ensure the power cord for this unit is out of the path of foot traffic. Do not place heavy objects on the power cord as it will cause damage to the cord. Always firmly grasp the plug and pull the plug from the power supply, never yank the cable in order to pull out the plug. Avoid the use of an extension cable.
2. Ventilation: This unit should be placed in a well ventilated space where it has no less than 10cm ventilation space on either side of it. Do not cover the unit with a cloth or blanket. Do not put it on a bed, sofa, or carpet as this will stifle the ventilation of the unit.
3. Casing Dismantling: DO NOT dismantle the casing. There are no usable parts inside the unit. Make use of a service center in order to have your unit repaired.
4. Should the unit emit any smell or smoke, immediately turn off the power supply. Take the unit to the service center from which you bought it for repairs.

---

GRACIAS POR COMPRAR NUESTRO ALTAVOZ. LEA EL MANUAL CUIDADOSAMENTE ANTES DE OPERAR.

### MEDIDAS IMPORTANTES DE SEGURIDAD

Antes de utilizar esta máquina, lea todas las instrucciones de seguridad y funcionamiento. Siga todas las instrucciones en este documento y guarde esta información en un lugar seguro para su uso futuro.



1. Asegúrese de que el cable de alimentación de esta unidad esté fuera del camino del tráfico peatonal. No coloque objetos pesados sobre el cable de alimentación, ya que podría dañarlo. Sujete siempre firmemente el enchufe y desenchúfelo de la fuente de alimentación, nunca tire del cable para extraerlo. Evite el uso de un cable de extensión.
2. Ventilación: esta unidad debe colocarse en un espacio bien ventilado donde no tenga menos de 10 cm de espacio de ventilación a cada lado. No cubra la unidad con un paño o una manta. No lo coloque sobre una cama, sofá o alfombra, ya que esto sofocará la ventilación de la unidad.
3. Desmontaje de la carcasa: NO desmonte la carcasa. No hay partes utilizables dentro de la unidad. Utilice un centro de servicio para reparar su unidad.
4. Si la unidad emite algún olor o humo, apague inmediatamente la fuente de alimentación. Lleve la unidad al centro de servicio donde la compró para repararla.

MERCI D'AVOIR ACHETÉ NOTRE HAUT-PARLEUR. VEUILLEZ LIRE ATTENTIVEMENT LE MANUEL AVANT D'UTILISER.

### MESURES DE SÉCURITÉ IMPORTANTES

Avant d'utiliser cette machine, veuillez lire toutes les instructions de sécurité et d'utilisation. Veuillez respecter toutes les instructions ci-dessous et conserver ces informations dans un endroit sûr pour une utilisation future.



1. Veuillez vous assurer que le cordon d'alimentation de cet appareil est à l'écart de la circulation piétonne. Ne placez pas d'objets lourds sur le cordon d'alimentation car cela pourrait l'endommager. Saisissez toujours fermement la fiche et retirez-la de l'alimentation électrique, ne tirez jamais sur le câble pour retirer la fiche. Évitez d'utiliser une rallonge.
2. Ventilation: Cet appareil doit être placé dans un espace bien ventilé où il n'a pas moins de 10 cm d'espace de ventilation de chaque côté. Ne couvrez pas l'appareil avec un chiffon ou une couverture. Ne le placez pas sur un lit, un canapé ou un tapis car cela étoufferait la ventilation de l'appareil.
3. Démontage du boîtier: NE PAS démonter le boîtier. Il n'y a aucune pièce utilisable à l'intérieur de l'unité. Faites appel à un centre de service pour faire réparer votre appareil.
4. Si l'unité émet une odeur ou de la fumée, coupez immédiatement l'alimentation électrique. Apportez l'appareil au centre de service auprès duquel vous l'avez acheté pour réparation.

**FEATURES**

- Bluetooth & TWS function
- Plays Mp3 files stored in SD card/USB drive/external audio device.
- FM radio, remote control
- Guitar/Microphone input
- 5 Band graphic equalizer
- Built-in 12V/7A rechargeable battery
- Microphone priority on/off switch
- Super dynamic sound speaker

**CONNECTING**

1. This set applies to AC 110V-240V, 50/60Hz
2. AC power: battery can be charged when connected to AC power. Red light on battery is charging, it will change to green once battery complete charge.
3. Internal battery will be charged even device switch off when plugged in to AC power
4. Speaker battery can be charged using 12V external car battery as well (connect cable not included) by "DC 12V input". Please make sure "+" and "-" in right connection.
5. Adjust function keys to your personal audio preference.

**BLUETOOTH INSTRUCTION**

Change the mode into "BLUE", the bluetooth sign light twinkles, and speaker will give an alarm. Ensure you enable the Bluetooth function on your Bluetooth device. Search for Bluetooth connection until you find device model and pair.

**TWS CONNECTION**

In Bluetooth mode, press the TWS button and hold it down for three seconds, the primary speaker will sound an alarm and the screen will show "BTST". The secondary speaker switch to Bluetooth mode will automatically connect to the primary speaker and the screen will show "BT".

---

**CARACTERISTICAS**

- Bluetooth y función TWS
- Reproduce archivos Mp3 almacenados en la tarjeta SD / unidad USB / dispositivo de audio externo.
- radio FM, control remoto
- Entrada de guitarra / micrófono
- ecualizador gráfico de 5 bandas
- Batería recargable incorporada de 12V / 7A
- Interruptor de encendido / apagado de prioridad de micrófono
- altavoz de sonido súper dinámico

**CONECTANDO**

1. Este conjunto se aplica a CA 110V-240V, 50 / 60Hz
2. Alimentación de CA: la batería se puede cargar cuando se conecta a la alimentación de CA. La luz roja de la batería se está cargando, cambiará a verde una vez que la batería se haya cargado por completo.
3. La batería interna se cargará incluso si el dispositivo se apaga cuando está enchufado a la alimentación de CA
4. La batería del altavoz también se puede cargar con una batería externa de automóvil de 12 V (cable de conexión no incluido) mediante "entrada de CC de 12 V". Asegúrese de que "+" y "-" en la derecha conexión.

5. Ajuste las teclas de función a su preferencia de audio personal.

#### INSTRUCCIÓN BLUETOOTH

Cambie el modo a "AZUL", la luz de la señal del bluetooth parpadea y el altavoz emitirá una alarma. Asegúrese de habilitar la función Bluetooth en su dispositivo Bluetooth. Busque la conexión Bluetooth hasta que encuentre el modelo y el par del dispositivo.

#### CONEXIÓN TWS

En el modo Bluetooth, presione el botón TWS y manténgalo presionado durante tres segundos, el altavoz principal hará sonar una alarma y la pantalla mostrará "BTST". El interruptor del altavoz secundario al modo Bluetooth se conectará automáticamente al altavoz principal y la pantalla mostrará "BT".

---

#### TRAITS

- Fonction Bluetooth et TWS
- Lit les fichiers MP3 stockés sur la carte SD / clé USB / périphérique audio externe.
- Radio FM, télécommande
- Entrée guitare / microphone
- Égaliseur graphique 5 bandes
- Batterie rechargeable intégrée 12V / 7A
- Interrupteur marche / arrêt prioritaire du microphone
- Haut-parleur super dynamique

#### DE LIAISON

1. Cet ensemble s'applique à AC 110V-240V, 50 / 60Hz
2. Alimentation CA: la batterie peut être chargée lorsqu'elle est connectée à l'alimentation CA. La lumière rouge sur la batterie est en charge, elle passera au vert une fois la batterie complètement chargée.
3. La batterie interne sera chargée même si l'appareil s'éteint lorsqu'il est branché sur le secteur
4. La batterie du haut-parleur peut également être chargée à l'aide d'une batterie de voiture externe de 12 V (câble de connexion non inclus) par «entrée CC 12 V». Veuillez vous assurer que "+" et "-" à droite connexion.
5. Réglez les touches de fonction selon vos préférences audio personnelles.

#### INSTRUCTION BLUETOOTH

Changez le mode en "BLEU", le voyant bluetooth scintille et le haut-parleur donnera une alarme. Assurez-vous d'activer la fonction Bluetooth sur votre appareil Bluetooth. Recherchez la connexion Bluetooth jusqu'à ce que vous trouviez le modèle et la paire d'appareil.

#### CONNEXION TWS

En mode Bluetooth, appuyez sur le bouton TWS et maintenez-le enfoncé pendant trois secondes, le haut-parleur principal sonnera une alarme et l'écran affichera «BTST». Le commutateur du haut-parleur secondaire en mode Bluetooth se connectera automatiquement au haut-parleur principal et l'écran affichera «BT».

## BATTERY & CHARGING

1. The units takes approximately 8 hours to fully charge. It will automatically begin charging once the power cord is connected.
2. If the battery power is low may caused sound distortion or stop play, pls charging the battery ontime.
3. To maximize the battery's lifespan, please charging the battery immediately. When the unit is not used for prolonged periods of time,the battery will gradually lose its power. It is recommended to fully charge the battery at least every 30days.
4. To saving battery, please power off once stop using.

## BATERIA CARGANDO

1. Las unidades tardan aproximadamente 8 horas en cargarse por completo. Comenzará a cargarse automáticamente una vez que el cable de alimentación esté conectado.
2. Si la energía de la batería es baja puede causar distorsión del sonido o detener la reproducción, por favor cargue la batería a tiempo.
3. Para maximizar la vida útil de la batería, cargue la batería inmediatamente. Cuando la unidad no se utiliza durante períodos prolongados, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 30 días.
4. Para ahorrar batería, apáguelo una vez que deje de usarlo.


## BATTERIE EN CHARGE

1. Les unités prennent environ 8 heures pour se recharger complètement. Il commencera automatiquement à charger une fois le cordon d'alimentation connecté.
2. Si la batterie est faible, cela peut provoquer une distorsion du son ou arrêter la lecture, veuillez charger la batterie à l'heure.
3. Pour maximiser la durée de vie de la batterie, veuillez charger la batterie immédiatement. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perdra progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 30 jours.
4. Pour économiser la batterie, veuillez éteindre une fois cesser d'utiliser.

## REMOTE CONTROL



- |                                |   |                                       |
|--------------------------------|---|---------------------------------------|
| Standby                        | Colocarse                                 | Etre prêt                             |
| USB/SD/LINE/BLUE (Audio Input) | USB / SD / LINE / BLUE (entrada de audio) | USB / SD / LINE / BLUE (entrée audio) |
| Prev/FM CH                     | Anterior / FM CH                          | Préc / FM CH                          |
| Play/Pause/FM Tuner            | Reproducir / Pausa / Sintonzador FM       | Play / Pause / Tuner FM               |
| Next/FM CH+                    | Siguiente / FM CH +                       | Suivant / FM CH +                     |
| Repeat                         | Repetir                                   | Répéter                               |
| Stop                           | Detener                                   | Arrêtez                               |
| Volume Increase                | Aumento de volumen                        | Augmentation du volume                |
| Volume Decrease                | Disminución de volumen                    | Diminution du volume                  |
| Mute                           | Mudo                                      | Muet                                  |
| Equalizer                      | Igualada                                  | Égaliseur                             |
| Number                         | Número                                    | Nombre                                |

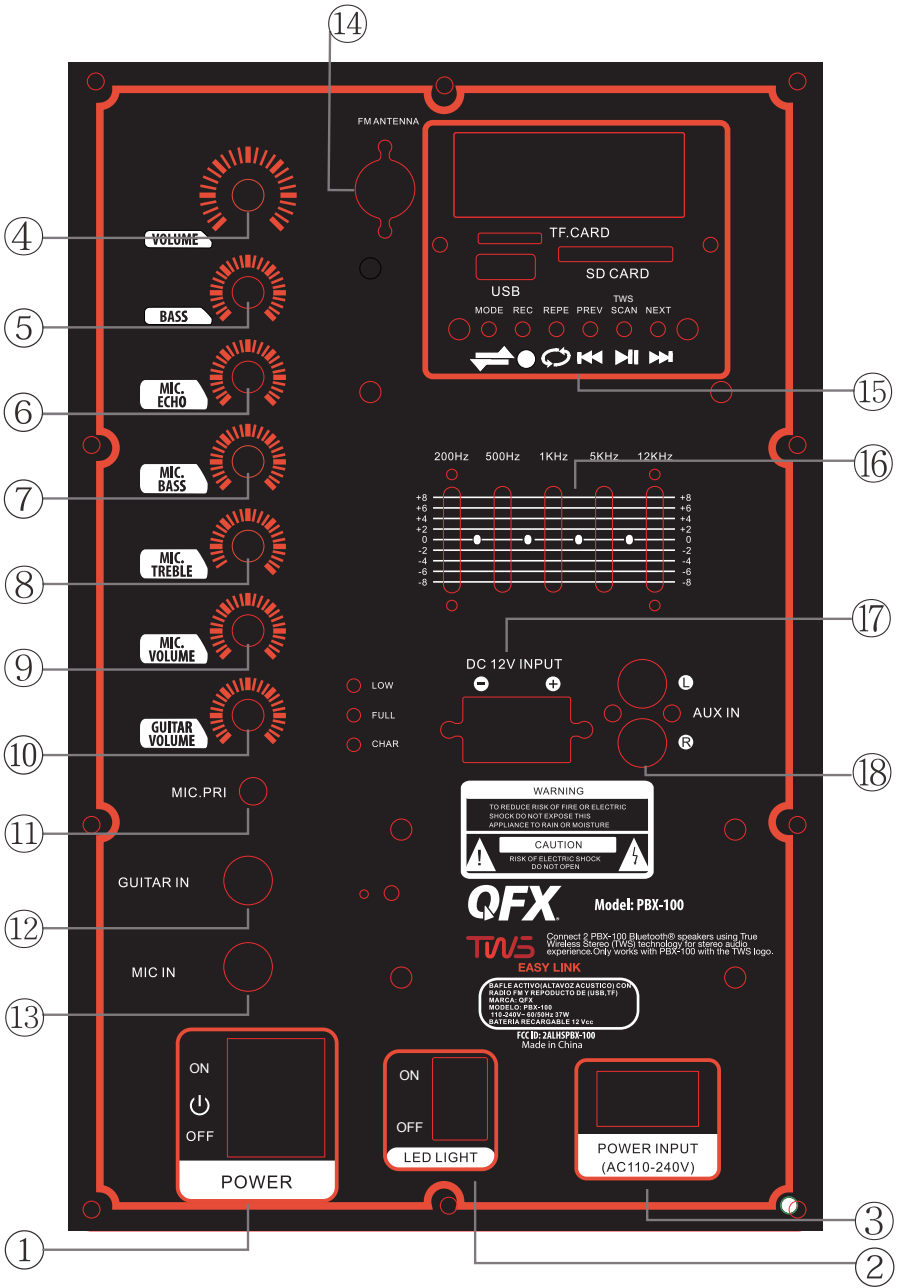



# PBX-100 CONTROL PANEL

## CONTROL PANEL

1. POWER ON/OFF SWITCH
2. LED LIGHT ON/OFF SWITCH
3. POWER INPUT
4. VOLUME: MASTER VOLUME ADJUST
5. BASS: BASS ADJUST
6. MIC. ECHO: ECHO ADJUST
7. MIC BASS: MICROPHONE BASS VOLUME ADJUST
8. MIC TREBLE: MICROPHONE TREBLE VOLUME ADJUST
9. MIC VOL.: MICROPHONE VOLUME ADJUST
10. GUITAR VOL.: GUITAR VOLUME ADJUST
11. MIC PRI.: MICROPHONE PRIORITY ON/OFF SWITCH
12. GUITAR IN: GUITAR INPUT
13. MIC IN: MICROPHONE INPUT
14. FM ANTENNA
15. USB PANEL FUNCTION: MODE: MODE SELECT  
REC: RECORD; INSERT THE USB MEMORY/SD CARD AND PRESS THIS BUTTON TO START RECORDING. PRESSING THE BUTTON AGAIN TO STOP. REP: REPEAT  
▶|| PLAY/PAUSE; FM STATION AUTO SEARCHING  
TWS: ON/OFF SWITCH(PRESS AND HOLD)
- ◀◀ PREVIOUS
- ▶▶ NEXT
16. EQUALIZER
17. 12V EXTERNAL INPUT
18. AUX INPUT

- 
1. INTERRUPTOR DE ENCENDIDO / APAGADO
  2. INTERRUPTOR DE ENCENDIDO / APAGADO DE LUZ LED
  3. ENTRADA DE ENERGÍA
  4. VOLUMEN: AJUSTE DE VOLUMEN MAESTRO
  5. BAJO: AJUSTE BAJO
  6. MIC. ECHO: AJUSTE DE ECHO
  7. MIC BASS: AJUSTE DE VOLUMEN DE MICROPHONE BASS
  8. MIC TREBLE: MICROPHONE TREBLE VOLUME ADJUST
  9. MIC VOL. : AJUSTE DEL VOLUMEN DEL MICROFONO
  10. VOLUMEN DE LA GUITARRA: AJUSTE DEL VOLUMEN DE LA GUITARRA
  11. MIC PRI. : INTERRUPTOR DE ENCENDIDO / APAGADO DE PRIORIDAD DE MICROFONO
  12. GUITAR IN: ENTRADA DE GUITARRA
  13. MIC IN: ENTRADA DE MICRÓFONO
  14. ANTENA FM
  15. FUNCIÓN DE PANEL USB: MODO: SELECCIONAR MODO  
REC: GRABAR: INSERTE LA MEMORIA USB / TARJETA SD Y PRESIONE ESTE BOTÓN PARA COMENZAR A GRABAR, PRESIONANDO EL BOTÓN DE NUEVO PARA PARAR. REP: REPETIR
  - ▶|| REPRODUCIR PAUSAR; BÚSQUEDA AUTOMÁTICA DE ESTACIONES DE FM TWS: INTERRUPTOR DE ENCENDIDO / APAGADO (PULSAR Y MANTENER)
  - ◀◀ ANTERIOR
  - ▶▶ SIGUIENTE
  16. EQUALIZER
  17. 12V EXTERNAL INPUT
  18. AUX INPUT

- 
1. INTERRUPTEUR MARCHÉ / ARRÊT
  2. INTERRUPTEUR MARCHÉ / ARRÊT DE LA LUMIÈRE À LED
  3. ENTRÉE D'ALIMENTATION
  4. VOLUME: RÉGLAGE DU VOLUME MAÎTRE
  5. BASS: BASS ADJUST
  6. MIC. ECHO: ECHO ADJUST
  7. MIC BASS: RÉGLAGE DU VOLUME DES BASSES DU MICROPHONE
  8. MIC TREBLE: MICROPHONE TREBLE VOLUME ADJUST
  9. MIC VOL.: MICROPHONE VOLUME ADJUST
  10. GUITAR VOL.: GUITAR VOLUME ADJUST
  11. MIC PRI. : INTERRUPTEUR MARCHÉ / ARRÊT PRIORITAIRE DU MICROPHONE
  12. GUITAR IN: ENTRÉE GUITARE
  13. MIC IN: ENTRÉE MICROPHONE
  14. ANTENNE FM
  15. FONCTION DU PANNEAU USB: MODE: MODE SELECT  
REC: RECORD: INSÉRER LA CARTE MÉMOIRE USB / SD ET APPUYER SUR CE BOUTON POUR COMMENCER L'ENREGISTREMENT. EN APPUYANT À NOUVEAU SUR LE BOUTON POUR ARRÊTER. REP: REPEAT
  - ▶|| JOUER PAUSE; RECHERCHE AUTOMATIQUE DE LA STATION FM TWS: INTERRUPTEUR MARCHÉ / ARRÊT (APPUYER ET MAINTENIR)
  - ◀◀ PRÉCÉDENT
  - ▶▶ SUIVANT
  16. ÉGALISEUR
  17. ENTRÉE EXTERNE 12V
  18. AUX INPUT





TRUE WIRELESS STEREO



**CONNECT 2 · CONECTAR 2 · RELIER 2**

**PAIR 2 PBX-100**

**STEP 1  
PASO 1  
ÉTAPE 1**



MODE

**BLUETOOTH**

Push the Mode Button on both speakers until speakers are in Bluetooth Mode. Screen will display the word "Blue"

Presione el botón de modo en ambos altavoces hasta los altavoces están en Bluetooth Modo. La pantalla mostrará la palabra "Blue"

Appuyez sur le bouton Mode sur les deux haut-parleurs jusqu'à ce que les haut-parleurs soient en mode Bluetooth. L'écran affichera le mot «Blue»

**STEP 2 PASO 2 ÉTAPE 2**



TWS

TWS

3 SEC

When both speakers are in Bluetooth mode, push and hold the TWS button for 3 seconds. You will hear a beep. Next time you put both speakers in Bluetooth mode at the same time, speakers will connect automatically.

Cuando ambos altavoces estén en modo Bluetooth, presione y mantenga presionado el botón TWS durante 3 segundos. Oírás un bip. La próxima vez que pongas ambos altavoces en Bluetooth modo al mismo tiempo, los altavoces se conectarán automáticamente

Lorsque les deux enceintes sont en mode Bluetooth, appuyez sur et maintenez le bouton TWS pendant 3 secondes. Vous entendrez un bip. La prochaine fois que vous mettez les deux haut-parleurs en Bluetooth en même temps, les haut-parleurs connecteront automatiquement.

**STEP 3 PASO 3 ÉTAPE 3**

On your device, turn your Bluetooth settings "ON", you will then select "QFX PBX-100". Enjoy TWS (True Wireless Stereo) sound from your phone via Bluetooth!

En su dispositivo, active la configuración de Bluetooth, luego seleccionará "QFX PBX-100". Disfruta TWS (True Wireless Stereo) sonido desde su teléfono a través de Bluetooth!

Sur votre appareil, activez vos paramètres Bluetooth, vous sélectionnerez ensuite «QFX PBX-100». Profitez de TWS (True Wireless Stereo) son de votre téléphone via Bluetooth!





## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.




This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA®, Inc.**

RMA Processing

Customer Support Department

2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com (800) 864-CLUB (2582) or (323) 864-6900 qfxusa.com Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



**1-800-864-2582**  
**Mon-Fri 9AM - 5PM (PST)**



**support@qfxusa.com**  
**Mon-Fri 9AM - 5PM (PST)**

[www.qfxusa.com](http://www.qfxusa.com)

# THANK YOU.

**QFX** Where the Party Begins!

We would love to hear about your PBX-100 journey!  
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

