

# **QFX**

WHERE THE PARTY BEGINS™



## INSTRUCTION MANUAL



<p>The lightning bolt and arrowhead within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.</p>	<p><b>CAUTION</b></p> <p>RISK OF ELECTRIC SHOCK INSIDE ONLY!</p> <p>CAUTION! REDUCE THE RISK OF ELECTRIC SHOCK. DO NOT REMOVE COVER (OR BACK) NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	<p>The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
<p>El símbolo de un rayo en la punta de flecha dentro del triángulo es una señal de advertencia que indica la presencia de "voltaje peligroso" dentro del producto.</p>	<p><b>PRECAUCIÓN</b></p> <p>RIESGO DE DESCARGA ELÉCTRICA NO ABRIR</p> <p>PRECAUCIÓN PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA (O LA PARTE TRASERA). NO HAY PIEZAS REPARABLES POR EL USUARIO EN EL INTERIOR. CONSULTE EL SERVICIO TÉCNICO O PERSONAL CUALIFICADO.</p>	<p>El signo de exclamación dentro del triángulo es una señal de advertencia que te alerta sobre instrucciones importantes que acompañan al producto.</p>
<p>Le flash et la pointe de flèche à l'intérieur du triangle sont un symbole d'avertissement qui indique la présence d'une "tension dangereuse" à l'intérieur du produit.</p>	<p><b>ATTENTION</b></p> <p>RIEQUE DE CHOC ÉLECTRIQUE NE PAS OUVRIR</p> <p>PRÉCAUTION : POUR RÉDUIRE LES RISQUES DE CHOC ÉLECTRIQUE, NE PAS ENLEVER LE COUVERCLE (OU L'ARRIÈRE). AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONSULTEZ UN TECHNICIEN QUALIFIÉ POUR TOUTE RÉPARATION.</p>	<p>Le symbole d'exclamation à l'intérieur du triangle est un signal d'avertissement qui attire votre attention sur des instructions importantes accompagnant le produit.</p>

## FUNCTIONAL DESCRIPTION:

- TELESCOPIC ANTENNA
- TUNING KNOB
- VOLUME CONTROL
- BAND SWITCH
- MicroSD SLOT
- USB JACK
- MP3 MONITOR
- DC 5V INPUT
- CHARGE LED
- MP3 PLAY/PAUSE BUTTON
- MP3 PREV BUTTON
- MP3 NEXT BUTTON
- FLASHLIGHT(ON/OFF)
- FAN(ON/OFF)
- FLASHLIGHT
- BATTERY COMPARTMENT

## DESCRIPCIÓN FUNCIONAL:

- ANTENA TELESCÓPICA
- PERILLA DE SINTONÍA
- CONTROL DE VOLUMEN
- INTERRUPTOR DE BANDA
- RANURA MicroSD
- CONECTOR USB
- MONITOR MP3
- ENTRADA DE 5V CC
- LEDDE CARGA
- BOTÓN DE REPRODUCCIÓN/PAUSA DE MP3
- BOTÓN DE ANTERIOR DE MP3
- BOTÓN DE SIGUIENTE DE MP3
- LINTERNA (ENCENDIDO/APAGADO)
- VENTILADOR (ENCENDIDO/APAGADO)
- LINTERNA
- COMPARTIMENTO DE BATERÍA

## DESCRIPCIÓN FUNCIONAL:

- ANTENNE TÉLESCOPIQUE
- BOUTON DE SYNTONISATION
- CONTRÔLE DE VOLUME
- INTERRUPTEUR DE BANDA
- EMPLACEMENT MicroSD
- PRISE USB
- MONITEUR MP3
- ENTRÉE 5V CC
- INDICATEUR DE CHARGE
- BOUTON LECTURE/PAUSE MP3
- BOUTON PRÉCÉDENT MP3
- BOUTON SUIVANT MP3
- LAMPE DE POCHE (MARCHE/ARRÊT)
- VENTILATEUR (MARCHE/ARRÊT)
- LAMPE DE POCHE
- COMPARTIMENT À PILES

- Do not install this equipment in a confined space such as a book case or similar unit. It should be placed in a well ventilated area. The ventilation should not be impeded by covering the opening with items such as newspapers, table cloths, curtains etc.
- WARNING :** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire etc.
- WARNING:** The main plug is used to disconnect the device.
- No naked flame sources. such as lighted candles, should be placed on the apparatus.
- Please be environmentally safe when disposing of batteries.

- No instale este equipo en un espacio confinado como una estantería o unidad similar. Debe colocarse en un área bien ventilada. La ventilación no debe verse obstaculizada por la cobertura con objetos como periódicos, manteles, cortinas, etc.
- ADVERTENCIA:** Para reducir el riesgo de incendio o descarga eléctrica, no exponga este aparato a la lluvia o la humedad. El aparato no debe estar expuesto a goteos o salpicaduras, y no se deben colocar objetos llenos de líquidos, como jarrones, sobre el aparato.
- ADVERTENCIA:** Las baterías no deben estar expuestas a calor excesivo, como la luz solar, el fuego, etc.
- ADVERTENCIA:** El enchufe principal se utiliza para desconectar el dispositivo.
- No se deben colocar fuentes de llama desnuda, como velas encendidas, sobre el aparato.
- Por favor, ten en cuenta el cuidado del medio ambiente al desechar las baterías.

- Ne pas installer cet équipement dans un espace confiné tel qu'une étagère ou une unité similaire. Il doit être placé dans un endroit bien ventilé. La ventilation ne doit pas être entravée en recouvrant l'ouverture avec des objets tels que des journaux, des nappes, des rideaux, etc.
- AVERTISSEMENT :** Pour réduire les risques d'incendie ou de choc électrique, ne pas exposer cet appareil à la pluie ou à l'humidité. L'appareil ne doit pas être exposé à des éclaboussures ou des projections, et des objets remplis de liquides, tels que des vases, ne doivent pas être placés sur l'appareil.
- AVERTISSEMENT :** Les piles ne doivent pas être exposées à une chaleur excessive telle que la lumière du soleil, le feu, etc.
- AVERTISSEMENT :** La fiche principale est utilisée pour déconnecter l'appareil.
- Aucune source de flamme nue, telle que des bougies allumées, ne doit être placée sur l'appareil.
- Veillez veiller à la sécurité environnementale lors de l'élimination des piles.

**OPERATIONS SPECIFICATIONS**

1. Insert the battery into the battery compartment.
2. Turn the volume knob clockwise to turn on the radio. When you hear the "DI" sound, you can turn on the radio and the volume will increase. Turn the volume knob counterclockwise to decrease the volume, turn it all the way, and when you hear the "DI" sound, you can turn off the radio.
3. Adjust the band selector, then turn the tuning knob to receive different programs from AM/FM/SW. When listening to FM/SW, unplug the antenna and extend the length. For clear listening to AM programs change the position of the radio until the best signal is received.
4. BLUETOOTH: Use a BLUETOOTH device such as a mobile phone or computer, open BLUETOOTH and pair the device to play music.
5. BLUETOOTH: Use a BLUETOOTH device such as a mobile phone or computer, open BLUETOOTH and pair it, and choose to play media songs.
6. Built-in rechargeable battery. When the machine sounds low or does not work, it means that the lithium battery is under-voltage or dead. Plug in an external charger and charge. The battery can be fully charged in 3-4 hours.

**ESPECIFICACIONES DE OPERACIÓN**

1. Inserta la batería en el compartimento de la batería.
2. Gira la perilla de volumen en sentido horario para encender la radio. Cuando escuches el sonido "DI", la radio se encenderá y el volumen aumentará. Gira la perilla de volumen en sentido antihorario para disminuir el volumen y gírala completamente hasta escuchar el sonido "DI" para apagar la radio.
3. Ajusta el selector de banda y luego gira la perilla de sintonización para recibir programas diferentes de AM/FM/Onda Corta (SW). Al escuchar FM/Onda Corta, desenchufa la antena y extiéndela. Para una escucha clara de los programas de AM, cambia la posición de la radio hasta recibir la mejor señal.
4. BLUETOOTH: Utiliza un dispositivo BLUETOOTH como un teléfono móvil o una computadora, abre el BLUETOOTH y empareja el dispositivo para reproducir música.
5. BLUETOOTH: Utiliza un dispositivo de BLUETOOTH como un teléfono móvil o una computadora, abre BLUETOOTH y conéctalo, y elige reproducir canciones multimedia.
6. Batería recargable incorporada. Cuando el equipo tenga un sonido bajo o no funcione, significa que la batería de litio tiene bajo voltaje o está descargada. Conecta un cargador externo y carga la batería. La batería se puede cargar por completo en 3-4 horas.

**SPÉCIFICATIONS DE FONCTIONNEMENT**

1. Insérez la batterie dans le compartiment de la batterie.
2. Tournez le bouton de volume dans le sens des aiguilles d'une montre pour allumer la radio. Lorsque vous entendez le son "DI", la radio est allumée et le volume augmentera. Tournez le bouton de volume dans le sens inverse des aiguilles d'une montre pour diminuer le volume. Tournez-le complètement et lorsque vous entendez le son "DI", vous pouvez éteindre la radio.
3. Réglez le sélecteur de bande, puis tournez le bouton de réglage pour recevoir des programmes différents en AM/FM/Ondes courtes (SW). Lors de l'écoute en FM/Ondes courtes, débranchez l'antenne et déployez-la. Pour une écoute claire des programmes en AM, modifiez la position de la radio jusqu'à recevoir le meilleur signal.
4. BLUETOOTH : Utilisez un appareil BLUETOOTH tel qu'un téléphone portable ou un ordinateur, ouvrez le BLUETOOTH et associez l'appareil pour écouter de la musique.
5. LIEN SANS FIL : Utilisez un appareil de LIENSANS FIL comme un téléphone portable ou un ordinateur, ouvrez le LIEN SANS FIL et connectez-le, puis choisissez de lire des chansons multimédias.
6. Batterie rechargeable intégrée. Lorsque l'appareil émet un son faible ou ne fonctionne pas, cela signifie que la batterie lithium est sous-tension ou déchargée. Branchez un chargeur externe et rechargez-la. La batterie peut être complètement chargée en 3 à 4 heures.

**PRECAUTIONS:**

- If you do not use this unit for a long time, please remove the battery.
- Do not hit or drop. Do not place in a wet, corrosive, high temperature or in strong light.
- To clean the surface, use a soft cloth, detergent solution. Do not use strong solvents such as alcohol, gasoline or corrosive.

**PRECAUCIONES:**

- Si no utilizas esta unidad durante mucho tiempo, por favor retira la batería.
- No golpear ni dejar caer. No colocar en un lugar húmedo, corrosivo, de alta temperatura o expuesto a luz intensa.
- Para limpiar la superficie, utiliza un paño suave y una solución detergente. No utilices solventes fuertes como alcohol, gasolina o corrosivos.

**PRÉCAUTIONS:**

- Si vous n'utilisez pas cette unité pendant une longue période, veuillez retirer la batterie.
- Ne pas frapper ni faire tomber. Ne pas placer dans un endroit humide, corrosif, à haute température ou exposé à une forte lumière.
- Pour nettoyer la surface, utilisez un chiffon doux et une solution détergente. N'utilisez pas de solvants forts tels que l'alcool, l'essence ou des produits corrosifs.

**FREQUENCY RANGE:**

AM: 530-1600KHz vv  
FM: 88-108MHz  
SW: 8-16MHz

**RANGO DE FRECUENCIA:**

AM: 530-1600KHz  
FM: 88-108MHz  
SW: 8-16MHz

**PLAGE DE FRÉQUENCES:**

AM: 530-1600 kHz  
FM: 88-108 MHz  
SW: 8-16 MHz

**QFX USA® , Inc.**  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2022 ©



[www.qfxusa.com](http://www.qfxusa.com)



**1-800-864-CLUB (2582)**  
**Mon-Fri 9AM - 5PM (PST)**



**support@qfxusa.com**  
**Mon-Fri 9AM - 5PM (PST)**

# THANK YOU.

**QFX** Where the Party Begins!

We would love to hear about your R-47 journey!  
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA





## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.