

SBX-41201W

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL



WARNING/ADVERTENCIA/ATTENTION



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta en este altavoz. No hay partes reparables por el usuario adentro. Solicite el servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia o la humedad.

No almacene o utilice este producto cerca de líquidos, fuentes de calor, como radiadores, acumuladores de calor. Limpie sólo con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando este símbolo aparece en este manual de instrucciones y siga todas las precauciones, ya que se han precisado.

PRODUCT EQUIPMENT LIST

1. Speaker-----1PC
2. Power Cable-----1PC
3. MP3 Remote Control-----1PC
4. User Manual-----1PC
5. Wired Mic -----2PCS
6. Wireless Mic -----1PC

LISTA DE EQUIPOS DE PRODUCTOS

1. Altavoz-----1PC
2. Cable de alimentación-----1PC
3. Mando a distancia MP3-----1PC
4. Manual de usuario-----1PC
5. Micrófono con cable ----- 2 PCS
6. Micrófono inalámbrico ----- 1 PC

SBX-41201W SETTING

Select<Setting>Icon

1. Network & Internet
2. Connected devices
3. Apps & Notifications
4. Display
 - a. Brightness: 0-100%
 - b. Dark Theme: ON/OFF
 - c. Screen timeout: never/ 30 minutes/ 1 hours/ 2 hours
 - d. Font Size: Small, Default, Large, Largest
 - e. Display Size: Small, Default, Large, Larger, Largest
5. Sound: Adjust media volume
6. Storage
7. Privacy
8. Digital Wellbeing & Parental controls
9. Google
10. System
 - a. Languages & Input
 - b. Date & Time
 - c. Backup
 - d. Reset options
 - e. Advanced
11. About tablet


CONFIGURACIÓN SBX-41201W

Seleccione el icono <Settings>

1. Red e Internet
2. Dispositivos conectados
3. Aplicaciones y notificaciones
4. Pantalla
 - a. Brillo: 0-100%
 - b. Tema oscuro: ON/OFF
 - c. Tiempo de espera de la pantalla: nunca/30 minutos/1 hora/2 horas
 - d. Tamaño de fuente: pequeño, predeterminado, grande, más grande
 - e. Tamaño de pantalla: pequeño, predeterminado, grande, más grande, más grande
5. Sonido: ajuste el volumen de los medios
6. Almacenamiento
7. Privacidad
8. Bienestar digital y control parental
9. Google
10. Sistema
 - a. Idiomas y entrada
 - b. Fecha y hora
 - c. Respaldo
 - d. Opciones de reinicio
 - e. Avanzado
11. Acerca de la tableta



SBX-41201W GUIDE/GUÍA/GUIDE

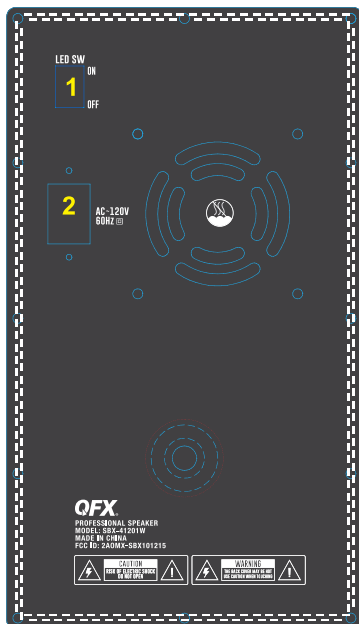

SBX-41201W BACK PANEL

1. LED: ON/ OFF
2. AC CONNECTION: 120V 60Hz

SBX-41201W PANEL POSTERIOR

1. LED ENCENDIDO/APAGADO
2. CONEXIÓN CA: 120V 60Hz

REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Mute: Mute the track
3. Setting
4. PLAY/PAUSE
5. Repeat
6. BT Mode
7. Previous Track: Select previous track
8. Next Track: Select next track.
9. Previous Page: Under the menu of <Music> from Media mode, press to select previous page
10. Next Page: Under the menu of <Music> from Media mode, press to select next page
11. +: Increase the master volume
12. -: Reduce the master volume
13. Home: Quickly return to the main interface
14. Return
- 15-18. <UP><DOWN><LEFT><RIGHT>
19. <OK>
20. Menu: Under the <Music> from Media mode, press to show the song menu
21. TV: Quick access to YOUTUBE
22. KEY number for selecting the certain track
23. APP: Quickly view all apps on the unit
24. Media




REMOTE CONTROL

1. ESPERA: Hace que la unidad esté en modo de espera
2. Silencio: silenciar la pista
3. Configuración
4. REPRODUCCIÓN/PAUSA
5. Repetir
6. Modo BT
7. Pista anterior: seleccione la pista anterior
8. Pista siguiente: seleccione la pista siguiente.
9. Página anterior: En el menú de <Música> del modo Medios, presione para seleccionar la página anterior
10. Página siguiente: En el menú de <Música> del modo Medios, presione para seleccionar la página siguiente
11. +: aumenta el volumen maestro
12. -: Reducir el volumen maestro
13. Inicio: Regresa rápidamente a la interfaz principal
14. Regreso
- 15-18. <ARRIBA><ABAJO><IZQUIERDA><DERECHA>
19. <OK>
20. Menú: En <Música> desde el modo Multimedia, presione para mostrar el menú de canciones
21. TV: acceso rápido a YOUTUBE
22. Número de CLAVE para seleccionar la pista determinada
23. APLICACIÓN: vea rápidamente todas las aplicaciones en la máquina
24. Medios"



SBX-41201W GUIDE/GUÍA/GUIDE

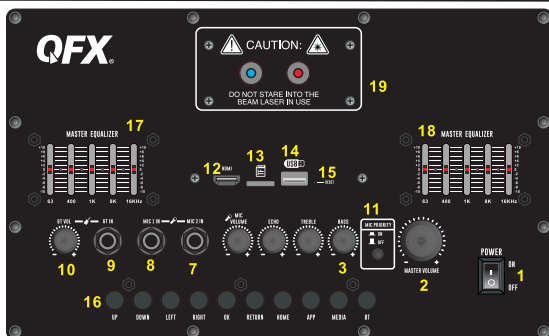

FUNCTIONS:

1. Power Switch: ON/OFF
2. Master Volume Knob: Adjust from Min to Max
3. Bass Knob: Adjust from Min to Max
4. Treble Knob : Adjust from Min to Max
5. Microphone Echo Knob: Adjust from Min to Max
6. Microphone Volume Knob: Adjust from Min to Max
7. Microphone Input 2
8. Microphone Input 1
9. Guitar Input
10. Guitar Volume Knob: Adjust from Min to Max
11. MIC PRIORITY ON/OFF
12. HDMI Jack
13. TF Card Slot
14. USB Slot
15. Reset(Only used when upgrading)
16. Up, Down, Left, Right, OK, Return
Home: Quickly return to the main interface
APP: Quickly view all apps on the unit
Media
BT Mode
17. Master Equalizer 1
18. Master Equalizer 2
19. Laser light: Do not stare into the beam laser in use

FUNCIONES:

1. Interruptor de encendido: encendido/apagado
2. Perilla de volumen maestro: ajuste de mínimo a máximo
3. Perilla de bajos: Ajuste de Min a Max
4. Perilla de agudos: Ajuste de Min a Max
5. Perilla de eco del micrófono: Ajuste de Min a Max
6. Perilla de volumen del micrófono: Ajuste de Min a Max
7. Entrada de micrófono 2
8. Entrada de micrófono 1
9. Entrada de guitarra
10. Perilla de volumen de guitarra: Ajuste de Min a Max
11. PRIORIDAD DE MICRÓFONO ACTIVADO/DESACTIVADO
12. Conector HDMI
13. Ranura para tarjeta TF
14. Ranura USB
15. Restablecer (solo se usa al actualizar)
16. Arriba, Abajo, Izquierda, Derecha, Aceptar, Volver
Inicio: regrese rápidamente a la interfaz principal
APLICACIÓN: vea rápidamente todas las aplicaciones en la unidad
Medios de comunicación
Modo BT
17. Ecualizador maestro 1
18. Ecualizador maestro 2
19. Luz láser: No mire fijamente al rayo láser en uso

SBX-41201W OPERATION/OPERACIÓN/OPÉRATION

SBX-41201W BLUETOOTH

1. Selecting BT function from screen, control panel or remote control
2. Turn on the BT mode on the top left of screen and allow the unit visible to other devices
3. Open the Bluetooth of phone, find the Bluetooth name of the unit called ""QFX SBX-41201W"" to connect and allow to paired
4. On the screen, allow the device to pair
5. After a successful match, you can play the music from speaker

SBX-41201W BLUETOOTH

1. Selección de la función BT desde la pantalla, el panel de control o el control remoto
2. Encienda el modo BT en la parte superior izquierda de la pantalla y permita que la unidad sea visible para otros dispositivos
3. Abra el Bluetooth del teléfono, busque el nombre de Bluetooth de la unidad llamada ""QFX SBX-41201W"" para conectarse y permitir que se empareje
4. En la pantalla, permita que el dispositivo se empareje
5. Después de un match exitoso, puede reproducir la música desde el altavoz

SBX-41201W WIFI FUNCTION:

1. Clicking the WIFI icon in the top right corner of the screen or select WIFI from Settings
2. Turn on the WIFI and search for nearby WIFI networks
3. Choose the corresponding internet equipment and enter the password
4. Successfully connect the WIFI

FUNCION WIFI SBX-41201W:

1. Haga clic en el icono WIFI en la esquina superior derecha de la pantalla o seleccione WIFI en Configuración
2. Encienda el WIFI y busque redes WIFI cercanas
3. Elija el equipo de internet correspondiente e ingrese la contraseña
4. Conecta con éxito el WIFI



SBX-41201W OPERATION/OPERACIÓN/OPÉRATION

SBX-41201W FM APP

1. Connect the network
2. Click the APP <iheartradio>
3. Create an account or log in
4. Enjoying all your favorite stations

APLICACIÓN FM SBX-41201W

1. Conectar la red
2. Haga clic en la APLICACIÓN <iheartradio>
3. Crea una cuenta o inicia sesión
4. Disfrutar de todas tus estaciones favoritas

SBX-41201W YOUTUBE FUNCTION:

Selecting Youtube from screen or remote control(TV button), you can watch the video from the speaker

SBX-41201W FUNCIÓN YOUTUBE:

Al seleccionar Youtube desde la pantalla o el control remoto (botón de TV), puede ver el video desde el altavoz

SBX-41201W PLAY STORE:

Selecting Play store icon, sign in the google account to find the latest Android apps, games, movies, music and so on

SBX-41201W APP:

Selecting APP icon from screen, control panel or remote control, you can see all the downloaded apps on this unit. Press and hold to or uninstall an APP

SBX-41201W PLAY STORE

Al seleccionar el icono de Play Store, inicie sesión en la cuenta de Google para encontrar las últimas aplicaciones, juegos, películas, música de Android, etc

SBX-41201W APLICACIONES

Al seleccionar el icono de la APLICACIÓN desde la pantalla, el panel de control o el control remoto, puede ver todas las aplicaciones descargadas en esta unidad. Mantenga presionado para desinstalar una aplicación

SBX-41201W MEDIA FUNCTION

1. Put USB disk or TF card in the slot (Picture/ music/ video file included)
2. Select U disk icon on the screen, or media button on the panel, or media icon on the remote control
3. Select the corresponding U disk /TF card
4. Choose the corresponding icon (picture/music/video)
5. You can view pictures/play music/watch videos

SBX-41201W FUNCIÓN MULTIMEDIA

1. Coloque el disco USB o la tarjeta TF en la ranura (archivo de imagen/música/video incluido)
2. Seleccione el icono de disco U en la pantalla, o el botón de medios en el panel, o el icono de medios en control remoto
3. Seleccione el disco U/tarjeta TF correspondiente
4. Elija el icono correspondiente (imagen/música/video)
5. Puede ver imágenes/reproducir música/reproducir videos

SBX-41201W CHROME:

Select the chrome icon on the screen to go to the browser

SBX-41201W CROMO:

Seleccione el icono de cromo en la pantalla para ir al navegador

ANDROID MIRRORING:

1. Make sure the unit and Android phone are connected to the same wifi, and the phone need with screen mirroring function and turn on BT function of phone
2. Select < APPs > to find the Android mirroring app
3. Click the Android Mirroring APP and select search
4. Turn on the screen mirroring function of the phone, find the device " SBX-41201W " and pair
5. On the screen, accept the phone to pair
6. After successful pairing, the content displayed on the phone will be synchronized on the SBX-41201W's display"

DUPLICACIÓN DE ANDROID:

1. Asegúrese de que la unidad y el teléfono Android estén conectados al mismo wifi, y que el teléfono necesite la función de duplicación de pantalla y encienda la función BT del teléfono
2. Seleccione < APPs > para encontrar la aplicación de duplicación de Android
3. Haga clic en la aplicación Android Mirroring y seleccione buscar
4. Abra la función de proyección de pantalla del teléfono, busque el dispositivo "" SBX-41201W "" y empareje
5. En la pantalla, acepta el teléfono para emparejar
6. Después de un emparejamiento exitoso, el contenido que se muestra en el teléfono se sincronizará en la pantalla del SBX-41201W

IOS MIRRORING:

1. Make sure the unit and iphone are connected to the same wifi, and the phone need with screen mirroring function and turn on BT function of phone
2. Select < APPS > to find the IOS mirroring app
3. Click the IOS Mirroring APP
4. Turn on the screen mirroring function of the phone, find the device " SBX-41201W " and pair
5. After successful pairing, the content displayed on the iphone will be synchronized on the SBX-41201W's display

DUPLICACIÓN DE IOS:

1. Asegúrese de que la unidad y el iPhone estén conectados al mismo wifi y que el teléfono necesite función de espejo de pantalla y encienda la función BT del teléfono
2. Seleccione < APLICACIÓN > para encontrar la aplicación de duplicación ISO
3. Haga clic en la aplicación de duplicación de IOS
4. Abra la función de duplicación de pantalla del teléfono, busque el dispositivo "SBX-41201W" y empareje
5. Después de un emparejamiento exitoso, el contenido que se muestra en el iPhone se sincronizará en la Pantalla de SBX-41201W



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2024 ©



www.qfxusa.com



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your SBX-41201W journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

