

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL

SAFETY

These basic safety precautions should be followed to ensure proper and safe use of this product:

1. Read all instructions before using the unit. Use this unit only for its intended use as described in this manual.
2. Cleaning: Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a slightly dampened cloth for cleaning and immediately wipe dry.
3. Water and Moisture: Do not use this product near water (e.g., near a bath tub, washbowl, kitchen sink, laundry tub, in wet basements, or near a swimming pool and the like).
4. Ventilation: Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. Do not block these openings by placing the product on a bed, sofa, rug, or other similar surface. Do not place in an enclosed space unless proper ventilation is provided.
5. Replacement Parts: Never attempt to disassemble the unit as this is very dangerous and may cause an electric shock and/or harm from exposure to the laser beam used to read the DVD disc. When replacement parts are required, be sure that your service technician uses replacement parts specified by the manufacturer. Unauthorized substitutions may result in fire, electric shock, or other hazards.

SEGURIDAD

Se deben seguir estas precauciones básicas de seguridad para garantizar un uso adecuado y seguro de este producto:

1. Lea todas las instrucciones antes de usar la unidad. Use esta unidad solo para el uso previsto como se describe en este manual.
2. Limpieza: Desenchufe este producto del tomacorriente antes de limpiarlo. No usar limpiadores líquidos o en aerosol. Usa un poco paño húmedo para limpiar y seque inmediatamente.
3. Agua y humedad: No utilice este producto cerca del agua (p. ej., cerca de una bañera, un lavabo, un fregadero, un lavadero, en lugares húmedos, sótanos, o cerca de una piscina y similares).
4. Ventilación: Se proporcionan ranuras y aberturas en el gabinete para ventilación para garantizar un funcionamiento confiable del producto y para protegerlo del sobrecalentamiento. No bloquee estas aberturas colocando el producto sobre una cama, sofá, alfombra u otra superficie similar. Hacer No lo coloque en un espacio cerrado a menos que se proporcione la ventilación adecuada.
5. Piezas de repuesto: nunca intente desarmar la unidad, ya que esto es muy peligroso y puede causar una descarga eléctrica. y/o daño por la exposición al rayo láser utilizado para leer el disco DVD. Cuando se requieran repuestos, asegúrese de que su El técnico de servicio utiliza las piezas de repuesto especificadas por el fabricante. Las sustituciones no autorizadas pueden provocar incendios, electricidad golpes u otros peligros.

SÉCURITÉ

Ces précautions de sécurité de base doivent être suivies pour garantir une utilisation correcte et sûre de ce produit :

1. Lisez toutes les instructions avant d'utiliser l'appareil. Utilisez cet appareil uniquement pour l'usage auquel il est destiné, tel que décrit dans ce manuel.
2. Nettoyage : Débranchez ce produit de la prise murale avant de le nettoyer. Ne pas utiliser de nettoyeurs liquides ou aérosols. Utilisez un peu chiffon humide pour le nettoyage et essuyer immédiatement.
3. Eau et humidité : n'utilisez pas ce produit près de l'eau (par exemple, près d'une baignoire, d'un lavabo, d'un évier de cuisine, d'une cuve à lessive, dans des sous-sols, ou à proximité d'une piscine, etc.).
4. Ventilation : des fentes et des ouvertures dans l'armoire sont prévues pour la ventilation afin d'assurer un fonctionnement fiable du produit et de protéger-le de la surchauffe. Ne bloquez pas ces ouvertures en plaçant le produit sur un lit, un canapé, un tapis ou toute autre surface similaire. Faire ne pas placer dans un espace clos à moins qu'une ventilation adéquate ne soit fournie.
5. Pièces de rechange : N'essayez jamais de démonter l'appareil car cela est très dangereux et peut provoquer un choc électrique. et/ou des dommages dus à l'exposition au faisceau laser utilisé pour lire le disque DVD. Lorsque des pièces de rechange sont nécessaires, assurez-vous que votre le technicien de service utilise les pièces de rechange spécifiées par le fabricant. Des substitutions non autorisées peuvent entraîner un incendie, des un choc électrique ou d'autres dangers.

PACKAGE CONTENTS:

DVD PLAYER



REMOTE CONTROL



USER MANUAL



AV CABLE



AC ADAPTER



CAR CHARGER

 
DISC HANDLING / MANIPULACIÓN DE DISCOS

- Do not leave discs near heat sources, in direct sunlight, or in high humidity.
- Store discs in their cases when they are not being used.
- Do not touch the disc surface when handling a disc; hold it by the edges.
- Do not write on the disc with a marker etc. Clean discs using a soft cloth.



- No deje los discos cerca de fuentes de calor, bajo la luz directa del sol o en lugares con mucha humedad.
- Guarde los discos en sus estuches cuando no los utilice.
- No toque la superficie del disco cuando manipule un disco; sosténgalo por los bordes.
- No escriba en el disco con un marcador, etc. Limpie los discos con un paño suave.

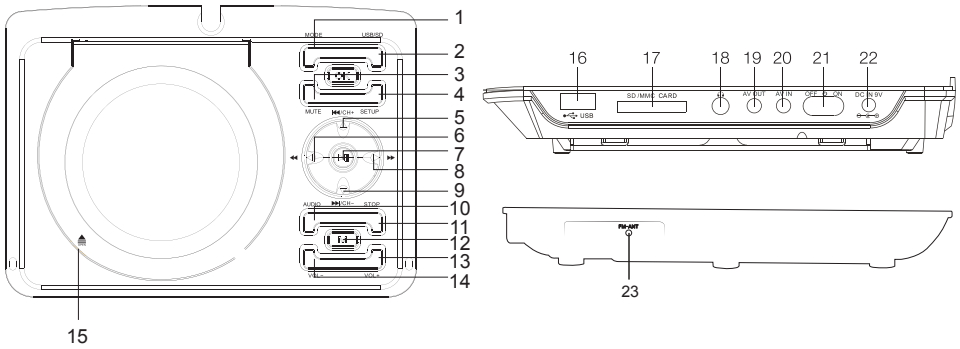 



FUNCTIONS

- | | | |
|--------------|-------------|--------------------|
| 1.MODE | 9.NEX/DOWN | 17. SD CARD |
| 2.USB/SD | 10.AUDIO | 18. HEADPHONE JACK |
| 3.MUTE | 11.STOP | 19. AV OUT |
| 4.SETUP | 12.MENU | 20. AV IN |
| 5.PREV/UP | 13.VOL+ | 21. OFF/ON |
| 6.REV | 14.VOL- | 22. DC IN 9-12V |
| 7.PLAY/PAUSE | 15.OPEN | 23. FM ANT |
| 8.FWD | 16.USB PORT | |

FUNCIONES

- | | | |
|----------------------|-------------------|--------------------------|
| 1.MODO | 9.SIGUIENTE/ABAJO | 17. TARJETA SD |
| 2.USB/SD | 10. AUDIO | 18. TOMA DE AURICULARES |
| 3.MUTE | 11.PARAR | 19. SALIDA AV |
| 4.CONFIGURACIÓN | 12.MENÚ | 20. ENTRADA AV |
| 5.ANTERIOR/ARRIBA | 13.VOL+ | 21. APAGADO/ENCENDIDO |
| 6.REV | 14.VOL- | 22. ENTRADA DE CC 9-12 V |
| 7.REPRODUCCIÓN/PAUSA | 15.ABRIR | 23. FM HORMIGA |
| 8.FWD | 16. PUERTO USB | |

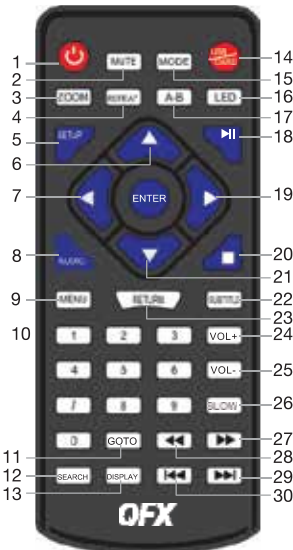
REMOTE CONTROL FUNCTIONS

- | | | |
|--------------------|---------------|---------------|
| 1. POWER | 11. GOTO | 21. DOWN /CH- |
| 2. MUTE | 12. SEARCH | 22. SUBTITLE |
| 3. ZOOM | 13. DISPLAY | 23. RETURN |
| 4. REPEAT | 14. USB/CARD | 24.VOL+ |
| 5. SETUP | 15. MODE | 25. VOL- |
| 6. UP /CH+ | 16. LED | 26. SLOW |
| 7. LEFT | 17. A-B EPG | 27. FWD |
| 8. AUDIO | 18. PLAY/STOP | 28. REV |
| 9. MENU | 19. RIGHT | 29. PREV |
| 10. 0-9,10+NUMBERS | 20. STOP | 30. NEXT |

FUNCIONES DEL CONTROL REMOTO

- | | | |
|--------------------|-------------------------|----------------|
| 1. POTENCIA | 11. IR A | 21. ABAJO /CH- |
| 2. MUTE | 12. BUSCAR | 22. SUBTÍTULO |
| 3. ZOOM | 13. PANTALLA | 23. VOLVER |
| 4. REPETIR | 14. USB/TARJETA | 24. VOL+ |
| 5. CONFIGURACIÓN | 15. MODO | 25. VOL- |
| 6. ARRIBA /CH+ | 16. LED | 26. LENTO |
| 7. IZQUIERDA | 17. A-B EPG | 27. FWD |
| 8. AUDIO | 18. REPRODUCIR/DE-TENER | 28. REV |
| 9. MENÚ | 19.DERECHO | 29. ANTERIOR |
| 10. 0-9,10+NÚMEROS | 20. PARAR | 30. SIGUIENTE |

PANEL KEYS

Menu: Press to return to the root menu for DVD.

Stop: Press to suspend current broadcast.

Play/Pause: Press once to pause play, press again to resume.

Setup: Press to enter the setup menu, then use the direction keys and OK to set the system menu.

USB/CARD: Press repeatedly to switch input source: Disc/ SD card/USB mode

 
Direction Keys: Use direction keys for: Previous/Next/Fast forward/ Fast rewind

OK: Press to enter the selected item or choice.

Open: Press to open the door.

Battery Installation and replacement

Unscrew battery cover and remove. Properly dispose of exhausted batteries. Insert 2 new AAA batteries. Be sure the positive (+) and negative (-) ends of the batteries are facing the correct direction. Replace the battery cover. Do not mix old and new batteries. Do not mix alkaline with rechargeable batteries.

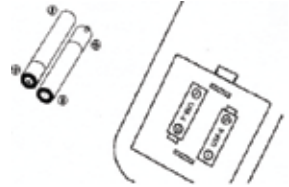**TECLAS DEL PANEL**

Menú: Presiónelo para regresar al menú principal de DVD.

Detener: Presione para suspender la transmisión actual.

Reproducir/Pausar: Presione una vez para pausar la reproducción, presione nuevamente para reanudar.

Configuración: presione para ingresar al menú de configuración, luego use las teclas de dirección y OK para configurar el menú del sistema.

USB/TARJETA: presione repetidamente para cambiar la fuente de entrada: disco/tarjeta SD/modo USB

 
Teclas de dirección: Utilice las teclas de dirección para: Anterior/Siguiente/Avance rápido/Rebobinado rápido

OK: presione para ingresar el elemento o la opción seleccionada.

Abrir: Pulse para abrir la puerta.





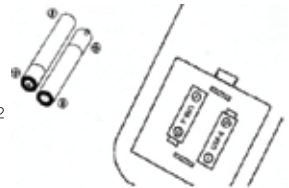























Instalación y reemplazo de la batería

Desenrosque la tapa de la batería y retírela. Deseche correctamente las baterías agotadas. Inserte 2 pilas AAA nuevas. Asegúrese de que los extremos positivo (+) y negativo (-) de las baterías estén orientados en la dirección correcta. Vuelva a colocar la tapa de la batería. No mezcle pilas viejas y nuevas. No mezcle baterías alcalinas con baterías recargables.



KEY FUNCTIONS

Note: Some of the following buttons are only on the remote, some are only on the unit and some are on both the unit and the remote.

-  Switch on / off the unit
-  Press repeatedly to switch between Disc, SD card, USB source input.
-  Press to enter/exit the setup menu.
-  The digit keys can be used to input numbers or to select a track or chapter number
-  Press to enter an item in the menu or to confirm and execute a selection.
-  The direction keys can be used to move the highlight in the menu
-  Press button to switch to DVD or AV INPUT.
-  Press to switch repeat modes. (Note: This function is invalid when the PBC function is activated.)
-  Use to repeat specific sections of a disc. Press this button to mark the starting point(A) and press it again to mark the ending point(B) and the unit will play the selected section over and over again. Press a third
-  time to cancel A-B repeat and resume normal playback. (Note: Points A and B must be in the same title/track).
-  Skip to the previous chapter/track.
-  Skip to the next chapter/track.
-  Press to start a playback or resume normal playback from fast forward, fast reverse, slow-motion, frame-by-frame playback, etc.
-  Press to temporarily pause a playback; press again or press to resume the playback.
-  Press once to pause a playback, then press  to continue the playback. Press twice to stop a playback and the disc will reset to the starting point.
-  Fast forward playback. Available speeds: 2x, 4x, 8x, 16x, 32x and normal speed.
-  Fast reverse playback. Available speeds: 2x, 4x, 8x, 16x, 32x and normal speed
-  Press to enter the TIME menu. Use the digit keys to select a title,chapter,track,track time or disc time to play.Press again to exit the TIME menu.
-  Press this button to temporarily switch off the sound. Press it again to switch it on
-  Press VOLUME+ to turn up the volume. Press VOLUME- to turn down the volume
-  Press repeatedly to select the available audio languages provided by the disc (for DVD).
-  Press repeatedly to switch the available audio channels provided by the disc (for VCD)
-  Press to return to the main menu when playing DVD.
-  Press repeatedly to switch/show the subtitles or turn off the subtitle function. (Note: this function only works if the disc is encoded with subtitles.)
-  Press repeatedly to switch or hide the relative information of the playing disc.
-  Press this button to zoom in the scene. The available zoom ratios are: 2x, 3x and 4x. In zoomed-in mode, the direction keys can be used to move the zooming centre (Note: Applies to DVD,VCD,MPEG4,etc).
-  Press "REV" to search backward, "FWD" to search forward.

MODE

PRESS "MODE" TO CHANGE INPUT SOURCE TO "DVD; AV IN AND ,FM" BY REMOTE CONTROL

FM RADIO operating instructions

1. Press MODE button to switch to FM radio mode.
2. Press the Play/pause button or the "SEARCH" button on remote to enter the scan mode. The frequency numbers on the screen will jump, and save the stations scanned.
3. Press the UP and DOWN button to select and play the saved radio station.
4. Press the number key to enter the corresponding radio station and play.

GENERAL SETUP**CHARGING THE UNIT**

This player is powered by a lithium-polymer battery. It features a high ratio of energy to weight. It has no memory effect and it can be recharged at any time regardless of whether it is fully or partially discharged. It takes about six hours to fully charge the battery and a fully charged battery can be used for up to two hours. Connect the attached AC/DC adaptor to the DC INPUT jack on the unit, then plug the adaptor into the AC outlet.




























Note: Make sure to switch off the unit before charging. The charging indicator LED will change from RED to GREEN to indicate that the battery has been fully charged.

USAGE AND MAINTENANCE OF THE RECHARGEABLE BATTERY.

1. The working temperature of the rechargeable battery ranges from 0 °C to 45 °C
2. Always unplug the unit when it is not being used unless it is being charged.
3. Heat is inevitably produced during playback, this is normal. However switch off and allow it to cool down.
4. Avoid banging the battery and keep it away from heat and moisture.

KEY FUNCTIONS

Note: Some of the following buttons are only on the remote, some are only on the unit and some are on both the unit and the remote

-  Encender/apagar la unidad
-  Presione repetidamente para cambiar entre disco, tarjeta SD, entrada de fuente USB.
-  Pulse para entrar/salir del menú de configuración.
-  Las teclas de dígitos se pueden usar para ingresar números o para seleccionar un número de pista o capítulo
-  Presione para ingresar un elemento en el menú o para confirmar y ejecutar una selección.
-  Las teclas de dirección se pueden usar para mover el resalte en el menú
-  Presione el botón para cambiar a DVD o ENTRADA AV.
-  Presione para cambiar los modos de repetición. (Nota: esta función no es válida cuando la función PBC está activada).
-  Úselo para repetir secciones específicas de un disco. Pulse este botón para marcar el punto de inicio (A) y presínelo nuevamente para marcar el punto final (B) y la unidad reproducirá la sección seleccionada una y otra vez. Presione un tercio
-  Tiempo para cancelar la repetición A-B y reanudar la reproducción normal. (Nota: los puntos A y B deben estar en el mismo título/pista).
-  Saltar al capítulo/pista anterior.
-  Saltar al siguiente capítulo/pista.
-  Pulse para iniciar una reproducción o reanudar la reproducción normal desde avance rápido, retroceso rápido, reproducción a cámara lenta, cuadro por cuadro. etc.
-  Presione para pausar temporalmente una reproducción; presione nuevamente o presione para reanudar la reproducción.
-  Presione una vez para pausar una reproducción, luego presione " para continuar la reproducción. Presione dos veces para detener una reproducción y el disco se restablecerá al punto de inicio.
-  Avance rápido de reproducción. Velocidades disponibles: 2x, 4x, 8x, 16x, 32x y velocidad normal.
-  Reproducción inversa rápida. Velocidades disponibles: 2x, 4x, 8x, 16x, 32x y velocidad normal
-  Pulse para entrar en el menú HORA. Use los dígitos kevs para seleccionar un título, capítulo, pista, tiempo de pista o tiempo de disco para reproducir. Presione de nuevo para salir del menú HORA
-  Presione este botón para apagar temporalmente el sonido. Púlselo de nuevo para encenderlo
-  Presione VOLUMEN+ para subir el volumen. Pulse VOLUMEN- para bajar el volumen
-  Presione repetidamente para seleccionar los idiomas de audio disponibles proporcionados por el disco (para DVD).
-  Presione repetidamente para cambiar los canales de audio disponibles proporcionados por el disco (para VCD)
-  Pulse para volver al menú principal cuando esté reproduciendo un DVD.
-  Presione repetidamente lv para cambiar/mostrar los subtítulos o desactivar la función de subtítulos. (Nota: esta función solo funciona si el disco está codificado con subtítulos).
-  Presione repetidamente para cambiar u ocultar la información relativa del disco de juego
-  Pulse este botón para acercar la escena. Las relaciones de zoom disponibles son: 2x, 3x y 4x. En modo zoom-in. la dirección kevs se puede usar para mover el centro del zoom (Nota: se aplica a DVD.VCD.MPEG4.etc).
-  Pulse "REV" para buscar hacia atrás. "FWD" para buscar hacia adelante.

MODOS

PRESIONE "MODE" PARA CAMBIAR LA FUENTE DE ENTRADA A "DVD; AV IN Y ,FM" POR CONTROL REMOTO

Instrucciones de funcionamiento de la RADIO FM

1. Presione el botón MODE para cambiar al modo de radio FM.
2. Presione el botón Reproducir/pausar o el botón "BUSCAR" en el control remoto para ingresar al modo de escaneo. Los números de frecuencia en la pantalla saltarán y guardarán el estaciones escaneadas.
3. Presione el botón ARRIBA y ABAJO para seleccionar y reproducir la estación de radio guardada.
4. Presione la tecla numérica para ingresar a la estación de radio correspondiente y reproducir.

CONFIGURACIÓN GENERAL**CARGA DE LA UNIDAD**

Este reproductor funciona con una batería de polímero de litio. Cuenta con una alta relación de energía a peso. No tiene efecto memoria y se puede recargar en cualquier momento independientemente de si está total o parcialmente descargada. Se tarda unas seis horas en cargar completamente la batería y una batería completamente cargada se puede usar hasta dos horas. Conecte el adaptador de CA/CC adjunto al conector DC INPUT de la unidad, luego enchufe el adaptador a una toma de CA de 240 V.

Nota: asegúrese de apagar la unidad antes de cargarla. El LED indicador de carga cambiará de ROJO a VERDE para indicar que la batería se ha cargado completamente.

USO Y MANTENIMIENTO DE LA BATERÍA RECARGABLE.

1. La temperatura de trabajo de la batería recargable oscila entre 0 °C y 45 °C
2. Desenchufe siempre la unidad cuando no se esté utilizando, a menos que se esté cargando.
3. Es inevitable que se produzca calor durante la reproducción, esto es normal. Sin embargo, apáguelo y deje que se enfríe.
4. Evite golpear la batería y manténgala alejada del calor y la humedad.

MENU OPERATION

1. Press [SETUP] on the remote control or on the unit to show the setup menu.
2. Press [LEFT] / [RIGHT] to select an item. The submenu of the selected item will be instantly shown.
3. Press [UP] / [DOWN] to select an item in the submenu, then press [OK] / [ENTER] / [RIGHT] to enter.
4. Use [UP] / [DOWN] to select an option, then press [OK] / [ENTER] to confirm or press [LEFT] to cancel.
5. Press [UP] / [DOWN] to continue to set other items in the submenu.
6. Press [LEFT] to go back to the superior menu of the current one.
7. Press [SETUP] again and press [ENTER] / [OK] to exit the setup menu.

**GENERAL SETUP PAGE**

- TV Display: Adjust the screen aspect ratio between 4:3 Pan Scan/4:3 Letter Box/16:9.
- Angle Mark: Displays a mark on the screen when multiple angles are available.
- OSD Language: Allows you to change the menu language.
- Captions: Displays subtitles automatically when available.
- Screen Saver: Displays a screen saver when the portable DVD player is on but not used for a period of time.
- Last memory: Reverts back to the same spot on a DVD if the portable DVD is turned off in the middle of a program.

AUDIO SETUP PAGE

- The Audio menu allows you to change the audio setup of the portable DVD player.
- Downmix: Set downmix to LT/RT, Stereo.
- Dual Mono: Select Stereo, L-Mono, R-Mono or Mix-Mono
- Dynamic: Select FULL, 3/4, 1/2, 1/4 or OFF

**VIDEO SETUP PAGE**

- Panel Quality
- Sharpness: Adjusts the screen sharpness between.
- Brightness: Adjusts the screen brightness (LOW / MID / HIGH).
- Contrast: Adjusts the screen contrast.
- Hue: Adjusts the screen hue.
- Saturation: Adjusts the screen saturation.

**PREFERENCE SETUP PAGE**

- The preference menu option allows you to adjust the default DVD disc setting. (The setting is only available when no media is inside the unit.)
- TV Type: Set TV Type to PAL, AUTO, or NTSC
- Audio: Set the default audio language
- Subtitle: Set the subtitle language
- Disc Menu: Set the disc menu language
- Default: Return the portable DVD to factory default

PLAYBACK

After all the connections are correctly made, switch on the unit.

Loading and Playing a Disc

- A. After connecting power to the unit, set the power switch to the ON position.
- B. Push [OPEN] to open the disc tray. Place a disc in it with the label side facing up.
- C. Close the disc tray. The unit will load the disc and start playing.

MP3/MPEG4 Disc Playback

After the unit loads a MP3/MPEG4 disc, a menu showing the contents of the disc will display on the screen.

1. Press the direction key [UP] / [DOWN] to select a file or a folder.
 - 2.1 Press [OK] to enter the selected folder. The file or the folder in it will be listed instantly.
 - 2.2 Press [OK] to begin to play the selected file.
3. When the disc is stopped press [LEFT] to return to the superior menu.

USB DRIVE&SD/MMC CARD PLAYBACK

Insert a U drive or a card reader into the USB port. Press [SOURCE SELECT] to select USB mode to play the readable files in it. Insert a SD/MMC card into the SD/MMC card port. Press [SOURCE SELECT] to select MC mode to play the readable files in it.

OPERACIÓN DEL MENÚ

1. Presione stUb en el control remoto o en la unidad para mostrar el menú de configuración.
2. Pulse [IZQUIERDA I/DERECHA] para seleccionar un elemento. El submenú del elemento seleccionado se mostrará instantáneamente.
3. Presione [ARRIBA]/ [ABAJO] para seleccionar un elemento en el submenú, luego presione [OK]/[ENTER]/[DERECHA] para ingresar.
4. Use [ARRIBA]/[ABAJO] para seleccionar una opción, luego presione [OK]/[ENTRAR] para confirmar o presione [IZQUIERDA] para cancelar.
5. Presione UP/DOWN] para continuar configurando otros elementos en el submenú.
6. Pulse [IZQUIERDA] para volver al menú superior del actual.
7. Presione (SETUP) nuevamente y presione (ENTERI//OK) para salir del menú de configuración.

PÁGINA DE CONFIGURACIÓN GENERAL

- Pantalla de TV: ajuste la relación de aspecto de la pantalla entre 4:3 Pan Scan/4:3 Letter Box/16:9.
- Marca de ángulo: muestra una marca en la pantalla cuando hay varios ángulos disponibles.
- Idioma OD: Le permite cambiar el idioma del menú.
- Subtítulos: muestra los subtítulos automáticamente cuando están disponibles.
- Protector de pantalla: muestra un protector de pantalla cuando el reproductor de DVD portátil está encendido pero no se usa durante un período de tiempo.
- Último recuerdo: Vuelve al mismo lugar en un DVD si el DVD portátil se apaga en medio de un programa.

**PÁGINA DE CONFIGURACIÓN DE AUDIO**

- El menú Audio le permite cambiar la configuración de audio del reproductor de DVD portátil.
- Downmix: configure downmix en LT/RT, estéreo.
- Mono dual: seleccione estéreo, L-Mono, R-Mono o Mix-Mono
- Dinámico: seleccione COMPLETO, 3/4, 1/2, 1/4 o APAGADO

**PÁGINA DE CONFIGURACIÓN DE VÍDEO**

- Calidad de paneles
- Nitidez: ajusta la nitidez de la pantalla entre.
- Brillo: ajusta el brillo de la pantalla (BAJO / MEDIO / ALTO).
- Contraste: ajusta el contraste de la pantalla.
- Tono: Ajusta el tono de la pantalla.
- Satí gration• Adil cts the screen sett ration

**PÁGINA DE CONFIGURACIÓN DE PREFERENCIAS**

- La opción del menú de preferencias le permite ajustar la configuración predeterminada del disco DVD. (La configuración solo está disponible cuando no hay medios dentro de la unidad).
- Tipo de TV: establezca el tipo de TV en PAL, AUTO o NTSC
- Audio: establezca el idioma de audio predeterminado
- Subtítulo: establece el idioma de los subtítulos
- Menú del disco: establece el idioma del menú del disco
- Predeterminado: devuelve el DVD portátil a los valores predeterminados de fábrica

REPRODUCCIÓN

Una vez realizadas correctamente todas las conexiones, encienda la unidad.

Carga y reproducción de un disco

- A. Después de conectar la alimentación a la unidad, coloque el interruptor de encendido en la posición ON.
- B. Empuje] OPEN] para abrir la bandeja del disco. Coloque un disco con el lado de la etiqueta hacia arriba.
- C. Cierre la bandeja del disco. La unidad cargará el disco y comenzará a reproducirlo.

Reproducción de discos MP3/MPEG4

Después de que la unidad cargue un disco MP3/MPEG4, aparecerá en la pantalla un menú que muestra el contenido del disco.

1. Pulse la tecla de dirección (ARRIBA 1/ABAJO] para seleccionar un archivo o una carpeta.
- 2.1 Presione (OK) para ingresar a la carpeta seleccionada. El archivo o la carpeta que contiene se enumerarán instantáneamente.
- 2.2 Presione [OK] para comenzar a reproducir el archivo seleccionado.
3. Cuando el disco esté detenido, presione [IZQUIERDA] para volver al menú superior.

REPRODUCCIÓN DE UNIDAD USB Y TARJETA SD/MMC

Inserte una unidad U o un lector de tarjetas en el puerto USB. Presione [SOURCE SELECT] para seleccionar el modo USB para reproducir los archivos legibles en él. Inserte una tarjeta SD/MMC en el puerto de la tarjeta SD/MMC. Presione (SELECCIÓN DE FUENTE) para seleccionar el modo MC para reproducir los archivos legibles en él.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



www.qfxusa.com



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PD-107 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

