


MPX-1503

QFX
WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

QFX CONTROL PANEL / PANEL DE CONTROL / PANNEAU DE COMMANDE

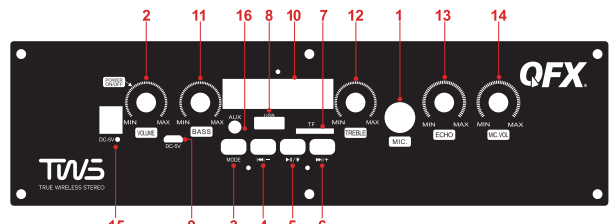

- FUNCTIONS**
1. MIC: Input jack to a microphone.
2. ON/OFF: Power on/off and main volume adjust knob.
3. M (Mode): Short-press to toggle between USB/TF, AUX/FM mode and Bluetooth modes.
4. [Left Arrow]: In FM/USB/TF/Bluetooth modes, short-press to move to the next track or radio station, Long-press to decrease the volume.
5. [Right Arrow]: Under USB/TF and Bluetooth modes, short-press for play and pause, press and hold to change the light mode.
6. [Play/Pause]: In FM/USB/TF/Bluetooth modes, short-press to move to the previous track or radio station, Long-press to increase the volume.
7. TF: Play MP3 music files stored on TF cards (supports FAT32 format with maximum size of 32GB)
8. USB: Play MP3 music files stored on USB drives (supports FAT32 format with maximum size of 32GB)
9. DC 5V: Plug the micro-USB cable to the speaker and connect the other end to the USB power source.
10. Display that shows current functions including modes, radio stations and volume level.
11. BASS: adjust the bass
12. TREBLE: adjust the treble
13. ECHO: adjust the karaoke Echo
14. Mic.Vol: adjust the karaoke volume
15. DC-5V: Plug the DC jack to the speaker and connect the other end to the USB power source
16. AUX: auxiliary function

- FUNCIONES**
1. MIC: Jack de entrada a un micrófono.
2. ENCENDIDO/APAGADO: Botón de encendido/apagado y ajuste de volumen principal.
3. M (Modo): Presione brevemente para alternar entre los modos USB/TF, AUX/FM y Bluetooth.
4. [Left Arrow]: En los modos FM/USB/TF/Bluetooth, presione brevemente para pasar a la siguiente pista o estación de radio, Mantenga presionado para disminuir el volumen.
5. [Right Arrow]: En los modos USB/TF y Bluetooth, presione brevemente para reproducir y pausar, mantenga presionado para cambiar el modo de luz. En modo FM, presione brevemente para buscar y almacenar estaciones automáticamente.
6. [Play/Pause]: En los modos FM/USB/TF/Bluetooth, presione brevemente para pasar a la pista o estación de radio anterior, Mantenga presionado para aumentar el volumen.
7. TF: reproduce archivos de música MP3 almacenados en tarjetas TF (admite formato FAT32 con un tamaño máximo de 32 GB)
8. USB: reproduce archivos de música MP3 almacenados en unidades USB (admite formato FAT32 con un tamaño máximo de 32 GB)
9. DC 5V: conecte el cable micro-USB al altavoz y conecte el otro extremo a la fuente de alimentación USB.
10. Pantalla que muestra las funciones actuales, incluidos los modos, las estaciones de radio y el nivel de volumen
11. bass:ajusta los graves
12. treble:ajusta los agudos
13. echo:ajusta el eco del karaoke
14. mic.vol:ajusta el volumen del karaoke
15. de-5v: Conecte el conector de CC al altavoz y conecte el otro extremo a la fuente de alimentación USB
16. AUX: función auxiliar

- LES FONCTIONS**
1. MIC: Prise d'entrée pour un microphone.
2. MARCHE/ARRÊT: Marche/arrêt et bouton de réglage du volume principal.
3. M (Mode): Appuyez brièvement pour basculer entre les modes USB/TF, AUX/FM et Bluetooth.
4. [Left Arrow]: En modes FM/USB/TF/Bluetooth, appuyez brièvement pour passer à la piste ou à la station de radio suivante, Maintenez enfoncé pour diminuer le volume.
5. [Right Arrow]: En modes USB/TF et Bluetooth, appuyez brièvement pour lire et mettre en pause, appuyez et maintenez pour changer le mode d'éclairage. En mode FM, appuyez brièvement pour rechercher et mémoriser automatiquement les stations.
6. [Play/Pause]: En modes FM/USB/TF/Bluetooth, appuyez brièvement pour passer à la piste ou à la station de radio précédente, Maintenez enfoncé pour augmenter le volume.
7. TF: Lire des fichiers musicaux MP3 stockés sur des cartes TF (prend en charge le format FAT32 avec une taille maximale de 32 Go)
8. USB: Lecture de fichiers musicaux MP3 stockés sur des clés USB (prend en charge le format FAT32 avec une taille maximale de 32 Go)
9. DC 5V: Connectez le câble micro-USB au haut-parleur et connectez l'autre extrémité à l'alimentation USB.
10. Écran affichant les fonctions actuelles, y compris les modes, les stations de radio et le niveau de volume
11. bass: régler les basses
12. treble: régler les aigus
13. echo: régler l'écho du karaoké
14. mic.vol: régler le volume du karaoké
15. de-5v: Branchez la prise CC au haut-parleur et connectez l'autre extrémité à la source d'alimentation USB
16. AUX: fonction auxiliaire

QFX WHERE THE PARTY BEGINS™

Questions? Comments? Contact Us Anytime
Personalized Customer Support. Contact Us Now!
1-800-864-CLUB (2582) Mon-Fri 9AM - 5PM (PST) support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

QFX GENERAL FUNCTIONS / FUNCIONES GENERALES / FONCTIONS GÉNÉRALES

Connect to Bluetooth
Turn the speaker unit power on. Then enable Bluetooth on your mobile device and search for "MPX-1503" to pair your device to the speaker. Once your device is paired, Bluetooth will automatically connect when unit is turned on again.
In Bluetooth mode, play music from your device and use the [Play/Pause] button to Play/Pause. You can short-press [Left Arrow] or [Right Arrow] button to the previous track or next track as well as long press [Left Arrow] or [Right Arrow] button to decrease or increase the volume.
USB/TF Music
Insert USB drive or a TF card with your favorite MP3 music files into the USB or TF ports (supports FAT32 format storage with maximum size of 32GB). The speaker will start to play the music automatically. Press [Play/Pause] button to Play/Pause music, Short-press [Left Arrow] or [Right Arrow] buttons to reflect the previous track and next track or long-press to turn the volume down or up.
FM Radio
Short-press [Play/Pause] to search FM channels automatically. This operation will scan all FM stations and store them to memory. The scan procedure may take several minutes and cannot be interrupted. Once completed, you can short-press [Left Arrow] or [Right Arrow] buttons to change radio stations forward or backward. Long-press [Left Arrow] or [Right Arrow] to increase or decrease the volume.

TWS
Turn on both same items and then press and hold the any piece of MODE button for 5-10 second, indicate tone will be on once pair successfully.
Noted: TWS only work under Bluetooth mode.

Microphone Input
Inserting a microphone plug into microphone jack for singing or speaking
Charging
Plug the USB cable into speaker micro-USB port on the speaker and connect the other end to a USB power source. The Red LED indicator will be on while charging.

Conectar a Bluetooth
Encienda la unidad de altavoz. Luego habilite Bluetooth en su dispositivo móvil y busque "MPX-1503" para emparejar su dispositivo con el altavoz. Una vez que su dispositivo esté emparejado, Bluetooth se conectará automáticamente cuando la unidad se encienda nuevamente.
En el modo Bluetooth, reproduzca música desde su dispositivo y use el botón [Play/Pause] para Reproducir/Pausar. Puede presionar brevemente el botón [Left Arrow] o [Right Arrow] para ir a la pista anterior o siguiente, así como presionar prolongadamente el botón [Left Arrow] o [Right Arrow] para disminuir o aumentar el volumen.

Música USB/TF
Inserte una unidad USB o una tarjeta TF con sus archivos de música MP3 favoritos en los puertos USB o TF (admite almacenamiento en formato FAT32 con un tamaño máximo de 32 GB). El altavoz comenzará a reproducir la música automáticamente. Presione el botón [Play/Pause] para Reproducir/Pausar música. Presione brevemente los botones [Left Arrow] o [Right Arrow] para seleccionar la pista anterior y la pista siguiente o mantenga presionado para subir o bajar el volumen.
Radio FM
Presione brevemente [Play/Pause] para buscar canales de FM automáticamente. Esta operación buscará todas las estaciones de FM y las almacenará en la memoria. El procedimiento de exploración puede tardar varios minutos y no se puede interrumpir. Una vez completado, puede presionar brevemente los botones [Left Arrow] o [Right Arrow] para cambiar las estaciones de radio hacia adelante o hacia atrás, Mantenga presionado [Left Arrow] o [Right Arrow] para aumentar o disminuir el volumen.

TWS
Encienda ambos elementos y luego presione y mantenga presionado cualquier botón de MODO durante 5-10 segundos, indica que el tono estará encendido una vez que se empareje con éxito.
Nota: TWS solo funciona en modo Bluetooth.

Entrada de micrófono
Insertación de un enchufe de micrófono en el conector del micrófono para cantar o hablar
Cargando
Enchufe el cable USB en el puerto micro-USB del altavoz y conecte el otro extremo a una fuente de alimentación USB. El indicador LED rojo estará encendido durante la carga.

Connectez-vous au Bluetooth
Mettez le haut-parleur sous tension. Activez ensuite Bluetooth sur votre appareil mobile et recherchez "MPX-1503" pour coupler votre appareil au haut-parleur. Une fois votre appareil couplé, Bluetooth se connectera automatiquement lorsque l'appareil sera allumé.
En mode Bluetooth, écoutez de la musique à partir de votre appareil et utilisez le bouton [Play/Pause] pour lire/mettre en pause. Vous pouvez appuyer brièvement sur le bouton [Left Arrow] ou [Right Arrow] pour passer à la piste précédente ou à la piste suivante, ainsi qu'appuyer brièvement sur le bouton [Left Arrow] ou [Right Arrow] pour diminuer ou augmenter le volume.

Musique USB/TF
Insérez une clé USB ou une carte TF avec vos fichiers de musique MP3 préférés dans les ports USB ou TF (prend en charge le stockage au format FAT32 avec une taille maximale de 32 Go). Le haut-parleur commencera à jouer la musique automatiquement. Appuyez sur le bouton [Play/Pause] pour lire/mettre en pause la musique. Appuyez brièvement sur les boutons [Left Arrow] ou [Right Arrow] pour sélectionner la piste précédente et la piste suivante ou appuyez brièvement pour baisser ou augmenter le volume.
Radio FM
Appuyez brièvement sur [Play/Pause] pour rechercher automatiquement les chaînes FM. Cette opération balayera toutes les stations FM et les stockera en mémoire. La procédure de numérisation peut prendre plusieurs minutes et ne peut pas être interrompue. Une fois terminée, vous pouvez appuyer brièvement sur les boutons [Left Arrow] ou [Right Arrow] pour changer de station de radio vers l'avant ou vers l'arrière. Appuyez brièvement sur [Left Arrow] ou [Right Arrow] pour augmenter ou diminuer le volume.

TWS
Allumez les deux mêmes éléments, puis appuyez et maintenez enfoncé n'importe quel bouton MODE pendant 5 à 10 secondes, indiquez que la tonalité sera activée une fois la paire réussie.
Remarque: TWS ne fonctionne qu'en mode Bluetooth.

Entrée micro
Insertion d'une prise microphone dans la prise microphone pour chanter ou parler
Mise en charge
Branchez le câble USB dans le port micro-USB du haut-parleur et connectez l'autre extrémité à une source d'alimentation USB. L'indicateur LED rouge sera allumé pendant la charge.

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your MPX-1503 journey!
Tag us @QFXUSA to share your stories.

FOLLOW US @QFXUSA



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor. Each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (I) OF MERCHANTABILITY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA, COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid; (2) a detailed description of Customer's problem with Product; (3) Customer's full name, phone number, and return address; (3) all of the accessories that came with the Product package must be sent along with the main Product; (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling; if in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problems and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.



QFX USA, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058
support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONEVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



www.qfxusa.com