



**INSTRUCTION MANUAL**

**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

**¡ADVERTENCIA!**

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece este símbolo en este manual de instrucciones y seguir todas las precauciones tal como se indican.

**WARNING!**

POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CETTE ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter un incendie ou un choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas ou n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que des radiateurs, des registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de plus de sécurité lorsque ce symbole apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont indiquées.

**PBX-14 BATTERY**

 
The PBX-14 is a Lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging ( 6~8 hours to fully charge the lithium battery ) Even if the battery power is low, it will power on when connected to a power source. When the battery power is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, Please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume, The unit may work and charge with lower level volume. The volume level would be increased as the unit is charging.

**PBX-14 BATERIA**

El PBX-14 es un altavoz PA alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (6 a 8 horas para cargar completamente la batería de litio). Incluso si la batería está baja, se encenderá cuando esté conectada a una fuente de alimentación. Cuando la energía de la batería se está cargando, la luz indicadora de la batería es roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Una vez completada la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante periodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente descargada, la unidad no puede funcionar al 100 % del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar por un tiempo antes de usar con el 100% del volumen. La unidad puede funcionar a cargar con un nivel de volumen más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.

**BATTERIE PBX-14**

Le PBX-14 est un haut-parleur de sonorisation alimenté par batterie au lithium. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (6 à 8 heures pour charger complètement la batterie au lithium). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être réglé sur OFF pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perdra progressivement de sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant d'utiliser avec un volume de 100 %, l'appareil peut fonctionner et se charger avec un volume de niveau inférieur. Le niveau de volume serait augmenté pendant que l'appareil se recharge.

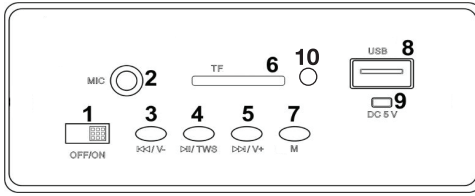

1. On/Off
2. Microphone input
3. Previous (short press) / Volume- (long press)
4. Play/Pause/TWS mode
5. Next (short press) / Volume+ (long press)
6. Micro SD input
7. Change Mode / LED switch
8. USB input
9. Charging socket
10. Aux Input

### Switch ON/OFF

Press to switch the unit ON / OFF. If a USB stick or memory card is inserted, MP3 music will automatically, otherwise you will hear "Bluetooth".

### Charging

Connect the USB cable supplied to a DC5V power source (Computer, or a 5V, 1A charger NOT SUPPLIED). The charging indicator will flash during charging, the light will turn off after fully charged. Full charging time may take up to 5 hours.

### Modes

Short press the MODE(M) to change modes (Bluetooth, USB, FM, TF CARD, OR AUX). Long press this button to switch the ambient light Off or ON.

### Volume

Turn the Volume button to increase or decrease volume.

### Bluetooth Connection

To connect a bluetooth source (phone, tablet, laptop, etc.), activate the Bluetooth mode (see MODES), then search "QFX PBX-14" to connect the two devices. A sound notification confirms the connection.

**Note:** If you connect USB stick or micro SD card, it will shut down the bluetooth connection, and music playback will start automatically. You can return to the bluetooth mode by changing the mode.

### TWS Connection

To listen to music on two speakers at the same time, in stereo:

#### DO NOT ACTIVATE THE SMARTPHONE'S BLUETOOTH UNTIL STEP 3

Turn on the 2 speakers of the same model by holding approximately 20 inches apart.

Press 2 times on the TWS button and you hear a sound notification confirming the connection.

Connect this device in bluetooth to your smartphone (See Wireless Connection)

### USB Flashdrive and Memory Card

Insert the USB stick or memory card(64GB max) and playback will start automatically. If the USB key or card is already inserted and you are in another mode, change the mode. To start or pause playback press button >||, press |<< or >>| to move to the previous or next track

### FM Radio

To use the radio mode, connect the charging cable to the micro USB socket and extend it fully. Reposition the speaker to optimize the radio. Switch to FM mode (see MODES) and then press and hold the SCAN button to start the automatic search of well received stations. Once the stations are memorized, press |<< or >>| to the previous or next station.

### AUX IN

 
Put the unit in AUX mode. Connect the supplied AUX-IN cable and playback starts automatically. Adjust the volume on both devices.

### MICROPHONE

You can connect 1 microphone to sing along with the music.

### LED LIGHT

To turn the LED lights on/off, Press and Hold **MODE/LED** (7)

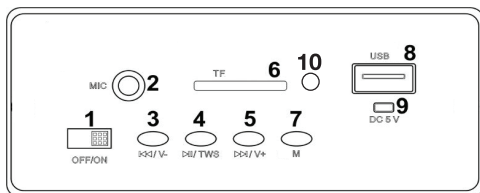

1. Encendido apagado
2. Entrada de micrófono
3. Anterior (pulsación corta) / Volumen- (pulsación larga)
4. Reproducir/Pausar/TWS
5. Siguiente (pulsación corta) / Volumen+ (pulsación larga)
6. Entrada MicroSD
7. Cambio de modo / interruptor LED
8. entrada USB
9. Toma de carga
10. Entrada auxiliar

### Interruptor encendido / apagado

Pulse para encender/apagar la unidad. Si se inserta una memoria USB o una tarjeta de memoria, la música MP3 se escuchará automáticamente; de lo contrario, escuchará "Bluetooth".

### Cargando

Conecte el cable USB suministrado a una fuente de alimentación de 5 V CC (computadora o un cargador de 5 V, 1 A NO INCLUIDO). El indicador de carga parpadeará durante la carga, la luz se apagará después de la carga completa. El tiempo de carga completo puede tardar hasta 5 horas.

### Modas

Presione brevemente el MODO (M) para cambiar de modo (Bluetooth, USB, FM, TF CARD O AUX). Mantenga presionado este botón para apagar o encender la luz ambiental.

### Volumen

Gire el botón de volumen para aumentar o disminuir el volumen.

### Conexión Bluetooth

Para conectar una fuente bluetooth (teléfono, tableta, computadora portátil, etc.), active el modo Bluetooth (ver MODOS), luego busque "QFX PBX-14" para conectar los dos dispositivos. Una notificación sonora confirma la conexión.

Nota: si conecta una memoria USB o una tarjeta micro SD para automóvil, se cerrará la conexión bluetooth y la reproducción de música comenzará automáticamente. Puede volver al modo bluetooth cambiando el modo.

### Conexión TWS

Para escuchar música en dos altavoces al mismo tiempo, en estéreo:

NO ACTIVAR EL BLUETOOTH DEL SMARTPHONE HASTA EL PASO 3

Encienda los 2 parlantes del mismo modelo manteniendo una distancia de aproximadamente 20 pulgadas.

Presiona 2 veces el botón TWS y escucharás una notificación sonora confirmando la conexión.

Conecta este dispositivo en bluetooth a tu smartphone (Ver Conexión Inalámbrica)

### Memoria USB y tarjeta de memoria

Inserte la memoria USB o la tarjeta de memoria (64 GB máx.) y la reproducción comenzará automáticamente. Si la llave o tarjeta USB ya está insertada y se encuentra en otro modo, cambie el modo. Para iniciar o pausar la reproducción, presione el botón >||, presione << o >> para pasar a la pista anterior o siguiente

### Radio FM

Para utilizar el modo radio, conecte el cable de carga a la toma micro USB y extiéndalo por completo. Vuelva a colocar el altavoz para optimizar la radio. Cambie al modo FM (ver MODOS) y luego mantenga presionado el botón SCAN para iniciar la búsqueda automática de estaciones bien recibidas. Una vez memorizadas las emisoras, pulsar << o >> a la estación anterior o siguiente.

### AUX

 
Ponga la unidad en modo AUX. Conecte el cable AUX-IN suministrado y la reproducción comenzará automáticamente. Ajuste el volumen en ambos dispositivos.

### MICRÓFONO

Puede conectar 1 micrófono para cantar junto con la música.

### LUZ LED

Para encender/apagar las luces LED, mantenga presionado MODE/LED (7)

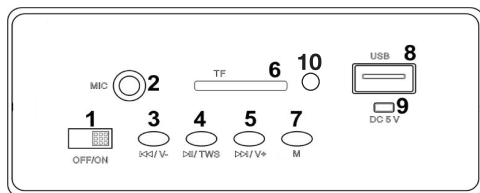

1. Allumé éteint
2. entrée micro
3. Précédent (appui court) / Volume- (appui long)
4. Mode lecture/pause/TWS
5. Suivant (appui court) / Volume+ (appui long)
6. Entrée micro SD
7. Changer de mode / Commutateur LED
8. entrée usb
9. Prise de chargement
10. aux

### Bouton ON / OFF

Appuyez pour allumer/éteindre l'appareil. Si une clé USB ou une carte mémoire est insérée, la musique MP3 sera automatiquement diffusée, sinon vous entendrez "Bluetooth".

### mise en charge

Connectez le câble USB fourni à une source d'alimentation DC5V (Ordinateur, ou un chargeur 5V, 1A NON FOURNI). L'indicateur de charge clignote pendant la charge, le voyant s'éteint après une charge complète. Le temps de charge complet peut prendre jusqu'à 5 heures.

### modes

Appuyez brièvement sur le MODE (M) pour changer de mode (Bluetooth, USB, FM, TF CARD ou AUX). Appuyez longuement sur ce bouton pour éteindre ou allumer la lumière ambiante.

### Volume

Tournez le bouton Volume pour augmenter ou diminuer le volume.

### connexion bluetooth

Pour connecter une source Bluetooth (téléphone, tablette, ordinateur portable, etc.), activez le mode Bluetooth (voir MODES), puis recherchez « QFX PBX-14 » pour connecter les deux appareils. Une notification sonore confirme la connexion.

Remarque : si vous connectez une clé USB ou une voiture micro SD, la connexion Bluetooth sera coupée et la lecture de musique démarrera automatiquement. Vous pouvez revenir au mode Bluetooth en changeant de mode.

### Connexion TWS

Pour écouter de la musique sur deux enceintes en même temps, en stéréo :

**N'ACTIVEZ PAS LE BLUETOOTH DU SMARTPHONE AVANT L'ÉTAPE 3**

Allumez les 2 enceintes du même modèle en les tenant à environ 20 pouces l'une de l'autre.

Appuyez 2 fois sur le bouton TWS et vous entendrez une notification sonore confirmant la connexion.

Connectez cet appareil en bluetooth à votre smartphone (Voir Connexion sans fil)

### Clé USB et carte mémoire

Insérez la clé USB ou la carte mémoire (64 Go max) et la lecture démarre automatiquement. Si la clé USB ou la carte est déjà insérée et que vous êtes dans un autre mode, changez de mode. Pour démarrer ou mettre en pause la lecture, appuyez sur le bouton >||, appuyez sur |<< ou >>| pour passer à la piste précédente ou suivante

### radio FM

Pour utiliser le mode radio, connectez le câble de charge à la prise micro USB et déployez-le complètement. Repositionnez le haut-parleur pour optimiser la radio. Passez en mode FM (voir MODES) puis appuyez longuement sur le bouton SCAN pour démarrer la recherche automatique des stations bien reçues. Une fois les stations mémorisées, appuyez sur |<< ou >>| à la station précédente ou suivante.

### ENTRÉE AUXILIAIRE

Mettez l'appareil en mode AUX. Connectez le câble AUX-IN fourni et la lecture démarre automatiquement. Réglez le volume sur les deux appareils.

### MICROPHONE

Vous pouvez connecter 1 microphone pour chanter avec la musique.

### LUMIÈRE LED

Pour allumer/éteindre les lumières LED, appuyez et maintenez enfoncé MODE/LED (7)



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA®, Inc.**  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

| PRODUCT CATEGORY  | HANDLING | LABOR  | PARTS  |
|---|----------|--------|--------|
| Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers | \$5.00   | 1 Year | 1 Year |
| Personal Stereos  | \$10.00  | 1 Year | 1 Year |
| Portable Radio/Cassette   | \$15.00  | 1 Year | 1 Year |
| Large Portable Radio Cassette                                     | \$20.00  | 1 Year | 1 Year |
| Mobile Audio  | \$10.00  | 1 Year | 1 Year |
| Pro Audio SBX Systems   | \$75.00  | 1 Year | 1 Year |
| Pro Audio PBX Systems   | \$75.00  | 1 Year | 1 Year |
| Televisions   | \$25.00  | 1 Year | 1 Year |
| Telephones  | \$10.00  | 1 Year | 1 Year |

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



[www.qfxusa.com](http://www.qfxusa.com)



1-800-864-2582  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)

# THANK YOU.

**QFX** Where the Party Begins!

We would love to hear about your PBX-14 journey!  
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

