

SBX-61201W

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL



WARNING!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN


To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta en este altavoz. No hay partes reparables por el usuario adentro. Solicite el servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia o la humedad. No almacene o utilice este producto cerca de líquidos, fuentes de calor, como radiadores, acumuladores de calor. Limpie sólo con un paño seco. Los usuarios deben exhibir una seguridad adicional cuando este símbolo aparece en este manual de instrucciones y siga todas las precauciones, ya que se han precisado.

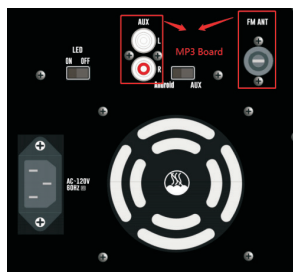

PRODUCT EQUIPMENT LIST

1. Speaker-----1PC
2. Power Cable-----1PC
3. MP3 Remote Control-----2PC
4. User Manual-----1PC
5. Wired Mic -----2PCS
6. Wireless Mic -----1PC

LISTA DE EQUIPOS DE PRODUCTOS

1. Altavoz-----1PC
2. Cable de alimentación-----1PC
3. Mandos a distancia MP3-----2PC
4. Manual de usuario-----1PC
5. Micrófono con cable ----- 2 PCS
6. Micrófono inalámbrico ----- 1 PC

Note

1. Please note that this unit has two boards, one is MP3 board and the other is Android board
2. If you need to use the functions of the Android board, you need to toggle the mode on MP3 Board to AUX mode (screen will display LINE), and move the AUX/Android switch on the back board to Android
3. In MP3 board, if you need to use the AUX function, you need to move the AUX/Android switch on the back board to AUX
4. The outline section above shows which ones belong to the MP3 board and which ones belong to the Android board
The unmarked parts are common to both boards
Please note that 19" display is part of the Android board

Nota

1. Tenga en cuenta que esta unidad tiene dos placas, una es una placa MP3 y la otra es una placa Android
2. Si necesita usar las funciones de la placa Android, debe cambiar el modo en la placa MP3 a AUX modo (la pantalla mostrará LINE), y mueva el interruptor AUX/Android en la placa trasera a Android
3. En la placa MP3, si necesita usar la función AUX, debe mover el interruptor AUX/Android en la placa trasera a AUX
4. La sección de esquema anterior muestra cuáles pertenecen a la placa MP3 y cuáles pertenecen a la placa Android
Las partes no marcadas son comunes a ambas placas.
Tenga en cuenta que la pantalla de 19" es parte de la placa de Android

**SBX-61201W BACK PANEL**

1. LED: ON/OFF
2. AUX INPUT
3. SWITCH FOR Android/ AUX
4. FM Antenna
5. AC CONNECTION: 120V 60Hz

SBX-61201W PANEL TRASERO

1. LED: ENCENDIDO/APAGADO
2. ENTRADA AUXILIAR
3. INTERRUPTOR PARA Android/AUX
4. Antena FM
5. CONEXIÓN CA: 120V 60Hz

The following is the function description for MP3 board
La siguiente es la descripción de la función para la placa MP3

SBX-61201W DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the information of input mode for USB/SD/BLUE/ LINE/FM. When a USB flash drive / SD Card is inserted into the USB/SD input, the unit will automatically switch to USB/SD mode and begin playing Mp3 audio files from the USB flash drive / SD Card.
2. Track Number: The track number currently playing from the USB/SD will display.
3. FM Mode: All FM channels display here. Long Press "play/pause" button for auto scan all channels.

SBX-61201W AJUSTES DEL SISTEMA DE PANTALLA

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB / SD/BLUE / LINE / FM. Cuando se inserta una unidad de tarjeta de memoria flash USB / SD en la entrada USB / SD, la unidad automáticamente cambiar al modo USB / SD y comenzar la reproducción de archivos de audio .mp3 del flash USB Card unidad / SD.
2. Track Número: El número que se está reproduciendo de la pista USB / SD se mostrará Modo
3. FM: Todos los canales de FM pantalla here. Pulsación larga el botón "reproducir / pausa" en el panel frontal para auto escanear todos los canales.

SBX-61201W BLUETOOTH

Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "QFX SBX-61201W" to connect. After a successful match, you can play the music from speaker. You won't need to reconnect the Bluetooth when switching mode.

SBX-61201W BLUETOOTH

Modo de Bluetooth: Abra el bluetooth de moilephone. Find el nombre del bluetooth de la unidad lamada "QFX SBX-61201W" para conectarse. Después de una persona compatible, puede reproducir la música de los altavoces. Usted no tendrá que volver a conectar el Bluetooth cuando el modo de conmutación



SBX-61201W Top PANEL

1. Power Switch: ON/OFF
2. Master Volume Knob: Adjust from Min to Max
3. Bass Knob: Adjust from Min to Max
4. Treble Knob: Adjust from Min to Max
5. Microphone Echo Knob: Adjust from Min to Max
6. Microphone Volume Knob: Adjust from Min to Max
7. Microphone Input 2
8. Microphone Input 1
9. Guitar Input
10. Guitar Volume Knob: Adjust from Min to Max
11. MIC PRIORITY : ON/OFF

12. Mp3 Board Part

- Display Screen: Display the current function in Mp3 Board
- SD Card slot
 - USB Slot
 - Mode Button :Toggle between AUX, USB, SD, FM, BT.

REPE/ DEL

- REC
- REC PLAY/EQ
- Previous Track Button: Select previous track
- Play/Pause Button
- Next Track Button: Select next track

13. Android Board Part

- HDMI Jack
- TF Card Slot
- USB Slot
- Reset(Only used when upgrading)
- Up
- Down
- Left
- Right
- OK
- Devolver
- Return
- Home:Quickly return to the main interface
- APP: Quickly view all apps on the unit
- Media
- BT Mode
- 17. Master Equalizer 1
- 18. Master Equalizer 2

SBX-61201W PANEL superior

1. Interruptor de encendido: encendido/apagado
2. Perilla de volumen maestro: ajuste de mínimo a máximo
3. Perilla de bajos: Ajuste de Min a Max
4. Perilla de agudos: Ajuste de Min a Max
5. Perilla de eco del micrófono: Ajuste de Min a Max
6. Perilla de volumen del micrófono: Ajuste de Min a Max
7. Entrada de micrófono 2
8. Entrada de micrófono 1
9. Entrada de guitarra
10. Perilla de volumen de guitarra: Ajuste de Min a Max
11. PRIORIDAD DE MICROFONO: ENCENDIDO/APAGADO
12. Parte de la placa Mp3

Pantalla de visualización: muestra la función actual en la placa Mp3

- Ranura para tarjetas SD
- Puerto USB
- Botón de modo: Alternar entre AUX, USB, SD, FM, BT.
- REPETICIÓN/ ELIMINACIÓN
- REC
- REPRODUCCIÓN/EQ DE GRABACIÓN
- Botón de pista anterior: selecciona la pista anterior
- Botón de reproducción/pausa
- Botón Pista siguiente: selecciona la pista siguiente

13. Parte de la placa de Android

- Conector HDMI
- Ranura para tarjetas TF
- Puerto USB
- Restablecer (solo se usa al actualizar)
- Arriba
- Abajo
- Izquierda
- Derecha
- OK
- Devolver
- Inicio:Regresa rápidamente a la interfaz principal
- APLICACIÓN: vea rápidamente todas las aplicaciones en la unidad
- Medios de comunicación
- Modo BT
- 17. Ecualizador maestro 1
- 18. Ecualizador maestro 2

SBX-61201W Recording Function

Put USB/SD card in the slot. Then Inserting the wired microphone or turn on the wireless Mic, make sure it is working. First short press "REC" button to start recording, Short press again to save the file. Then long Press "REC PLAY" button to play the recording file, Long press "REC PLAY" to exit the recording function. When the playing the recording file, Long press "REPE/DEL" to delete the recording file.

SBX-61201W Función de grabación

Coloque la tarjeta USB/SD en la ranura. Luego inserte el micrófono con cable o encienda el micrófono inalámbrico, asegúrese de que esté funcionando

Primero presione brevemente el botón "REC" para comenzar a grabar, presione brevemente nuevamente para guardar el archivo. Luego mantenga presionado el botón "REC PLAY" para reproducir el archivo de grabación, mantenga presionado "REC PLAY" para salir de la función de grabación. Cuando reproduzca el archivo de grabación, mantenga presionado "REPE / DEL" para eliminar el archivo de grabación.

TWS CONNECTION

(1)TWS connection: TWS Connection is only for two speakers, can not support quantity over 2 PCS.

(2)Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode, and the word "BLUE" on the LED screen will flash.

(3)At the first time, please press the MODE (TWS) button for 3 seconds, Then two speakers will connect together

(4) Connect the phone: Open the phone Bluetooth settings, Search and Connect the main device Bluetooth Name "QFX SBX-61201W".

(5)Select music from phone and enjoy TWS playing in pairs with two Speakers.

(6)Exit TWS: Long press the MODE(TWS) button for 3 seconds to exit the TWS function

CONEXION TWS

(1) Conexión TWS: la conexión TWS es solo para dos altavoces, no puede admitir cantidades superiores a 2 PCS. (2) Encienda los altavoces, presione el botón MODE para cambiar al modo BLUETOOTH, y la palabra "BLUE" en la pantalla LED parpadeará.

(3) La primera vez, presione el botón MODE (TWS) durante 3 segundos, Entonces dos altavoces se conectarán juntos. (4) Conecte el teléfono: abra la configuración Bluetooth del teléfono, busque y conecte el dispositivo principal Nombre de Bluetooth "QFX SBX-61201W".

(5) Seleccione la música desde el teléfono y disfrute de TWS tocando en pareja con dos altavoces


(6) Salir de TWS: mantenga presionado el botón MODE (TWS) durante 3 segundos para salir de la función TWS

SBX-61201W REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB,SD,FM,AUX,BT
3. REC
4. KEY Number for selecting the certain track
- 5.PLAY REC
6. EQ
- 7.Mute:Mute the track
- 8.PLAY/PAUSE
- 9.CHANNEL+
10. CHANNEL-
11. VOL-:Reduce the master volume
12. VOL+: Increase the master volume
13. REP: Repeat the playing track.
14. Press to Scan Channel in FM Mode
- 15.Previous Track: Select previous channel
- 16.PLAY/PAUSE
17. Next Track: Select next channel.

SBX-61201W REMOTE CONTROL

1. STANDBY: Haga que la unidad estar en modo de espera.
2. Botón de modo de entrada: alternar entre USB, SD, FM, AUX, BT
3. REC
4. Número de tecla para seleccionar la pista determinada
- 5.PALY REC
6. EQ
- 7.Mute: silencia la pista
- 8.PLAY/PAUSE
- 9.CHANNEL +
10. CHANNEL-
11. VOL-: reduce el volumen maestro
12. VOL +: aumenta el volumen maestro
13. REP: repite la pista de reproducción.
14. Presione para escanear el canal en el modo FM
15. Pista anterior: seleccione el canal anterior
16. PLAY/PAUSE
17. Siguiente pista: selecciona el siguiente canal.

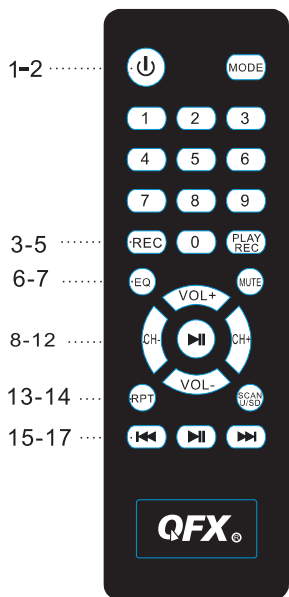

SBX-61201W REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Mute: Mute the track
3. Setting
4. PLAY/PAUSE
5. Repeat
6. BT Mode
7. Previous Track: Select previous track
8. Next Track: Select next track.
9. Previous Page: Under the menu of <music> from Media mode, press to select previous page
10. Next Page: Under the menu of <music> from Media mode, press to select next page
11. +: Increase the master volume
12. -: Reduce the master volume
13. Home: Quickly return to the main interface
14. Return
- 15-18. <UP><DOWN><LEFT><RIGHT>
19. <OK>
20. Menu: Under the <music> from Media mode, press to show the song menu
21. TV: Quick access to YOUTUBE
22. KEY number for selecting the certain track
23. APP: Quickly view all apps on the unit
24. Media

**MANDO A DISTANCIA SBX-61201W**

1. ESPERA: Hace que la unidad esté en modo de espera.
2. Silenciar: silenciar la pista
3. Configuración
4. REPRODUCCIÓN/PAUSA
5. Repetir
6. Modo BT
7. Pista anterior: seleccione la pista anterior
8. Pista siguiente: seleccione la pista siguiente.
9. Página anterior: en el menú de <música> del modo multimedia, presione para seleccionar la página anterior
10. Página siguiente: en el menú de <música> del modo Multimedia, presione para seleccionar la página siguiente
11. +: aumenta el volumen maestro
12. -: Reducir el volumen maestro
13. Inicio: regrese rápidamente a la interfaz principal
14. Regreso
- 15-18. <ARRIBA><ABAJO><IZQUIERDA><DERECHA>
19. <OK>
20. Menú: Debajo de <música> del modo multimedia, presione para mostrar el menú de la canción
21. TV: acceso rápido a YOUTUBE
22. Número de CLAVE para seleccionar la pista determinada
23. APLICACIÓN: vea rápidamente todas las aplicaciones en la unidad
24. Medios



The following is the function description for Android board La siguiente es la descripción de la función para la placa Android

SBX-61201W Setting

- Select <Setting> Icon
1. Network & Internet
 2. Connected devices
 3. Apps & Notifications
 4. Display
 - a. Brightness: 0-100%
 - b. Dark Theme: On/ Will never turn off automatically
 - c. Screen timeout: never/ 30 minutes/ 1 hours/ 2 hours
 - d. Font Size: Small, Default, Large, Largest
 - e. Display Size: Small, Default, Large, Larger, Largest
5. Sound: Adjust media volume
 6. Storage
 7. Privacy
 8. Parental controls
 9. Google
 10. System
 - a. Languages & Input
 - b. Date & Time
 - c. Backup
 - d. Reset options
 - e. Advanced
 11. About tablet

Configuración SBX-61201W

- Seleccione el icono <Settings>
1. Red e Internet
 2. Dispositivos conectados
 3. Aplicaciones y notificaciones
 4. Pantalla
 - a. Brillo: 0-100%
 - b. Tema oscuro: encendido/nunca se apagará automáticamente
 - C. Tiempo de espera de la pantalla: nunca/ 30 minutos/ 1 hora/ 2 horas
 - d. Tamaño de fuente: pequeño, predeterminado, grande, más grande
 - e. Tamaño de pantalla: pequeño, predeterminado, grande, más grande, más grande
 5. Sonido: ajuste el volumen de los medios
 6. Almacenamiento
 7. Privacidad
 8. control parental
 9. Google
 10. Sistema
 - a. Idiomas y entrada
 - b. Fecha y hora
 - C. Respaldo
 - d. Opciones de reinicio
 - e. Avanzado
 11. Acerca de la tableta

SBX-61201W WIFI Function

1. Clicking the WIFI icon in the top right corner of the screen or select WIFI from Settings
2. Turn on the WIFI and search for nearby WIFI networks
3. Choose the corresponding internet equipment and enter the password
4. Successfully connect the WIFI

Función WIFI SBX-61201W

1. Haga clic en el icono WIFI en la esquina superior derecha de la pantalla o seleccione WIFI en Configuración
2. Encienda el WIFI y busque redes WIFI cercanas
3. Elija el equipo de internet correspondiente e ingrese la contraseña
4. Conecta con éxito el WIFI

SBX-61201W Youtube function

Selecting Youtube from screen or remote control(TV button), you can watch the video from the speaker

SBX-61201W función Youtube

Al seleccionar Youtube desde la pantalla o el control remoto (botón de TV), puede ver el video desde el altavoz

SBX-61201W Play Store

Selecting Play store icon, sign in the Google account to find the latest Android apps, games, movies, music and so on

SBX-61201W Tienda de juegos

Al seleccionar el icono de Play Store, inicie sesión en la cuenta de Google para encontrar las últimas aplicaciones, juegos, películas, música de Android, etc



SBX-61201W BLUETOOTH

1. Selecting BT function from screen, control panel or remote control
2. Turn on the BT mode on the top left of screen and allow the unit visible to other devices
3. Open the Bluetooth of phone, find the Bluetooth name of the unit called "QFX SBX-61201W" to connect
4. On the screen, allow the device to pair
5. After a successful match, you can play the music from speaker

SBX-61201W BLUETOOTH

1. Selección de la función BT desde la pantalla, el panel de control o el control remoto
2. Encienda el modo BT en la parte superior izquierda de la pantalla y permita que la unidad sea visible para otros dispositivos
3. Abra el Bluetooth del teléfono, busque el nombre de Bluetooth de la unidad llamada "QFX SBX-61201W" para conectarse
4. En la pantalla, permita que el dispositivo se empareje
5. Después de un match exitoso, puede reproducir la música desde el altavoz

SBX-61201W APPS

Selecting APP icon from screen, control panel or remote control, you can see all the downloaded apps on this unit. Press and hold to uninstall an APP

SBX-61201W APLICACIONES

Al seleccionar el ícono de la APLICACIÓN desde la pantalla, el panel de control o el control remoto, puede ver todas las aplicaciones descargadas en esta unidad. Mantenga presionado para desinstalar una aplicación

SBX-61201W Media Function

1. Put USB disk or TF card in the slot (Picture/ music/ video file included)
2. Select U disk icon on the screen, or media button on the panel, or media icon on the remote control
3. Select the corresponding U disk /TF card
4. Choose the corresponding icon (picture/music/video)
5. You can view pictures/play music/watch videos

SBX-61201W Función multimedia

1. Coloque el disco USB o la tarjeta TF en la ranura (archivo de imagen/música/video incluido)
2. Seleccione el ícono de disco U en la pantalla, o el botón de medios en el panel, o el ícono de medios en el control remoto
3. Seleccione el disco U/tarjeta TF correspondiente
4. Elija el ícono correspondiente (imagen/música/video)
5. Puede ver imágenes/reproducir música/ver videos

SBX-61201W FM

1. Connect the network
2. Click the APP <iheartradio>
3. Create an account or log in
4. Enjoying all your favorite stations

SBX - 61201W FM

1. Conectar la red
2. Haz clic en la aplicación <iheartradio>
3. Crear una cuenta o inicie sesión
4. Disfrutar de todas tus estaciones favoritas



SBX-61201W Chrome

Select the Chrome icon on the screen to go to the browser

SBX-61201W Chrome

Seleccione el icono de Chrome en la pantalla para ir al navegador

Android Mirroring

1. Make sure the unit and Android phone are connected to the same wifi, the phone need with screen mirroring function and turn on BT function of phone
2. Select < APPs > to find the Android mirroring app
3. Click the Android Mirroring APP and select Search
4. Turn on the screen mirroring function of the phone, find the device "QFX SBX-61201W" and pair
5. On the screen, accept the phone to pair
6. After successful pairing, the content displayed on the phone will be synchronized on the SBX-61201W's display

Duplicación de Android

1. Asegúrese de que la unidad y el teléfono Android estén conectados al mismo wifi, el teléfono necesita pantallafunción de espejo y enciende la función BT del teléfono
2. Seleccione < APLICACIONES > para encontrar la aplicación de duplicación de Android
3. Haga clic en la aplicación Android Mirroring y seleccione Buscar
4. Encienda la función de duplicación de pantalla del teléfono, busque el dispositivo "QFX SBX-61201W" y empareje
5. En la pantalla, acepta el teléfono para emparejar
6. Después de un emparejamiento exitoso, el contenido que se muestra en el teléfono se sincronizará en elPantalla de SBX-61201W

IOS Mirroring

1. Make sure the unit and iphone are connected to the same wifi, the phone need with screen mirroring function and turn on BT function of phone
2. Select < Settings > to find the IOS mirroring app
3. Click the IOS Mirroring APP
4. Turn on the screen mirroring function of the phone, find the device "QFX SBX-61201W" and pair
5. After successful pairing, the content displayed on the iphone will be synchronized on the SBX-61201W's display

Duplicación de IOS

1. Asegúrese de que la unidad y el iPhone estén conectados al mismo wifi, el teléfono necesita duplicación de pantallafunción y enciende la función BT del teléfono
2. Seleccione < Configuración > para encontrar la aplicación de duplicación IOS
3. Haga clic en la aplicación de duplicación de IOS. Encienda la función de duplicación de pantalla del teléfono, busque el dispositivo "QFX SBX-61201W" y empareje
5. Después de un emparejamiento exitoso, el contenido que se muestra en el iPhone se sincronizará en elPantalla de SBX-61201W



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.

RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



www.qfxusa.com



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your SBX-61201W journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

