

J-240BT

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL

⚠ WARNING! ⚠

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

⚠ ¡ADVERTENCIA! ⚠

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REMITIR TODO SERVICIO A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.

IMPORTANT SAFETY MEASURES

Before using this machine, please read all the safety and operating instructions. These safety and operating instructions should be kept in condition of consultation.

MEDIDAS DE SEGURIDAD IMPORTANTES

Antes de utilizar esta máquina, lea todas las instrucciones de seguridad y funcionamiento. Estos seguridad y las instrucciones de funcionamiento deben mantenerse en condiciones de consulta.




- 1. Electric Power Supply Line:** Keep the power cord safe from being trampled on, pressed on by heavy objects, or pierced. Make sure that the cord has ample space to rest on the ground and is not stressed. DO NOT pull or drag the power supply line.
- 2. Ventilation:** This unit must be set in a ventilated space. DO NOT cover the vents on the back panel for any reason. If placed alongside a wall, distance the unit a minimum of 10cm to allow air flow. DO NOT surface that might restricted good air flow.
- 3. Dismantling:** DO NOT dismantle or open the unit. This is a high-powered unit that can cause serious harm if tampered with. DO NOT Open.
- 4. Smoke:** Please unplug the power supplies cord from the wall outlet immediately if unusual smoke appears and contact customer support.

Please make sure the voltage switch inside battery compartment is set to the AC voltage of the country you are using the stereo.

- 1. Línea de alimentación eléctrica:** Evite que el cable de alimentación sea pisoteado, presionado por objetos pesados o perforado. Asegúrese de que el cable tenga suficiente espacio para descansar en el suelo y que no esté tenso. NO tire ni arrastre la línea de alimentación.
- 2. Ventilación:** Esta unidad debe instalarse en un espacio ventilado. NO cubra las rejillas de ventilación del panel posterior por ningún motivo. Si se coloca junto a una pared, separe la unidad un mínimo de 10 cm para permitir el flujo de aire. NO coloque superficies que puedan restringir el buen flujo de aire.
- 3. Desmontaje:** NO desmonte ni abra la unidad. Esta es una unidad de alta potencia que puede causar daños graves si se manipula. No abrir.
- 4. Humo:** desenchufe el cable de alimentación de la toma de corriente inmediatamente si aparece humo inusual y comuníquese con el servicio de atención al cliente.

Asegúrese de que el interruptor de voltaje dentro del compartimiento de la batería esté configurado en el voltaje de CA del país en el que está usando el estéreo.

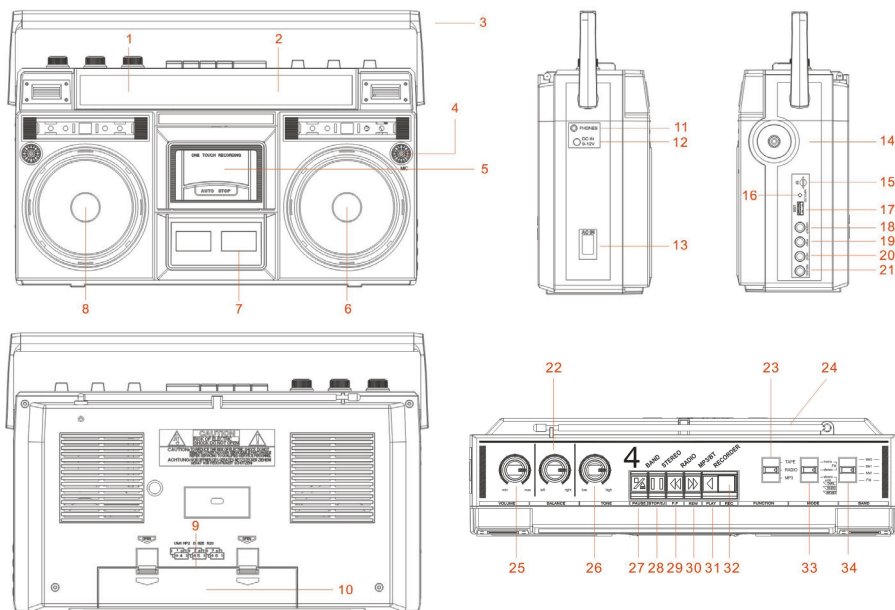

1. Audio Level and FM Stereo Indicator
2. Radio Dial
3. Swivel Handle
4. Microphone
5. Cassette Tape Compartment
6. Right Speaker
7. Left/Right Channel Volume Unit (VU) Meters
8. Left Speaker
9. Install 6 x UM-1"D"Cell Batteries Inside Compartment
10. Battery Compartment Door
11. Stereo Headphones/Earphones Output Jack
12. 9-12VDC Input Jack
13. 110V / 220VAC Power Input
14. Radio Tuning Control
15. TF Card
16. MP3 Playback LED Indicator
17. USB Port
18. Mode/Pause/Play
19. Previous Track
20. Next Track
21. REC/DEL Record/Delete
22. Left/Right Balance Control
23. Tape/Radio/MP3 Function Switch
24. Telescopic Antenna
25. Volume Control
26. Tone Control
27. Cassette Tape Pause Button
28. Cassette Tape Stop/Eject Button
29. Cassette Tape Rewind Button
30. Cassette Tape Fast Forward Button
31. Cassette Tape Play Button
32. Cassette Tape Record Button
33. Mono/Stereo/Wide Stereo FM Settings
34. FM/MW (AM)/SW1/SW2 Band Switch

1. Indicador de nivel de audio y estéreo FM
2. Esfera de radio
3. Mango giratorio
4. Micrófono
5. Compartimiento de cinta de casete
6. Altavoz derecho
7. Medidores de unidad de volumen (VU) de canal izquierdo/derecho
8. Altavoz izquierdo
9. Instale 6 baterías UM-1 de celda "D" dentro del compartimiento
10. Puerta del compartimiento de la batería
11. Conector de salida de auriculares/auriculares estéreo
12. Conector de entrada de 9-12 VCC
13. Entrada de alimentación de 110 V/220 V CA
14. Control de sintonización de radio
15. Tarjeta TF
16. Indicador LED de reproducción de MP3
17. Puerto USB
18. Modo/Pausa/Reproducir
19. Pista anterior
20. Pista siguiente
21. REC/DEL Grabar/Borrar
22. Control de equilibrio izquierdo/derecho
23. Interruptor de función de cinta/radio/MP3
24. Antena telescópica
25. Control de volumen
26. Control de tono
27. Botón de pausa de la cinta de casete
28. Botón de parada/expulsión de la cinta de casete
29. Botón de rebobinado de cinta de casete
30. Botón de avance rápido de cinta de casete
31. Botón de reproducción de cinta de casete
32. Botón de grabación de cinta de casete
33. Configuración de FM mono/estéreo/estéreo amplio
34. Interruptor de banda FM/MW (AM)/SW1/SW2

Operation

Cassette Tape:

1. Switch the Tape/Radio/MP3 function switch to Tape mode. Insert the cassette tape into the compartment with the magnetic tape facing up as you insert the cassette. Press the play button to play the tape, pause to pause the tape or stop to stop the tape.
2. Press the rewind button to go back or fast forward to go forward.
3. To record onto the cassette tape, make sure that the tape tab will allow tape recording onto the tape.

Radio:

1. Choose FM, MW (AM), SW1 or SW2 radio band. Turn the radio tuning control knob to receive the radio frequency. Extended and adjust the telescoping antenna as needed for optimal reception.
2. In FM mode, you may change the FM setting to either monaural (mono), stereo or wide stereo which creates a more expansive, surround-type sound. Adjust this setting to your desired sound preference.
3. To record from radio onto a cassette tape, put the cassette tape in the compartment, and press the tape recording button while the desired radio station is tuned in.
4. To record from radio onto a USB drive, insert a USB drive and press the REC/DEL key. Short press to end the recording. Press and hold REC/DEL button to delete the recording.

USB/TF Music Player/Recorder

1. To play MP3 music stored on a USB drive or TF card, switch the Tape/Radio/MP3 function switch to MP3 mode. Insert the USB or TF card into the appropriate port or slot. Use the MODE/P, PREV and NEXT buttons on the side of the unit to control the MP3 song playback. You can also press and hold PREV or NEXT buttons to fast rewind or fast forward in the music track.
2. To record from a cassette tape to USB, insert a USB drive. Then play the tape and press the REC/DEL buttons. The songs on the cassette tape will be recorded to the USB drive. Press and hold REC/DEL to delete the recording files.

Bluetooth:

1. Set the Tape/Radio/MP3 function switch to MP3 mode. If a USB drive or TF card is not inserted, the unit will automatically default to the Bluetooth mode.
2. Enable Bluetooth on your mobile phone, search and connect to "QFX J-240BT". Now you can stream music from your mobile device to the unit.
3. To record Bluetooth music/audio onto a cassette tape, play Bluetooth music, then press the cassette tape record key and tape will start recording.
4. To record from Bluetooth music/audio onto a USB drive, insert a USB drive. Play music over Bluetooth, then press the REC/DEL button and the recording will start. Press it again to stop recording. Press and hold the REC/DEL button to delete the recorded file.

Microphone Recording To Cassette Tape or USB

1. The built-in microphone is located on the front, right side of the unit.
2. To make a microphone recording to cassette tape, press the tape REC button and cassette recording will begin. Speak into the mic with 12" range. Press stop to finish recording, then rewind the tape and play to hear it.
3. To make a microphone recording to USB:
 1. Switch the mode position to "MP3" and insert a USB drive.
 2. Press the REC button briefly to enter USB recording mode and speak into the mic within 12" range.
 3. The MP3 LED will flash confirming that the unit is recording.
 4. Press the REC key again to end the recording.
 5. To play the recording, double-click the REC key and then press PREV to play the mic recording.

Sound Controls:

Adjust the Volume, Balance and Tone controls to your preferences. In Bluetooth mode, you may also adjust the volume on your mobile device to its optimal setting.

Specifications

Radio Frequency Range:

- FM: 88-108MHz
- MW: 520-1600KHz
- SW1: 3-8MHz
- SW2: 7-23MHz

Power Requirement: 110VAC, 60Hz (AC cord included)

Battery Compartment: 9V (requires 6 x UM-1 "D" cell batteries not included)

Operación

Cinta de casete:

1. Cambie el interruptor de función Tape/Radio/MP3 al modo Tape. Inserte la cinta de casete en el compartimiento con la cinta magnética hacia arriba a medida que inserta el casete. Presione el botón de reproducción para reproducir la cinta, pausa para pausar la cinta o detener para detener la cinta.
2. Pulse el botón de rebobinado para retroceder o avance rápido para avanzar.
3. Para grabar en la cinta de casete, asegúrese de que la lengüeta de la cinta permita grabar en la cinta.

Radio:

1. Elija la banda de radio FM, MW (AM), SW1 o SW2. Gire la perilla de control de sintonización de radio para recibir la frecuencia de radio. Extienda y ajuste la antena telescópica según sea necesario para una recepción óptima.
2. En el modo FM, puede cambiar la configuración de FM a monoaural (mono), estéreo o estéreo ancho, lo que crea un sonido de tipo envolvente más expansivo. Ajuste esta configuración a su preferencia de sonido deseada.
3. Para grabar de la radio a una cinta de casete, coloque la cinta de casete en el compartimiento y presione el botón de grabación de cinta mientras se sintoniza la estación de radio deseada.
4. Para grabar desde la radio a una unidad USB, inserte una unidad USB y presione la tecla REC/DEL. Pulsación corta para finalizar la grabación. Mantenga presionado el botón REC/DEL para eliminar la grabación.

Reproductor/grabador de música USB/TF

1. Para reproducir música MP3 almacenada en una unidad USB o tarjeta TF, cambie el interruptor de función Cinta/Radio/MP3 al modo MP3. Inserte la tarjeta USB o TF en el puerto o ranura correspondiente. Use los botones MODE/P, PREV y NEXT en el costado de la unidad para controlar la reproducción de la canción MP3. También puede mantener presionados los botones ANTERIOR o SIGUIENTE para retroceder o avanzar rápidamente en la pista de música.
2. Para grabar desde una cinta de casete a USB, inserte una unidad USB. Luego reproduzca la cinta y presione los botones REC/DEL. Las canciones de la cinta de casete se grabarán en la unidad USB. Mantenga presionado REC/DEL para eliminar los archivos de grabación.

Bluetooth:

1. Ajuste el interruptor de función Tape/Radio/MP3 al modo MP3. Si no se inserta una unidad USB o una tarjeta TF, la unidad pasará automáticamente al modo Bluetooth.
2. Habilite Bluetooth en su teléfono móvil, busque y conéctese a "QFX J-240BT". Ahora puede transmitir música desde su dispositivo móvil a la unidad.
3. Para grabar música/audio Bluetooth en una cinta de casete, reproduzca música Bluetooth, luego presione la tecla de grabación de cinta de casete y la cinta comenzará a grabar.
4. Para grabar música/audio Bluetooth en una unidad USB, inserte una unidad USB. Reproduzca música a través de Bluetooth, luego presione el botón REC/DEL y comenzará la grabación. Púlselo de nuevo para detener la grabación. Mantenga presionado el botón REC/DEL para eliminar el archivo grabado.

Grabación de micrófono

1. El micrófono incorporado está ubicado en el lado derecho frontal de la unidad.
2. Para hacer una grabación con micrófono en una cinta de casete, presione el botón REC de la cinta y comenzará la grabación de la casete. Habla al micrófono con un rango de 12". Presione detener para terminar de grabar, luego rebobine la cinta y reproduzca para escucharla.
3. Para hacer una grabación de micrófono a USB:
 1. Cambie la posición de modo a "MP3" e inserte una unidad USB.
 2. Presione el botón REC brevemente para ingresar al modo de grabación USB y hable al micrófono dentro de un rango de 12".
 3. El LED MP3 parpadeará para confirmar que la unidad está grabando.
 4. Vuelva a pulsar la tecla REC para finalizar la grabación.
 5. Para reproducir la grabación, haga doble clic en la tecla REC y luego presione PREV para reproducir la grabación del micrófono.

Controles de sonido:

Ajuste los controles de Volumen, Balance y Tono a sus preferencias. En el modo Bluetooth, también puede ajustar el volumen de su dispositivo móvil a su configuración óptima.

Especificaciones

Rango de radiofrecuencia:

FM:88-108MHz

MW:520-1600KHz

SW1: 3-8 MHz

SW2: 7-23MHz

Requisito de alimentación: 110 VCA, 60 Hz (cable de CA incluido)

Compartimiento de batería: 9V (requiere 6 baterías de celda UM-1 "D" no incluidas)



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your J-240BT Journey!
Tag us **@QFXUSA** to share your stories.