

TMS-1253



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The TMS-1253 is a rechargeable battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (4-5 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El TMS-1253 es un altavoz PA con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (4-5 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarlo con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.

BATTERIE

Le TMS-1253 est un haut-parleur de sonorisation alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (4-5 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser avec un volume de 100 %. L'appareil peut fonctionner et se charger avec un volume inférieur. Le niveau de volume augmenterait à mesure que l'appareil est en charge.




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2A0MX-81215

TMS-1253 Back Panel Controls

 1. **POWER:** ON / OFF Power Switch
2. **VOLUME:** Master Volume Control Knob
3. **ECHO:** Mic Echo Control Knob
4. **MIC.VOL:** Microphone Volume Control
5. **BASS:** Bass Control Knob
6. **TREBLE:** Treble Control Knob
7. **MODE:**
 - a. Press to toggle AUX, USB, TF, FM Radio and Bluetooth modes.
 - b. Press-and-hold to turn LED party lights ON or OFF.
8. **TF:** TF Card Slot to Play MP3 formatted music files stored on TF cards
9. **USB:** USB port to play MP3 formatted music files stored on USB drives
10. **AUX:** 3.5mm auxiliary input jack to connect from external audio devices
11. **MIC IN:** 6.3mm microphone input jack to connect a wired microphone
12. **CHARGE:** Battery charging LED indicator
13. **DC:** 13.5VDC power input jack

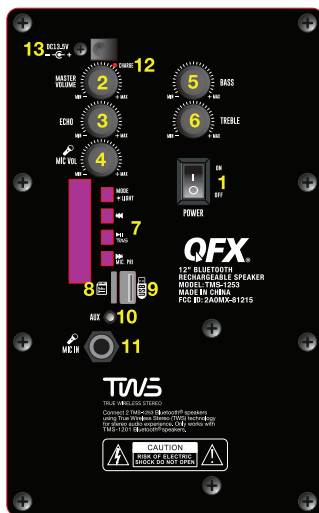

DISPLAY

The LED screen will display the following information:

- Input Mode (displays USB, TF, Bluetooth, AUX or FM)
- When the USB drive or TF card is inserted, it will switch to USB/TF mode and begin playing your MP3 formatted music files. The track number currently playing from the USB/TF will be displayed.
- In FM radio mode, the FM radio station channels will be displayed. Press the Play/Pause button while in FM mode to auto-scan and save the radio stations received in your area.

REMOTE CONTROL

1. **STANDBY:** Make the unit to be standby mode.
2. **Input Mode Button:** Toggle between USB, TF, FM, AUX, and BT.
3. **Mute:** Mute the track volume.
4. **PLAY/PAUSE:** Play or pause music.
5. **Previous Track:** Select previous channel.
6. **Next Track:** Select next channel.
7. **EQ:** Select EQ mode.
8. **VOL-:** Reduce the master volume.
9. **VOL+:** Increase the master volume.
10. **REP:** Repeat the playing track.

11. Press to Scan Channels in FM Mode

12-21. KEY Number for selecting the certain track for USB flash drive or TF



BLUETOOTH

Enable Bluetooth on your mobile device. On the device, find "QFX TMS-1253" to connect. After successful pairing, you can stream music wirelessly from our Bluetooth device.

TRUE WIRELESS STEREO (TWS)

 
Two TMS-1253 QFX speakers can pair via Bluetooth to deliver True Wireless Stereo (TWS) sound.

To do so:

1. Turn both speakers power ON
2. Select Bluetooth mode on both speakers
3. Press the Play/Pause button on one speaker only for 3 seconds. Then the speakers will connect together.
4. Next, to connect to your Bluetooth device, search for the QFX model number (QFX TMS-1253)
5. After successful pairing, you can stream music wirelessly from your Bluetooth device to both speakers in True Wireless Stereo (TWS).
6. Press-and-hold TWS to exit True Wireless Stereo mode.

Controles del Panel Trasero del TMS-1253

1. **ENCENDIDO:** Interruptor de Encendido/Apagado
2. **VOLUMEN:** Perilla de Control de Volumen Principal
3. **ECO:** Perilla de Control de Eco del Micrófono
4. **VOLUMEN DEL MICRÓFONO:** Control de Volumen del Micrófono
5. **GRAVES:** Perilla de Control de Graves
6. **AGUDOS:** Perilla de Control de Agudos
7. **MODO:** Botón de Modo
 - a. Presione para alternar los modos AUX, USB, TF, Radio FM y Bluetooth.
 - b. Mantenga presionado para encender o apagar las luces LED para fiestas.
8. Presione para seleccionar la pista o estación anterior
9. Presione para seleccionar Reproducir o Pausar música. Botón TWS al conectar dos altavoces mediante True Wireless Stereo
10. Presione para seleccionar Siguiente pista o estación. Mantenga presionado para seleccionar o salir de la función Prioridad de micrófono.
11. **TF:** Ranura TF para reproducir MP3 desde tarjetas TF
12. **USB:** Puerto USB para reproducir MP3 desde unidades USB
13. **AUX:** Conector de entrada auxiliar de 3,5 mm para dispositivos de audio
14. **MIC IN:** Conector de entrada de micrófono de 6,3 mm con cable
15. **CARGA:** Indicador LED de carga de batería
16. **CC:** Conector de entrada de alimentación de 13,5 VCC

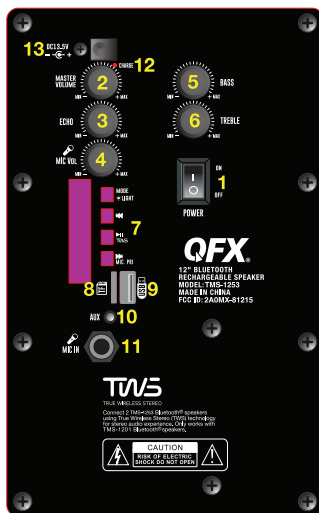

PANTALLA

La pantalla LED mostrará la siguiente información:

- Modo de entrada (muestra USB, TF, Bluetooth, AUX o FM)
- Cuando se inserte la unidad USB o la tarjeta TF, cambiará al modo USB/TF y comenzará a reproducir sus archivos de música en formato MP3. Se mostrará el número de pista que se está reproduciendo actualmente desde USB/TF.
- En modo de radio FM, se mostrarán los canales de estación de radio FM. Presione el botón de Reproducir/Pausa mientras está en modo FM para hacer una búsqueda automática y guardar las estaciones de radio recibidas en su área.

REMOTE CONTROL

1. **Standby:** Poner la unidad en modo de espera.
2. **Botón de Modo de Entrada:** Alternar entre USB, TF, FM, AUX y BT.
3. **Silencio:** Silenciar el volumen de la pista.
4. **PLAY/PAUSE:** Reproducir o pausar la música.
5. **Pista Anterior:** Seleccionar la pista anterior.
6. **Siguiente Pista:** Seleccionar la siguiente pista.
7. **EQ:** Seleccionar el modo de ecualización (EQ).
8. **VOL-:** Reducir el volumen principal.
9. **VOL+:** Aumentar el volumen principal.
10. **REP:** Repetir la pista que se está reproduciendo.
11. Presionar para Escanear Canales en Modo FM.
- 12-21. Número de tecla para seleccionar una pista específica en una unidad USB o tarjeta TF.



BLUETOOTH

Activa Bluetooth en tu dispositivo móvil. Luego, busca "QFX TMS-1253" en el dispositivo para conectar. Después de emparejar correctamente, podrás transmitir música de forma inalámbrica desde nuestro dispositivo Bluetooth.

TRUE WIRELESS STEREO (TWS)

 
Dos altavoces QFX TMS-1253 pueden emparejarse vía Bluetooth para proporcionar sonido estéreo verdadero inalámbrico (TWS).

Para hacerlo:

1. Enciende ambos altavoces.
2. Selecciona el modo Bluetooth en ambos altavoces.
3. Presiona el botón de Reproducir/Pausa en solo uno de los altavoces durante 3 segundos. Luego, los altavoces se conectarán entre sí.
4. A continuación, para conectar tu dispositivo Bluetooth, busca el número de modelo (QFX TMS-1253).
5. Después de emparejar correctamente, podrás transmitir música de forma inalámbrica desde tu dispositivo Bluetooth a ambos altavoces en modo estéreo verdadero inalámbrico (TWS).
6. Presiona y mantén presionado el botón TWS para salir del modo Estéreo Verdadero Inalámbrico (TWS).

Commandes du panneau arrière du TMS-1253

- 1. Alimentation** : interrupteur d'alimentation marche/arrêt
- 2. Volume** : Bouton de contrôle du volume principal
- 3. Echo** : Bouton de commande d'écho du micro
- 4. Volume du microphone** : Contrôle du volume du microphone
- 5. Basse** : Bouton de contrôle des basses
- 6. Aigus** : Bouton de contrôle des aigus
- 7. Mode** :
 - Appuyez pour basculer entre les modes AUX, USB, TF, Radio FM et Bluetooth.
 - Appuyez et maintenez enfoncé pour allumer ou éteindre les lumières de fête LED.
- Appuyez pour sélectionner la piste ou la station précédente
- Appuyez pour sélectionner Lire ou Pause la musique. Bouton TWS lors de la connexion de deux enceintes via True Wireless Stereo
- Appuyez pour sélectionner la piste ou la station suivante. Maintenez enfoncé pour sélectionner ou pour quitter la fonction Priorité micro.
- 8. TF** : lire des fichiers musicaux au format MP3 stockés sur des cartes TF
- 9. USB** : lire des fichiers musicaux au format MP3 stockés sur des clés USB
- 10. AUX** : prise d'entrée auxiliaire de 3,5 mm pour connecter des appareils audio externes
- 11. MIC IN** : prise d'entrée micro 6,3 mm pour connecter un microphone filaire
- 12. CHARGE** : indicateur LED de charge de la batterie
- 13. CC** : prise d'entrée d'alimentation 13,5 V CC

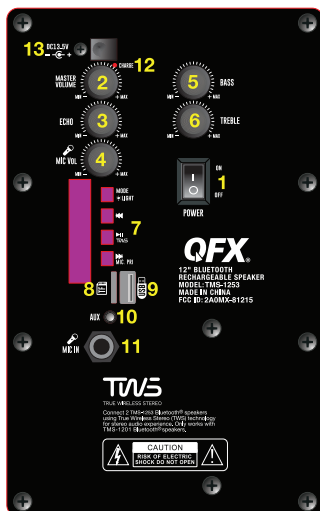

ÉCRAN

L'écran LED affichera les informations suivantes :

- Mode d'entrée (affiche USB, TF, Bluetooth, AUX ou FM)
- Lorsque la clé USB ou la carte TF est insérée, elle passe en mode USB/TF et commence à lire vos fichiers musicaux au format MP3. Le numéro de la piste en cours de lecture depuis l'USB/TF sera affiché.
- En mode radio FM, les chaînes des stations de radio FM seront affichées. Appuyez sur le bouton Lecture/Pause en mode FM pour rechercher et enregistrer automatiquement les stations de radio reçues dans votre région.

TÉLÉCOMMANDE

- 1. VEILLE** : Mettez l'appareil en mode veille.
- 2. BOUTON DE MODE D'ENTRÉE** : Basculez entre USB, TF, FM, AUX ET BT.
- 3. MUET** : Coupez le volume de la piste.
- 4. LECTURE/PAUSE** : Lire ou mettre en pause la musique.
- 5. PISTE PRÉCÉDENTE** : Sélectionnez la chaîne précédente.
- 6. PISTE SUIVANTE** : Sélectionnez la chaîne suivante.
- 7. ÉQ** : Sélectionnez le mode ÉQ.
- 8. VOL-** : Réduisez le volume principal.
- 9. VOL+** : Augmentez le volume principal.
- 10. REP** : Répétez la piste de lecture.
- Appuyez pour rechercher les chaînes en mode FM
- 12-21**. Numéro de clé pour sélectionner la certaine piste pour la clé USB ou TF



BLUETOOTH

Activez Bluetooth sur votre appareil mobile. Sur l'appareil, recherchez « QFX TMS-1253 » pour vous connecter. Une fois le couplage réussi, vous pouvez diffuser de la musique sans fil depuis notre appareil Bluetooth.

TRUE WIRELESS STEREO (TWS)

Deux haut-parleurs TMS-1253 QFX peuvent être couplés via Bluetooth pour offrir un son True Wireless Stereo (TWS).

Faire cela :

- Allumez les deux haut-parleurs
- Sélectionnez le mode Bluetooth sur les deux enceintes
- Appuyez sur le bouton Lecture/Pause d'une enceinte seulement pendant 3 secondes. Ensuite, les enceintes se connecteront ensemble.
- Ensuite, pour vous connecter à votre appareil Bluetooth, recherchez le numéro de modèle (QFX TMS-1253).
- Une fois le couplage réussi, vous pouvez diffuser de la musique sans fil depuis votre appareil Bluetooth vers les deux haut-parleurs en True Wireless Stereo (TWS).
- Appuyez et maintenez TWS pour quitter le mode True Wireless Stereo.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2024 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your TMS-1253 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

