

 
 
 
KAR-929

# QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

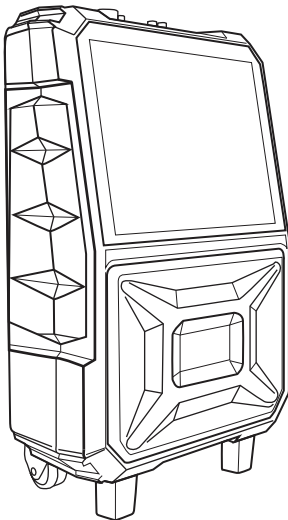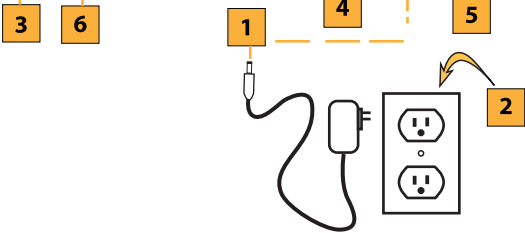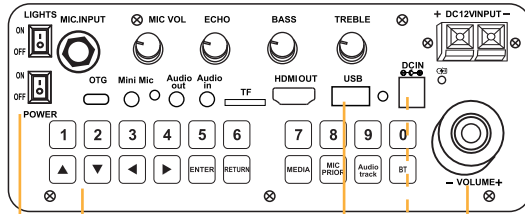

## KAR-929 BLUETOOTH

**Bluetooth Mode:** Use the MODE button to enable Bluetooth on the KAR-929. Open the Bluetooth settings on your mobile device and search for QFX KAR-929. Select the option to pair both devices together. You can now sit back and enjoy the music from your favorite app. You won't need reconnect the Bluetooth again when switching through modes.

## KAR-929 Wi-Fi Setup:

**SETUP:** Press the SETUP key on the remote control directly to enter Settings, or press the direction keys to light the Settings icon. Press OK key to enter the selected page. After entering the Settings, press the Direction key to choose WIFI and to choose your network. Press the OK key and enter the Password to connect to the network.

## 6 - STEP SETUP GUIDE

**Step 1** Find the AC power cord to the KAR-929 located in the packaging and plug it in to DC IN.

**Step 2** Find a power outlet (AC 120V/60Hz) and connect the AC adapter to the socket to supply the unit with power.

**Step 3** Move to the top of part of the panel and press and hold the POWER INPUT button. The unit should turn on and begin charging.

**Step 4** Insert a USB flash drive in the USB port located next to the volume knob. The KAR-929 will automatically begin playing the .mp3 content.

**Step 5** Use the Volume knob to adjust the the overall volume to your taste. Use the Mic Volume knob to raise the mic.

**Step 6** Press the Forward and Rewind keys to move to the next track or previous track. If in FM mode, these keys will change radio sation.

**IMPORTANT SAFETY MEASURES**

Before using this machine, please read all the safety and operating instructions. These safety and operating instructions should be kept in condition of consultation.



1. **Electric Power Supply Line:** Keep the power cord safe from being trampled on, pressed on by heavy objects, or pierced. Make sure that the cord has ample space to rest on the ground and is not stressed. DO NOT pull or drag or the power supply line.
2. **Ventilation:** This unit must be set in a ventilated space. DO NOT cover the vents on the back panel for any reason. If placed alongside a wall, distance the unit a minimum of 10cm to allow air flow. DO NOT surface that might restricted good air flow.
3. **Dismantling:** DO NOT dismantle or open the unit. This is a high-powered unit that can cause serious harm if tampered with. DO NOT Open.
4. **Smoke:** Please unplug the power supplies cord from the wall outlet immediately if unusual smoke appears and contact customer support

Questions? Comments? Contact Us Anytime

Preguntas? Comentarios? Contáctenos en cualquier momento

Des questions? Commentaires? Contactez-nous à tout moment



1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)

 
 
**WARNING!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth.

Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

1. MIC/MODE : Microphone mode Switch.
2. VOD: Enter On-Demand programs.
3. APPLY: Enter Application tore.
4. MUTE: Press the MUTE to be quiet.
5. SETUP: Enter the setup menu.
6. VOL+: Increase the Volume.
7. VOL - : Decrease the Volume.
8. TF/USB: Select TF/USB Function
9. DIRECTION KEY: Up, Down, Left, Right.
10. EXIT: Go back to the previous page.
11. OK: Confirmation key.
12. 0-9: Number keys.
13. TRACK: Track Selector.
14. MIC/PRIOR: Microphone priority Switch.
15. HOME: Return to the Homepage.
16. REPEAT: Alter the playing in single cycle or in all cycle.
17. Next: Enter next track.
18. PREV: Enter the last track.
19. LIVE: Live video streaming. Enter live programs.

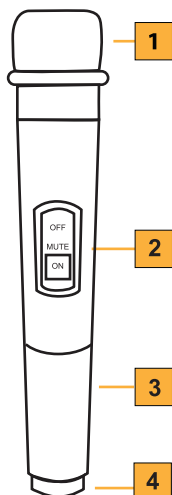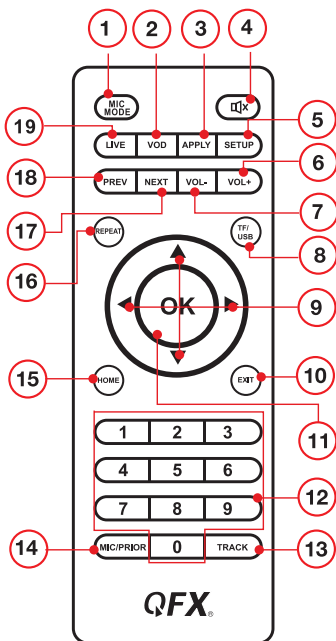

1. Diaphragm: Speak Into the Diaphragm to transmit your voice to the KAR-929

2. ON/MUTE/OFF Switch: Activate the microphone, mute, or turn OFF the mic using the switch.

3. Battery Compartment: Twist to open and install 2 x AA batteries (batteries not included)

4. Transmitter: Keep the transmitter pointed at the KAR-929 and cleared from obstacles for the best reception.

 


1. For battery installation, twist the battery compartment to the Left to open.

2. Install 2xAA batteries and make sure the +/- are installed correctly. Follow the printed symbols on the mic.



3. Después de la instalación de la batería, cierre el compartimento girando hacia la derecha.

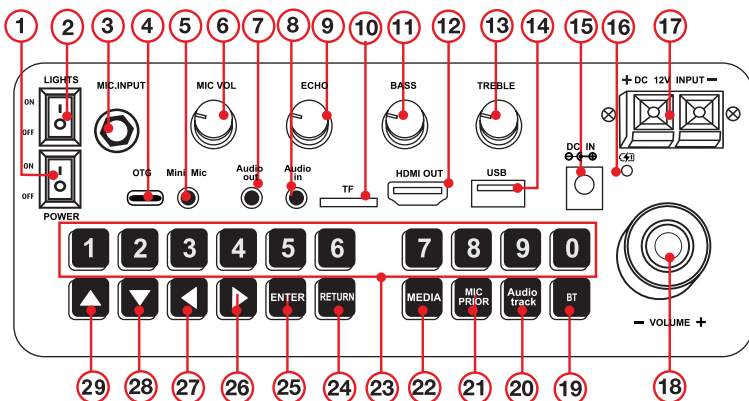


1. POWER ON/OFF: Power On or Off.
2. LIGHTS ON/OFF: Turn lights On or Off.
3. MIC INPUT: Microphone input jack. Insert a 6.35mm TRS.
4. OGT: For factory computer upgrades.
5. Mini mic: Mini microphone input connection 3.5mm.
6. MIC VOL: Use this key to adjust the microphone sound volume, turn left to lower the volume, turn right to raise the volume.
7. Audio out : Audio output.
8. Audio in : Audio input.
9. ECHO: Use this key to adjust the microphone Echo. Turn left to lower the volume, turn right to raise the volume. Adjust the echo according to the surroundings.
10. TF: TF Card input.
11. BASS: Use this key to adjust the bass volume. Turn left to lower the volume, turn right to raise the volume.
12. HDMI out: HDMI output.
13. TREBLE: Use this key to adjust the treble volume. Turn left to lower the volume, turn right to raise the volume.
14. USB: USB input.
15. POWER SUPPLY: DC 9V input.
16. CHG: Charge indicator.
17. DC 12V INPUT: External connection battery input for external 12 V current source
18. VOL: Use this key to adjust the main volume. Turn left to lower the volume, right to raise the volume.
19. BT: Press to automatically enter the Bluetooth® function.
20. Audio track: Choose the left channel or the right channel or both.
21. MIC/PRIOR: Microphone priority switch.
22. MEDIA: Press MULTIMEDIA to play the tracks in the USB.
23. 0-9 Number keys : When playing songs or videos using USB or TF card, you can use the number keys to select the song or video you want to play.
24. RETURN: Go back to the previous scene when the music movie is playing.
25. ENTER: Select OK or Enter Key.
26. ► : Right direction key/Fast Forward Key.
27. ◀ : Left direction key/Fast Rewind Key.
28. ▲ : Next song or step.
29. ▼ : Previous song or step.


1: On the Homepage, please use Direction Keys on the remote control to choose the Function icon and press OK Key to enter.

Note:

 
The user can touch the relative function icon on the screen directly, and operate according to the instructions. Bluetooth, USB Flash Drive, and TF Card do not need to be connected to the internet in order to work. The KAR-929 requires a Wi-Fi/Internet connection to operate online content like YouTube, Google Play, etc.

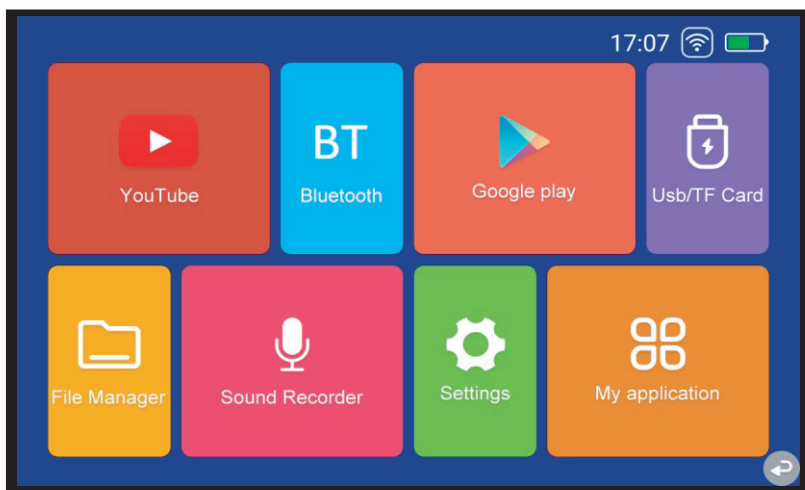

 
2: Settings/SETUP: Press the SETUP key on the remote control directly to enter Settings, or press the direction keys to light the Settings icon. Press OK key to enter the selected page.

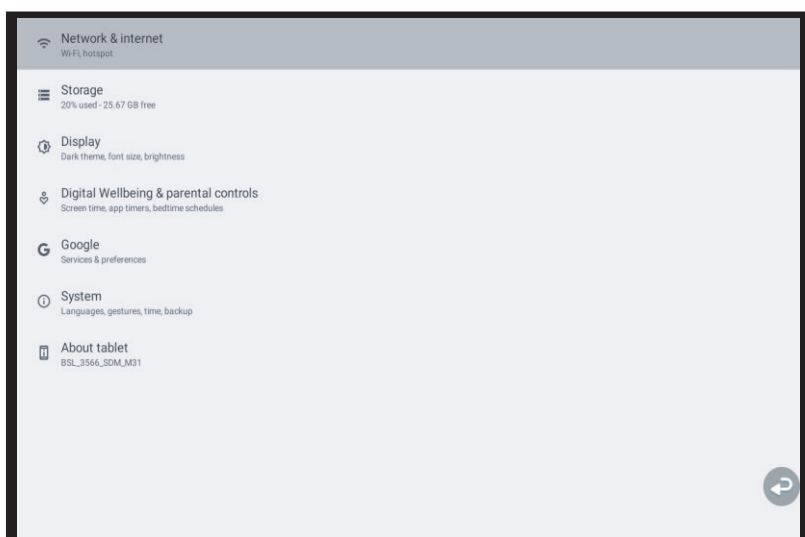

 
After entering the Settings, press the Direction key to choose WIFI and to choose your network. Press the OK key and enter the Password to connect to the network.

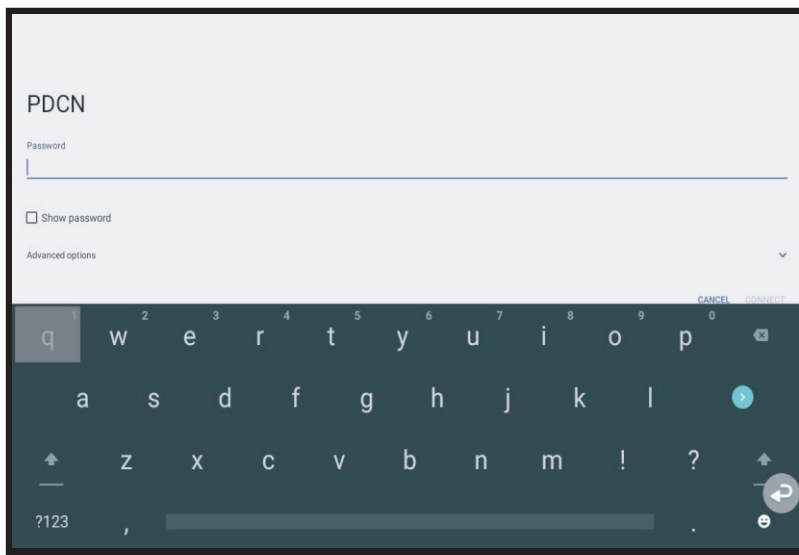

 
3. Press the direction key to Choose the Bluetooth icon. Press OK key to enter. Open the BT function in your mobile device and choose the relative BT name to connect. Press PREV/NEXT to choose songs. Press PLAY/PAUSE key to play or pause the song.

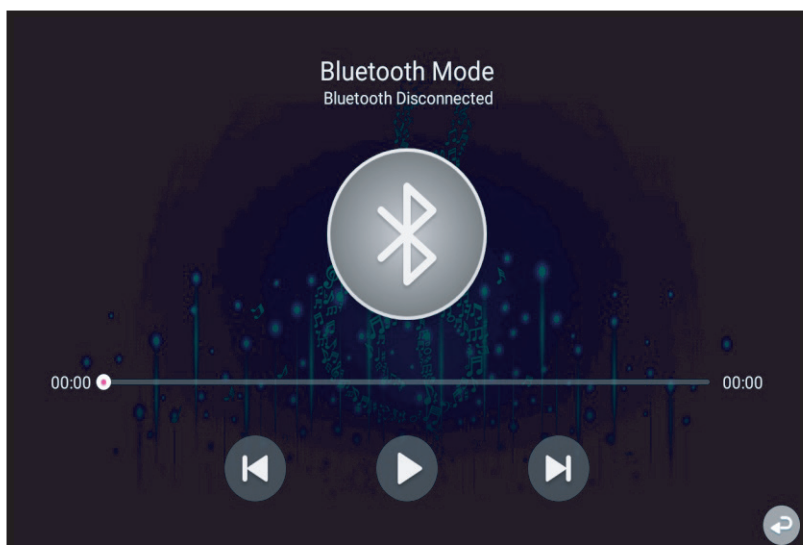

 
4. Plug in the USB Flash Drive or TF Card and It will play automatically. Press the EXIT key to choose your desired track and press OK key to play. Press EXIT again to show the following main page to alter Video & Music.

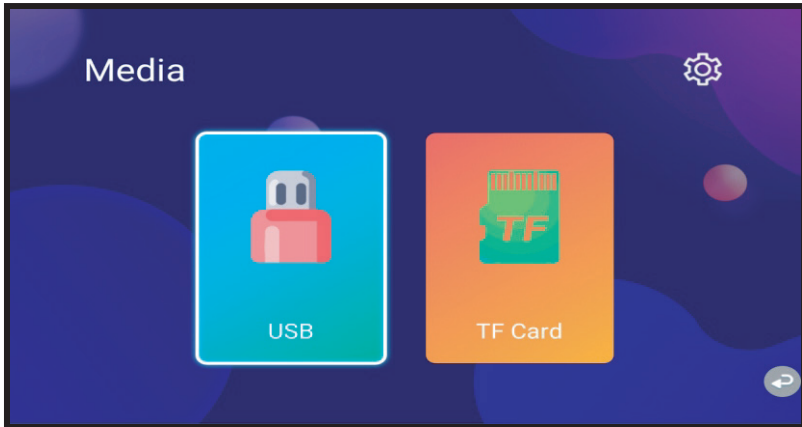

 5. Press direction keys to choose “My App” icon on the main page. Press confirm to Enter. It will show the installed APP. Follow the picture for reference.

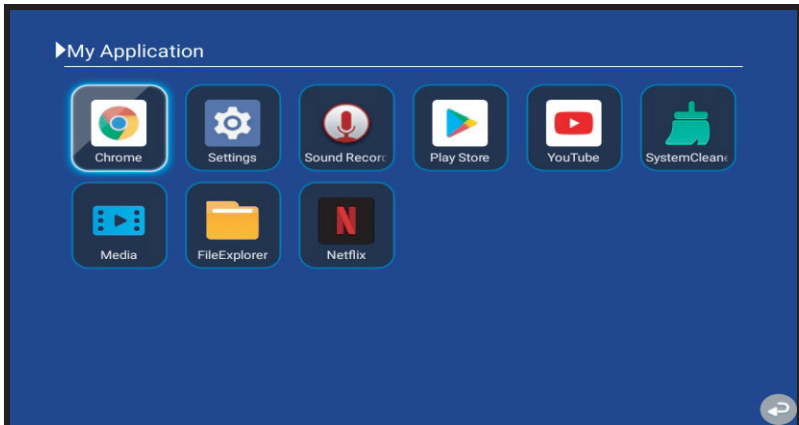

6. Explore: Plugging in the USB & TF card, use direction key to select the Explore icon to play the contents in the USB/TF card.
7. Record:
- Use direction key to choose the Record icon, and press the OK key of the remote control to start recording. Press OK again to stop. Press the Direction Key to select Finish. Last, press OK key to preserve your recorded file.
  - Select the recorded file, and press the MENU key to select Delete. Press OK key to delete your recorded file.
8. YouTube is a video website. You could only browse and watch after getting connected to the internet.
9. Google Play is an application store, just like App Store, by which you could install applications via the internet.

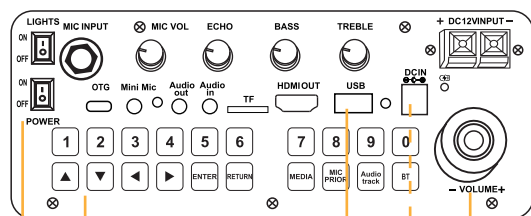 

## 6 - GUÍA DE CONFIGURACIÓN DE PASOS

Paso **1** Busque el cable de alimentación de CA a la centralita KAR-929 que se encuentra en el paquete.

 
Paso **2** Busque una toma de corriente (CA 120V / 60Hz) y conecte el adaptador de CA al enchufe para suministrar energía a la unidad.

Paso **3** Muévase a la parte superior del panel y presione y mantenga presionado el botón POWER INPUT. La unidad debe encenderse y comenzar a cargarse.

Paso **4** Inserte una unidad flash USB en el puerto USB ubicado junto a la perilla de volumen. El KAR-929 comenzará a reproducir automáticamente el contenido .mp3.

Paso **5** Utilice la perilla de volumen para ajustar el volumen general a su gusto. Use la perilla de volumen del micrófono para subir el micrófono.

Paso **6** Pulse las teclas Adelante y Rebobinar para pasar a la siguiente pista o pista anterior. Si está en modo FM, estas teclas cambiarán la estación de radio.

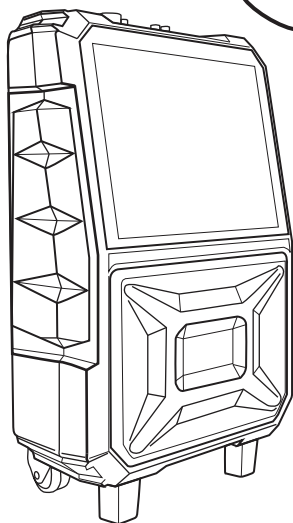

### KAR-929 BLUETOOTH

Modo Bluetooth: use el botón MODE para habilitar Bluetooth en el KAR-929. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX KAR-929. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

### Configuración de Wi-Fi KAR-929:

CONFIGURACIÓN: Presione la tecla CONFIGURACIÓN en el control remoto directamente para ingresar a Configuración, o presione las teclas de dirección para iluminar el ícono Configuración. Presione la tecla OK para ingresar a la página seleccionada. Después de ingresar a la Configuración, presione la tecla de dirección para elegir WIFI y para elegir su red. Presione la tecla OK e ingrese la contraseña para conectarse a la red.

## MEDIDAS DE SEGURIDAD IMPORTANTES

Antes de utilizar esta máquina, lea todas las instrucciones de seguridad y funcionamiento. Esta seguridad y las instrucciones de funcionamiento deben mantenerse en condiciones de consulta.



1. **Línea de suministro de energía eléctrica:** Mantenga el cable de alimentación a salvo de ser pisoteado, presionado por objetos pesados o perforado. Asegúrese de que el cable tenga suficiente espacio para descansar en el suelo y no está estresado. NO tire ni arrastre de la línea de alimentación.
2. **Ventilación:** esta unidad debe instalarse en un espacio ventilado. NO cubra las rejillas de ventilación del panel posterior por alguna razón. Si se coloca junto a una pared, separe la unidad un mínimo de 10 cm para permitir que el aire fluya. NO coloque superficies que puedan restringir el buen flujo de aire.
3. **Desmontaje:** NO desmonte ni abra la unidad. Esta es una unidad de alta potencia que puede causar daño grave si se manipula. No abrir.
4. **Humo:** desenchufe el cable de alimentación del toma de corriente inmediatamente si aparece humo inusual y póngase en contacto con el servicio de atención al cliente.

## ⚡ ¡ADVERTENCIA! ⚡

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni utilice este producto cerca de líquidos, fuentes de calor como radiadores, rejillas de calefacción o bajo condiciones climáticas extremas. Limpie solamente con un paño seco.

Los usuarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones indicadas.

Questions? Comments? Contact Us Anytime

Preguntas? Comentarios? Contáctenos en cualquier momento  
Des questions? Commentaires? Contactez-nous à tout moment

 
 


1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)

1. MIC / modo: interruptor de modo micrófono.
2. VOD: ingrese a los programas bajo demanda.
3. APLICAR: Ingrese Solicitud abierta.
4. MUTE: Presione MUTE para silenciar.
5. CONFIGURACIÓN: Ingrese al menú de configuración.
6. VOL +: aumenta el volumen.
7. VOL -: Disminuye el volumen.
8. TF / USB: seleccione la función TF / USB
9. TECLA DE DIRECCIÓN: Arriba, Abajo, Izquierda, Derecha.
10. EXIT: Vuelve a la página anterior.
11. OK: clave de confirmación.
12. 0-9: Teclas numéricas.
13. TRACK: Selector de pistas.
14. MIC / PRIOR: Interruptor de prioridad de micrófono.
15. INICIO: Regrese a la página de inicio.
16. REPEAT: Modifica la reproducción en ciclo único o en todos los ciclos.
17. Siguiente: Ingrese la pista siguiente.
18. PREV: Ingrese la última pista.
19. EN VIVO: Transmisión de video en vivo. Ingrese a programas en vivo.

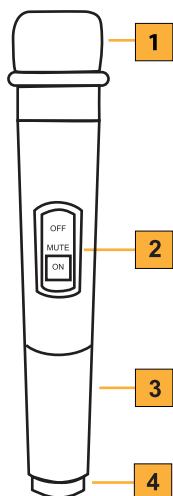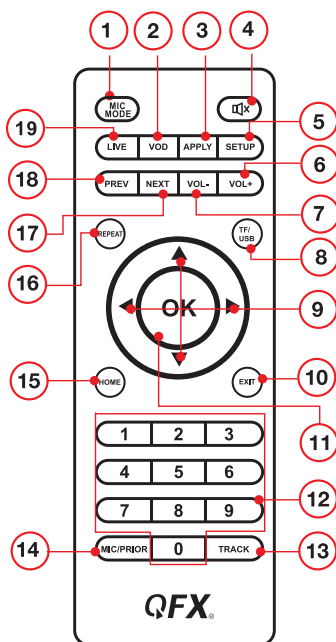

1. Diaphragme: Parlez dans le diaphragme pour transmettre votre voix au KAR-929
2. Interruptor ON / MUTE / OFF: active el micrófono, silencie o apague el micrófono usando el interruptor.
3. Compartimento de la batería: gire para abrir e instalar 2 pilas AA (pilas no incluidas)
4. Transmisor: Mantenga el transmisor apuntando al KAR-929 y despejado de obstáculos para una mejor recepción.

 


1. Para instalar la batería, gire el compartimiento de la batería hacia la izquierda para abrirlo.

2. Instale baterías 2xAA. Asegúrese de que +/- estén instalados correctamente siguiendo las instrucciones indicadas.

3. Après l'installation de la batterie, fermez le compartiment en tournant vers la droite.



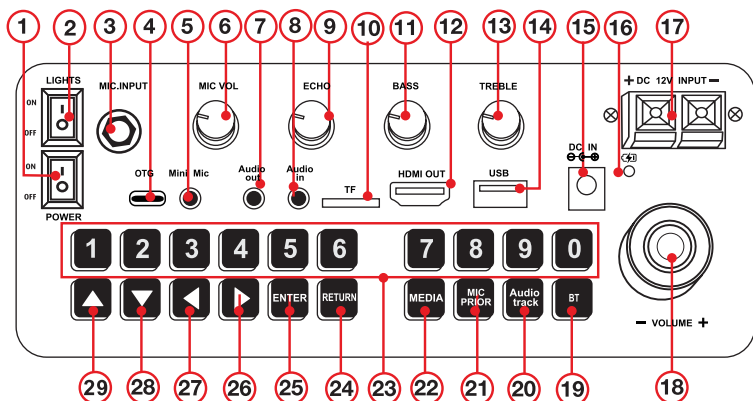

1. Encendido / apagado: encendido o apagado.
2. LUCES ENCENDIDAS / APAGADAS: Enciende o apaga las luces.
3. MIC INPUT: Conexión para mini micrófono 6,35 mm.
4. OTG: para actualizaciones informáticas de fábrica.
5. Mini micrófono: la entrada del mini micrófono está conectada a 3,5 mm.
6. MIC VOL: Use esta tecla para ajustar el volumen del sonido del micrófono, gire a la izquierda para bajar el volumen, gire a la derecha para subir el volumen.
7. Audio out : salida de audio 3,5 mm.
8. Audio in : Entraday de audio 3,5 mm.
9. ECHO: Utilice esta tecla para ajustar el eco del micrófono. Gire a la izquierda para bajar el volumen, gire a la derecha para subir el volumen. Ajuste el eco de acuerdo con el entorno.
10. TF: entrada de tarjeta TF.
11. BASS: use esta tecla para ajustar el volumen de los graves. Gire a la izquierda para bajar el volumen, gire a la derecha para subir el volumen.
12. HDMI OUT: Conexión digital que permite transmitir audio y video en alta definición.
13. TREBLE: Utilice esta tecla para ajustar el volumen de los agudos. Gire a la izquierda para bajar el volumen, gire a la derecha para subir el volumen.
14. USB: entrada USB.
15. POWER SUPPLY: Entrada DC 9V.
16. CHG: indicador de carga.
17. ALIMENTACION: Entrada DC 12V.
18. VOL: Use esta tecla para ajustar el volumen principal. Gire a la izquierda para bajar el volumen, derecha para subir el volumen.
19. BT: Presionar para ingresar.
20. Audio track: Elija el canal izquierdo o el canal derecho o ambos.
21. MIC/PRIOR: Interruptor de prioridad de micrófono.
22. MEDIA: Presione MULTIMEDIA para reproducir las pistas en el USB.
23. 0-9: Teclas numéricas.
24. RETURN: Vuelve a la escena anterior cuando se reproduce la película musical.
25. ENTER: seleccione Aceptar o Intro.
26. ► Tecla de dirección derecha / Tecla de avance rápido.
27. ◀ Tecla de dirección izquierda / Tecla de rebobinado rápido.
28. ▲ Canción o paso anterior.
29. ▼ Siguiente canción o paso.


**Main board: Rk3566+ Memory 2G+FLASH 32G**

 1: en la página de inicio, utilice las teclas de dirección del mando a distancia para elegir


el icono de función y presione la tecla OK para ingresar.

**Nota:**


El usuario puede tocar el icono de función relativa en la pantalla directamente y operar de acuerdo con las instrucciones. Bluetooth, unidad flash USB y tarjeta TF no necesitan estar conectados a Internet para funcionar. El KAR-929 requiere una conexión Wi-Fi / Internet para operar contenido en línea como YouTube, Google Play, etc.

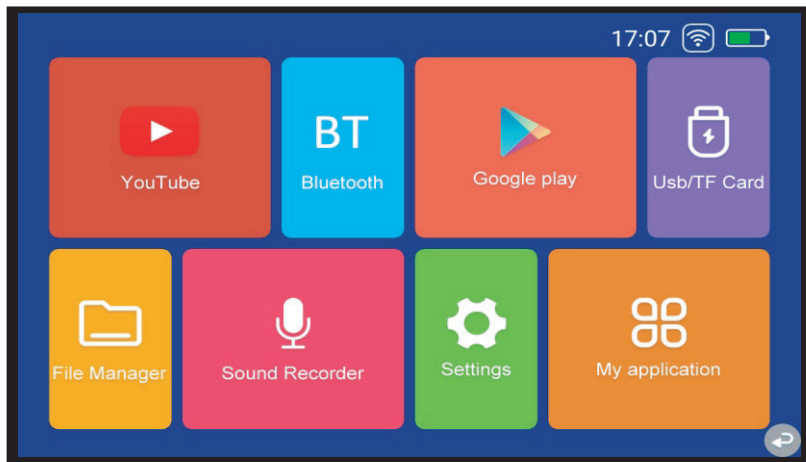

 
2: Configuración / CONFIGURACIÓN: Presione la tecla CONFIGURAR en el control remoto directamente para ingresar Configuración, o presione las teclas de dirección para iluminar el icono Configuración. Presione la tecla OK para ingresar

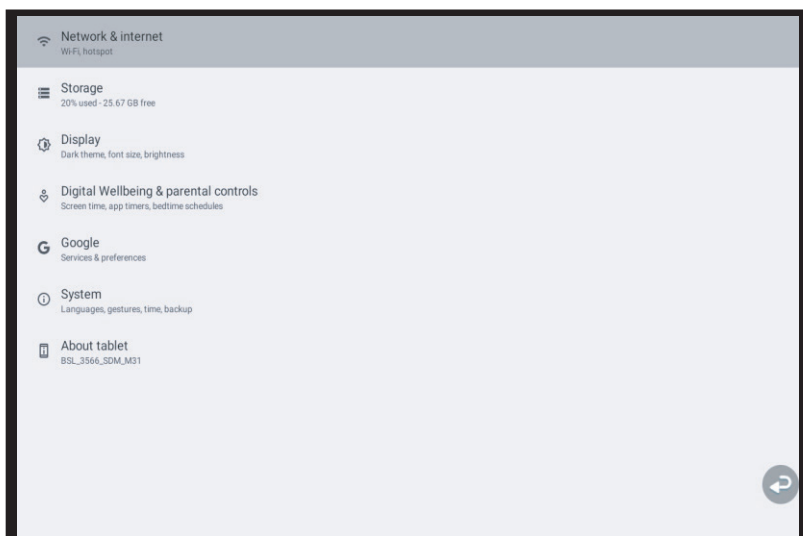

 
Después de ingresar a la Configuración, presione la tecla de dirección para elegir WIFI y para elegir su red. Presione la tecla OK e ingrese la contraseña para conectarse a la red.

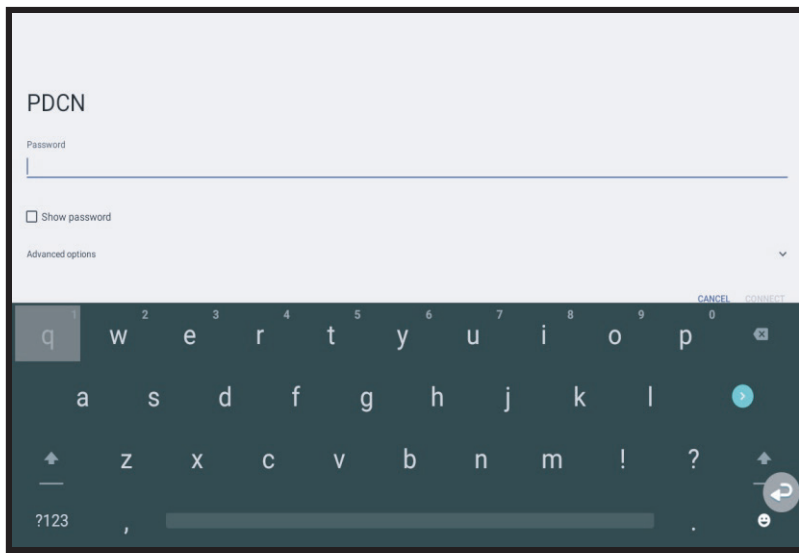

 
3. Presione la tecla de dirección para elegir el icono de Bluetooth. Presione la tecla OK para ingresar. Abierto la función BT en su dispositivo móvil y elija el nombre BT relativo para conectarse. Presione PREV / NEXT para elegir canciones. Presione la tecla REPRODUCIR / PAUSA para reproducir o pausar la canción.

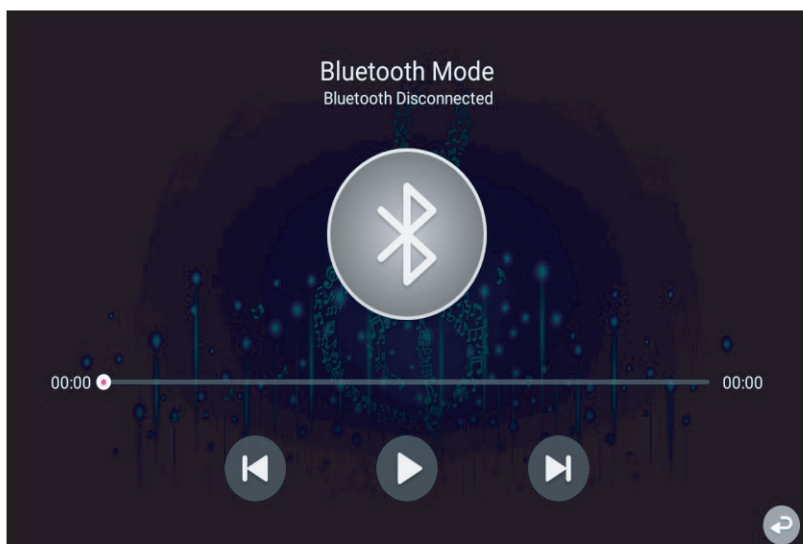

 4. Conecte la unidad flash USB o la tarjeta TF y se reproducirá automáticamente. Presione EXIT para elegir la pista deseada y presione la tecla OK para reproducir. Presione EXIT nuevamente para mostrar la siguiente página principal para modificar Video y Música.

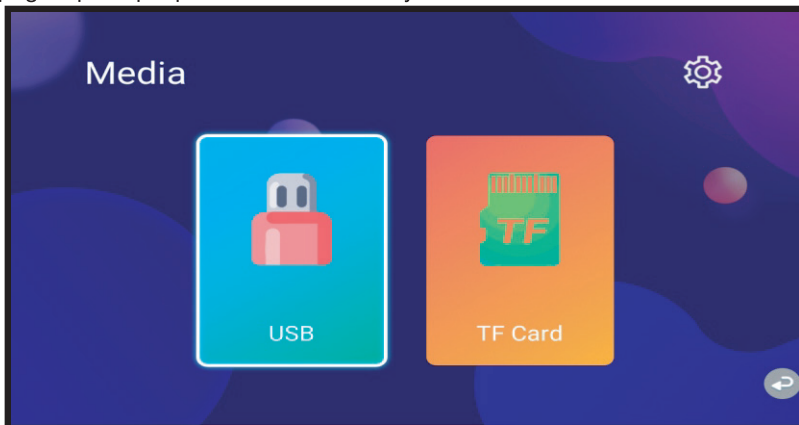

 5. Presione las teclas de dirección para elegir el icono "Mi aplicación" en la página principal. Presione confirmar para Entrar. Mostrará la aplicación instalada. Siga la imagen como referencia.

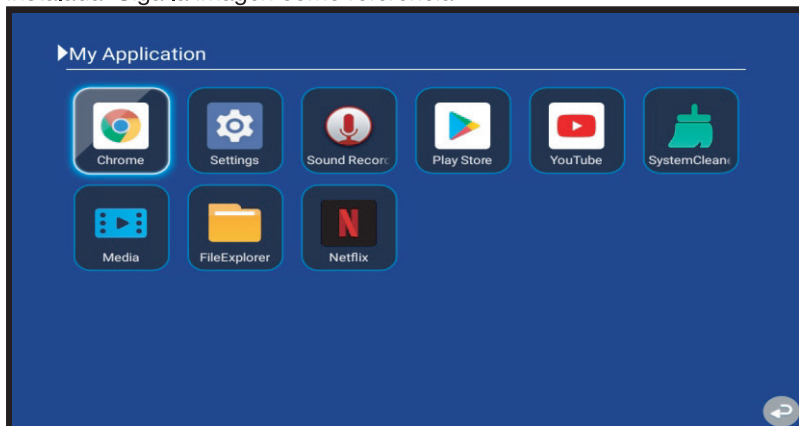

6. Explorar: conectando la tarjeta USB y TF, use la tecla de dirección para seleccionar el icono Explorar para reproducir el contenido de la tarjeta USB / TF.

 
 
 
7. Grabar:

- Utilice la tecla de dirección para elegir el icono Grabar y presione la tecla OK del control remoto. Control para comenzar a grabar. Presione OK nuevamente para detener. Presione la tecla de dirección para seleccionar Terminar. Por último, presione la tecla OK para conservar su archivo grabado.

- Seleccione el archivo grabado y presione la tecla MENÚ para seleccionar Eliminar. Presione la tecla OK para borrar su archivo grabado.

8. YouTube is a video website. You could only browse and watch after getting connected to the internet.

9. Google Play es una tienda de aplicaciones, al igual que App Store, mediante la cual puede instalar aplicaciones a través de Internet.

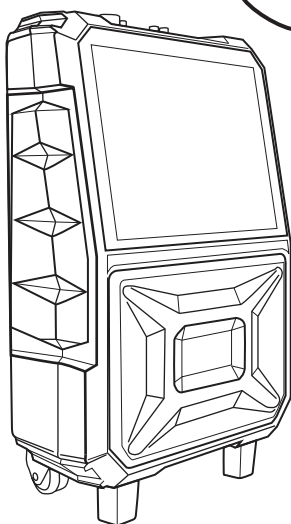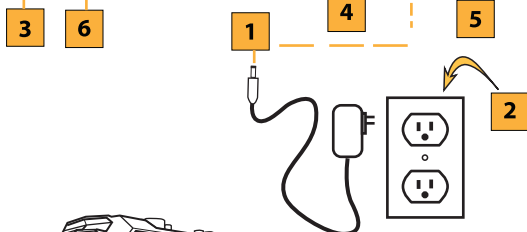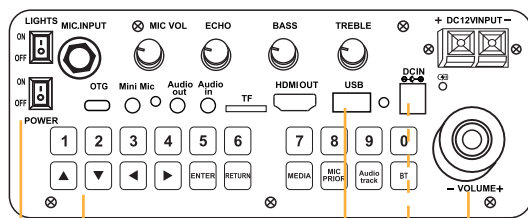

## t6 - GUIDE DE CONFIGURATION DES ÉTAPES

Étape **1** Trouvez le cordon d'alimentation secteur du KAR-929 situé dans l'emballage.

Étape **2** Trouvez une prise de courant (120 V CA / 60 Hz) et connectez l'adaptateur secteur à la prise pour alimenter l'unité.

Étape **3** Déplacez-vous vers le haut d'une partie du panneau et maintenez le bouton POWER INPUT enfoncé. L'unité doit s'allumer et commencer à se charger.

Étape **4** Insérez une clé USB dans le port USB situé à côté du bouton de volume. Le KAR-929 commencera automatiquement la lecture du contenu .mp3.

Étape **5** Utilisez le bouton de volume pour régler le volume global à votre goût. Utilisez le bouton Mic Volume pour monter le micro.

Étape **6** Appuyez sur les touches Avance et Retour pour passer à la piste suivante ou à la piste précédente. En mode FM, ces touches changeront la fonction radio.

### KAR-929 BLUETOOTH

Mode Bluetooth: utilisez le bouton MODE pour activer Bluetooth sur le KAR-929. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX KAR-929. Sélectionnez l'option pour coupler les deux appareils ensemble. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez plus besoin de reconnecter le Bluetooth lors du passage d'un mode à l'autre.

### Configuration Wi-Fi du KAR-929:

CONFIGURATION: Appuyez directement sur la touche CONFIGURATION de la télécommande pour accéder aux paramètres ou appuyez sur les touches de direction pour allumer l'icône Paramètres. Appuyez sur la touche OK pour accéder à la page sélectionnée. Après avoir entré les paramètres, appuyez sur la touche de direction pour choisir WIFI et pour choisir votre réseau. Appuyez sur la touche OK et entrez le mot de passe pour vous connecter au réseau.

## MESURES DE SÉCURITÉ IMPORTANTES

Avant d'utiliser cette machine, veuillez lire toutes les instructions de sécurité et d'utilisation. Ces sécurité et les instructions d'utilisation doivent être conservées en état de consultation.



1. **Ligne d'alimentation électrique:** évitez que le cordon d'alimentation ne soit piétiné, pressé par des objets lourds ou percé. Assurez-vous que le cordon a suffisamment d'espace pour reposer sur le sol et n'est pas stressé. NE PAS tirer ni faire glisser ni la ligne d'alimentation.
2. **Ventilation:** Cet appareil doit être installé dans un espace ventilé. NE PAS couvrir les événements du panneau arrière pour quelque raison que ce soit. S'il est placé le long d'un mur, éloignez l'unité d'au moins 10 cm pour permettre la circulation de l'air. NE PAS faire de surface qui pourrait restreindre une bonne circulation d'air.
3. **Démontage:** NE PAS démonter ni ouvrir l'unité. Il s'agit d'une unité de haute puissance qui peut causer de graves dommages si elle est altérée. Ne pas ouvrir.
4. **Fumée:** débranchez immédiatement le cordon d'alimentation de la prise murale si de la fumée inhabituelle apparaît et contactez le service client.



## ATTENTION



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLEUR. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUT RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter tout incendie ou choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas et n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que radiateurs, bouches de chaleur ou dans des conditions météorologiques extrêmes. Nettoyez uniquement avec un chiffon sec.

Les utilisateurs doivent faire preuve d'une sécurité supplémentaire lorsque le symbole AVER-TISSEMENT ou ATTENTION apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont énoncées.

Questions? Comments? Contact Us Anytime

Preguntas? Comentarios? Contáctenos en cualquier momento

Des questions? Commentaires? Contactez-nous à tout moment

 
 


1-800-864-CLUB (2582)  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)

1. Mic / mode: commutateur de mode microphone..
2. VOD: accédez aux programmes à la demande.
3. APPLIQUER: Entrez Application déchrivée.
4. MUTE: Appuyez sur MUTE pour être silencieux.
5. CONFIGURATION: Entrez dans le menu de configuration.
6. VOL +: Augmentez le volume.
7. VOL -: Diminue le volume.
8. TF / USB: Sélectionnez la fonction TF / USB
9. TOUCHE DE DIRECTION: Haut, Bas, Gauche, Droite.
10. QUITTER: Revenir à la page précédente.
11. OK: clé de confirmation.
12. 0-9: touches numériques.
13. TRACK: Sélecteur de piste.
14. MIC / PRIOR: Commutateur de priorité du microphone.
15. ACCUEIL: retournez à la page d'accueil.
16. REPEAT : modifier la lecture en un seul cycle ou en tous les cycles.
17. Suivant: entrez la piste suivante.
18. PREV: Entrez la dernière piste.
19. LIVE: diffusion vidéo en direct. Entrez dans les programmes en direct.

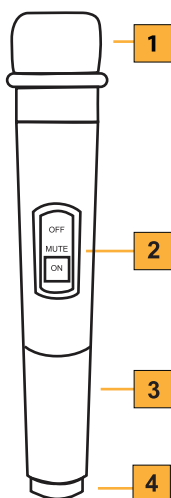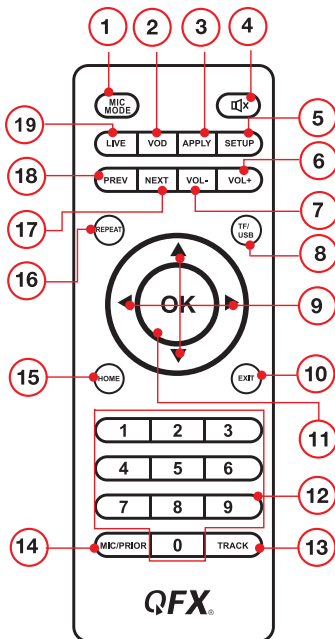

1. Diaphragme: Parlez dans le diaphragme pour transmettre le KAR-929

2. Commutateur ON / MUTE / OFF: permet d'activer le microphone, de couper le son ou d'éteindre le micro à l'aide du commutateur.

3. Compartiment à piles: tournez pour ouvrir et installer 2 piles AA (piles non incluses)

4. Émetteur: Gardez l'émetteur pointé vers le KAR-929 et dégagé des obstacles pour une meilleure réception.



 
1. Pour l'installation de la batterie, tournez le compartiment de la batterie vers la gauche pour l'ouvrir.



3. Après l'installation de la batterie, fermez le compartiment.

2. Installez 2 piles AA. Assurez-vous que les +/- sont correctement installés en suivant les instructions indiquées.



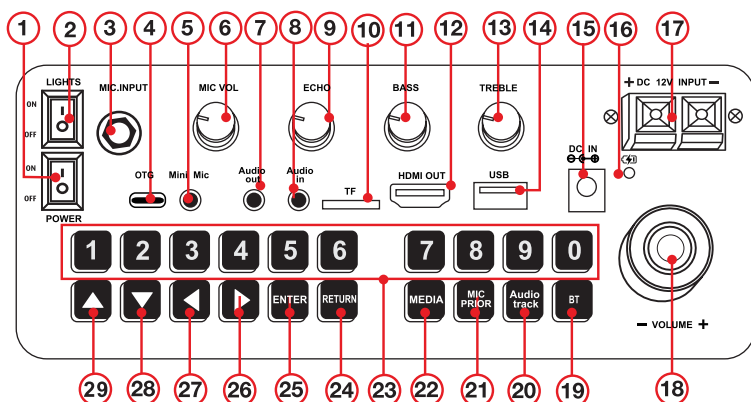


1. POWER ON / OFF: mise sous tension ou hors tension.
2. LIGHTS ON / OFF: allume ou éteint les lumières.
3. MIC INPUT: Prise d'entrée microphone. Insérez un TRS de 6,35 mm.
4. OGT: pour la mise à jour de l'ordinateur d'usine.
5. Mini microphone: l'entrée du mini microphone est connectée à 3,5 mm.
6. MIC VOL: Utilisez cette touche pour régler le volume sonore du microphone, tournez à gauche pour baisser le volume, tournez à droite pour augmenter le volume.
7. Audio out : Sortie audio 3,5 mm.
8. Audio in : Entrée audio 3,5 mm.
9. ECHO: utilisez cette touche pour régler l'écho du microphone. Tourner à gauche pour abaisser le volume, tournez à droite pour augmenter le volume. Ajustez l'écho en fonction de l'environnement.
10. TF: entrée de la carte TF.
11. BASS: Utilisez cette touche pour régler le volume des graves. Tournez à gauche pour baisser le volume, tourner à droite pour augmenter le volume.
12. HDMI Out: une connexion numérique permettant la transmission audio et vidéo améliore la clarté.
13. TREBLE: Utilisez cette touche pour régler le volume des aigus. Tourner à gauche pour abaisser le volume, tournez à droite pour augmenter le volume.
14. USB: entrée USB.
15. ALIMENTATION: entrée DC 9V.
16. CHG: indicador de carga.
17. Alimentation: entrée 12V DC.
18. VOL: Utilisez cette touche pour régler le volume principal. Tournez à gauche pour baisser le volume, droite pour augmenter le volume.
19. BT: Entrer en mode Bluetooth.
20. Audio track: Choisissez le canal gauche ou le canal droit ou les deux.
21. MIC/PRIOR: Commutateur de priorité du microphone.
22. MEDIA: Appuyez sur MULTIMEDIA pour lire les pistes de l'USB.
23. 0-9: touches numériques.
24. RETURN: permet de revenir à la scène précédente lors de la lecture du film musical.
25. ENTER: Sélectionnez OK ou Enter Key.
26. ► Touche de direction droite / touche d'avance rapide.
27. ◀ Touche de direction gauche / touche de retour rapide.
28. ▲ Chanson ou étape précédente.
29. ▼ Chanson ou étape suivante.

**Main board: Rk3566+ Memory 2G+FLASH 32G**

 
1: Sur la page d'accueil, veuillez utiliser les touches de direction de la télécommande pour choisir l'icône Fonction et appuyez sur la touche OK pour entrer.

Remarque:


L'utilisateur peut toucher directement l'icône de la fonction relative sur l'écran et opérer selon les instructions. Bluetooth, clé USB et carte TF n'ont pas besoin d'être connectés à Internet pour fonctionner. Ce produit doit être connecté à Internet pour fonctionner.

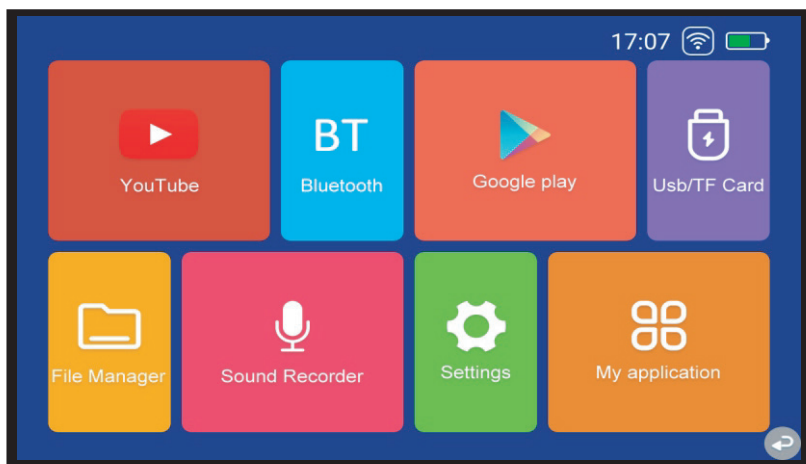

 
2: Paramètres / CONFIGURATION: Appuyez directement sur la touche SETUP de la télécommande pour entrer Paramètres ou appuyez sur les touches de direction pour allumer l'icône Paramètres. Appuyez sur la touche OK pour entrer la page suivante.

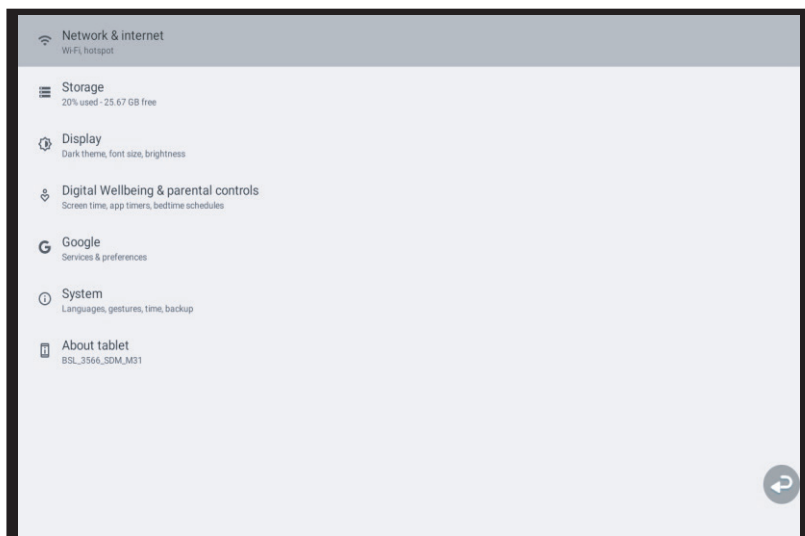

 
Après avoir entré les paramètres, appuyez sur la touche de direction pour choisir WIFI et pour choisir votre réseau. Appuyez sur la touche OK et entrez le mot de passe pour vous connecter au réseau.

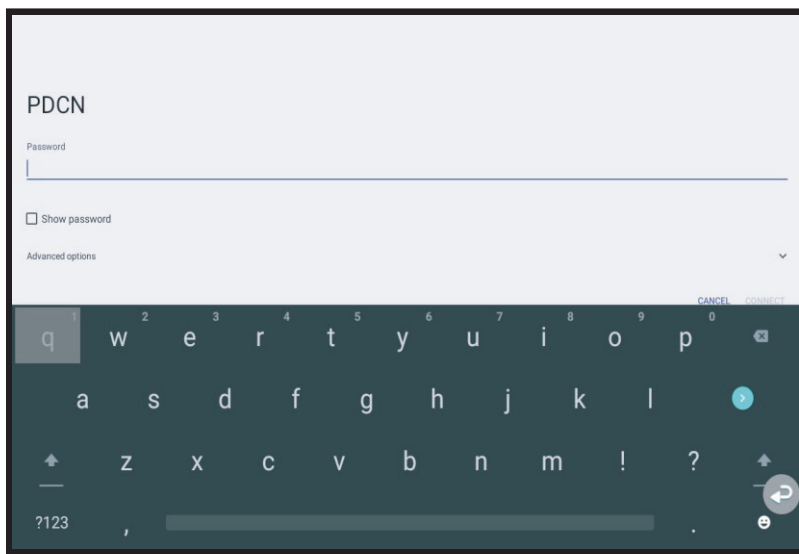

 
3. Appuyez sur la touche de direction pour choisir l'icône Bluetooth. Appuyez sur la touche OK pour entrer. Ouvert la fonction BT de votre appareil mobile et choisissez le nom BT relatif à connecter. Appuyez sur PREV / NEXT pour choisir les chansons. Appuyez sur la touche PLAY / PAUSE pour lire ou mettre en pause la chanson.

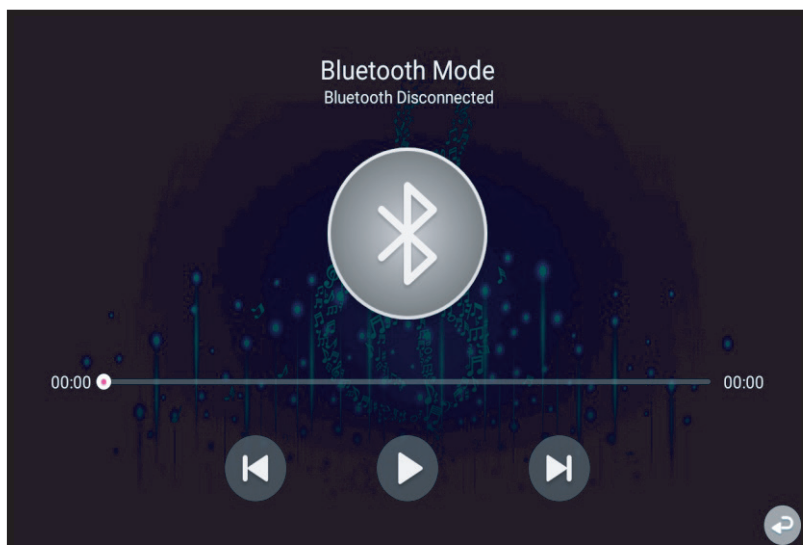

 4. Branchez le lecteur flash USB ou la carte TF et il jouera automatiquement. Appuyez sur EXIT pour choisir la piste souhaitée et appuyez sur la touche OK pour lire. Appuyez à nouveau sur EXIT pour afficher la page principale suivante pour modifier

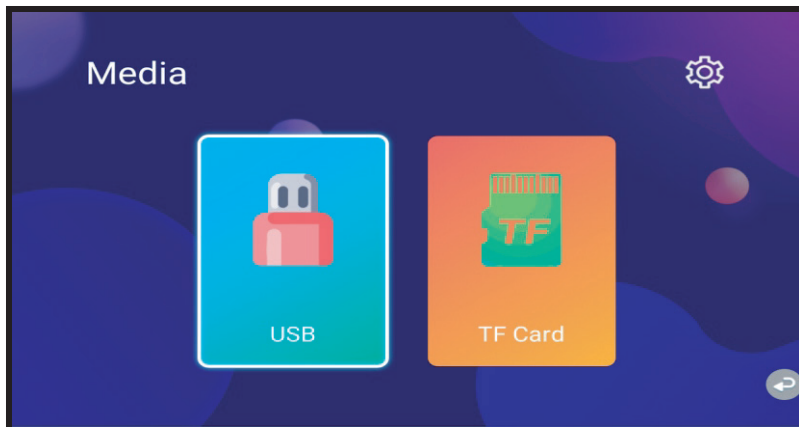

 5. Appuyez sur les touches de direction pour choisir l'icône «Mon application» sur la page principale. Appuyez sur confirmer pour Entrer. Il affichera l'application installée. Suivez l'image pour référence.

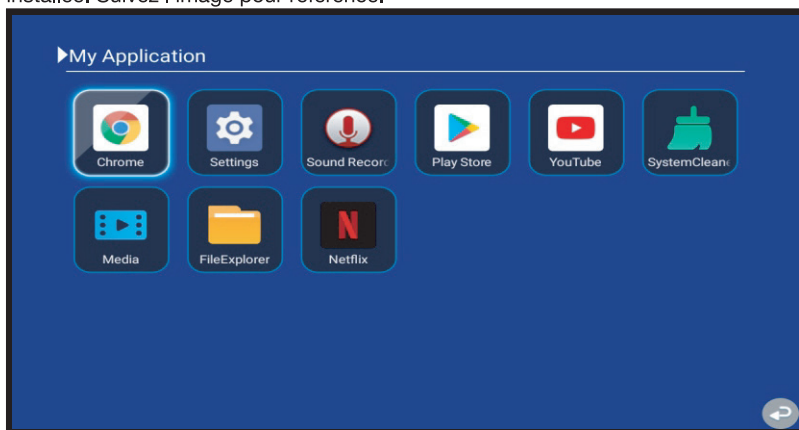

6. Explorer: Branchez la carte USB et TF, utilisez la touche de direction pour sélectionner l'icône Explorer pour lire le contenu de la carte USB / TF.

7. Enregistrer:

- Utilisez la touche de direction pour choisir l'icône Enregistrer et appuyez sur la touche OK de la télécommande contrôle pour démarrer l'enregistrement. Appuyez à nouveau sur OK pour arrêter. Appuyez sur la touche de direction pour sélectionner Terminer. Enfin, appuyez sur la touche OK pour conserver votre fichier enregistré.

- Sélectionnez le fichier enregistré et appuyez sur la touche MENU pour sélectionner Supprimer. Appuyez sur la touche OK pour supprimer votre fichier enregistré.

8. YouTube est un site Web vidéo. Vous ne pouvez parcourir et regarder qu'après avoir obtenu connecté à Internet.

9. Google Play est un magasin d'applications, tout comme l'App Store, par lequel vous pouvez installer applications via Internet.



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of **misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX**. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOSS OF PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA® , Inc.**  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com  
(800) 864-CLUB (2582) or (323) 864-6900  
qfxusa.com  
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.





## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.





This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA®, Inc.**  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

 [support@qfxusa.com](mailto:support@qfxusa.com)  
 (800) 864-CLUB (2582) or (323) 864-6900  
 [qfxusa.com](http://qfxusa.com)  
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2023 ©



[www.qfxusa.com](http://www.qfxusa.com)



**1-800-864-2582**  
**Mon-Fri 9AM - 5PM (PST)**



**[support@qfxusa.com](mailto:support@qfxusa.com)**  
**Mon-Fri 9AM - 5PM (PST)**



# THANK YOU.

Enjoy your speaker and make many memories with it because  
**QFX is Where the Party Begins!**

We would love to hear about your KAR-929 Journey!  
Tag us **@QFXUSA** to share your stories.