

PBX-21201

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



PBX-21201 OPERATION

WARNING! **¡Advertencia!**

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids or heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REMITIR TODO SERVICIO A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos o fuentes de calor, como radiadores, registros de calor. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece este símbolo en este manual de instrucciones y seguir todas las precauciones tal como se indican.

PBX-21201 BATTERY

The PBX-21201 is an acid battery powered PA loudspeaker.

Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan .Once the power cord is connected to a power source, it will automatically begin charging (6~8 hours to fully charge the acid battery). Even if the battery power is low, it will power on when connected to a power source. The full and low battery indicator(on the right side of the LED display) alternately flashing when charging. When the battery fully charge, the full battery indicator always on top. Upon completion of the charging, Please disconnect the power cable. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

PBX-21201 BATERIA

El PBX-21201 es un altavoz PA alimentado por batería ácida.

 
Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el cable de alimentación esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (de 6 a 8 horas para cargar completamente la batería ácida). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. El indicador de batería llena y baja (en el lado derecho de la pantalla LED) parpadea alternativamente durante la carga. Cuando la batería se carga por completo, el indicador de batería llena siempre está en la parte superior. Al finalizar la carga, desconecte el cable de alimentación. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días.

PBX-21201 BLUETOOTH

Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "QFX PBX-21201" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

PBX-21201 BLUETOOTH

Modo Bluetooth: abra el Bluetooth del teléfono. Busque el nombre de Bluetooth de la unidad llamada "QFX PBX-21201" para conectarse. Después de una coincidencia exitosa, puede reproducir la música desde el altavoz. No necesitarás volver a conectarte Bluetooth al cambiar de modo.

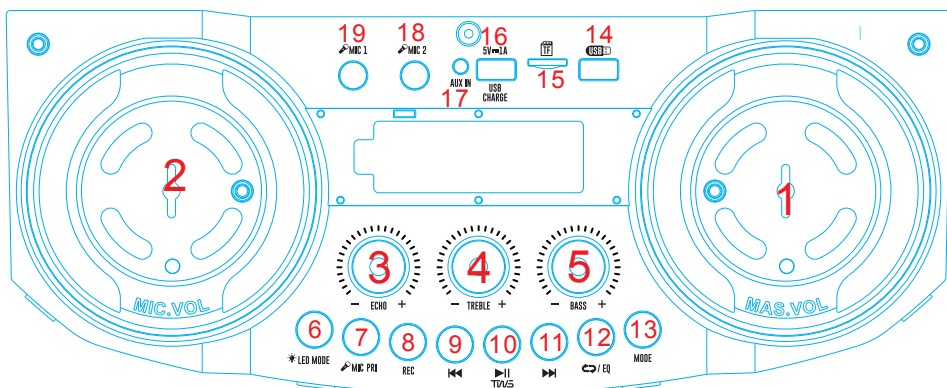


PBX-21201 FRONT PANEL

1. Master Volume Knob: Adjust from Min to Max
2. Microphone Volume Knob: Adjust from Min to Max.
3. Microphone Echo Knob: Adjust from Min to Max
4. Treble Knob : Adjust from Min to Max
5. Bass Knob : Adjust from Min to Max
6. LED MODE: Press to select the lighting effect
7. Microphone Priority : ON / OFF
8. REC
9. Previous Track: Select previous track
10. Play/Pause (TWS Connection)
11. Next Track: Select next track
12. Repeat/ EQ: Short press to repeat, press and hold to select the EQ mode
13. Mode: Toggle between AUX, USB, TF, FM, BT
14. USB Slot
15. TF card Slot
16. USB Charging Port: 5V 1A
17. AUX Input
18. Microphone Input 2
19. Microphone Input 1

PBX-21201 PANEL FRONTAL

 1. Perilla de volumen maestro: ajuste de mínimo a máximo
2. Perilla de volumen del micrófono: ajuste de mínimo a máximo.
3. Perilla de eco del micrófono: ajuste de mínimo a máximo.
4. Perilla de agudos: ajuste de mínimo a máximo
5. Perilla de graves: ajuste de mínimo a máximo
6. MODO LED: Presione para seleccionar el efecto de iluminación.
7. Prioridad del micrófono: ENCENDIDO / APAGADO
8. REC
9. Pista anterior: seleccione la pista anterior
10. Reproducir/Pausar (Conexión TWS)
11. Pista siguiente: seleccione la pista siguiente
12. Repetir/EQ: presione brevemente para repetir, presione y mantenga presionado para seleccionar el modo EQ
13. Modo: alternar entre AUX, USB, TF, FM, BT
14. Ranura USB
15. Ranura para tarjeta TF
16. Puerto de carga USB: 5V 1A
17. Entrada auxiliar
18. Entrada de micrófono 2
19. Entrada de micrófono 1

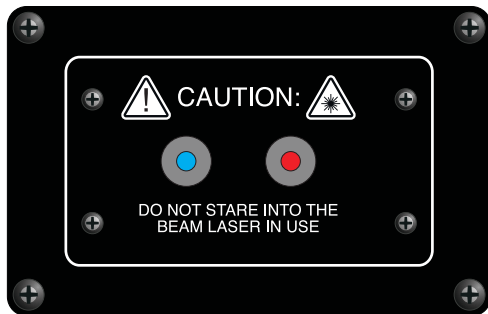


PBX-21201 Top Panel

Caution: Do not stare into the beam laser in use

PBX-21201 Panel Superior

 Precaución: No mire fijamente al rayo láser en uso.

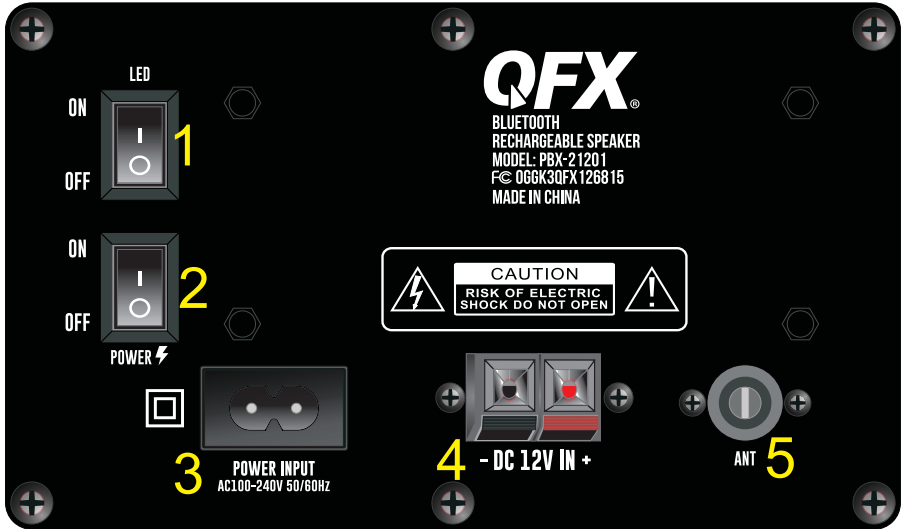

PBX-21201 BACK PANEL

1. Power Switch : ON/OFF
2. Light Switch: ON/OFF
3. Power Supply: 100-240V 50/60Hz
4. DC 12V Input
5. FM Antenna

PBX-21201 PANEL TRASERO

1. Interruptor de encendido: encendido/apagado
2. Interruptor de luz: encendido/apagado
3. Fuente de alimentación: 100-240V 50/60Hz
4. Entrada de 12 V CC
5. Antena FM

PBX-21201 DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX /FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Short Press "play/pause" button for auto scan all channels.

PBX-21201 AJUSTES DEL SISTEMA DE PANTALLA

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB / TF/BT/AUX / FM. Cuando se inserta una unidad de tarjeta de memoria flash USB / TF en la entrada USB /TF, la unidad automáticamente cambiará al modo USB / TF y comenzará la reproducción de archivos de audio .mp3 del flash USB Card unidad / TF.
2. Track Número: El número que se está reproduciendo de la pista USB / TF se mostrará Modo
3. FM: Todos los canales de FM pantalla here. Presione brevemente el botón "reproducir / pausa" para escanear automáticamente todos los canales.

PBX-21201 Recording Function

Put USB/TF card in the slot, then inserting the wired microphone, make sure it is working.
 Long press "REC" to start recording sound , short press "REC" playing recording file. Press again to exit recording function.

PBX-21201 Función de grabación

Coloque la tarjeta USB / TF en la ranura, luego inserte el micrófono con cable, asegúrese de que esté funcionando.
 Long Presione "REC" para iniciar la grabación de sonido, pulsación corta "REC" paragarbarl archivo. Presione nuevamente para salir de la función de grabación

PBX-21201 TWS CONNECTION

1. TWS connection: TWS works for two PBX-21201 speakers and can not support more than two speakers.
2. Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode, and the word "BLUE" on the LED screen will flash.
3. At the first time, please press the Play/Pause (TWS) button of one unit for 3 seconds. Then two speakers will connect together.
4. Connect the phone: Open the phone Bluetooth settings, Search and Connect the main device Bluetooth Name 'QFX PBX-21201'.
5. Select music from phone and enjoy TWS playing in pairs with two Speakers.
6. Exit TWS: Long press the Play/Pause (TWS) button for 3 seconds to exit the TWS function

PBX-21201 CONEXIÓN TWS

 
1. Conexión TWS: TWS funciona para dos altavoces PBX-21201 y no admite más de dos altavoces.
2. Encienda los altavoces, presione el botón MODE para cambiar al modo BLUETOOTH y la palabra "BLUE" en la pantalla LED parpadeará.
3. La primera vez, presione el botón Reproducir/Pausar (TWS) de una unidad durante 3 segundos. Entonces dos altavoces se conectarán juntos.
4. Conecte el teléfono: abra la configuración de Bluetooth del teléfono, busque y conecte el nombre de Bluetooth del dispositivo principal 'QFX PBX-21201'.
5. Seleccione música desde el teléfono y disfrute de la reproducción de TWS en pares con dos altavoces.
6. Salir de TWS: mantenga presionado el botón Reproducir/Pausar (TWS) durante 3 segundos para salir de la función TWS

PBX-21201 REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Mode Button: Toggle between USB, TF, FM, AUX, BT
3. Stop
4. Mute: Mute the track
5. PLAY/PAUSE (Press to Scan Channel in FM Mode)
6. Previous Track: Select pervious channel
7. Next Track: Select next channel.
8. VOL+: Increase the master volume
9. VOL-: Reduce the master volume
10. REP: Repeat the playing track.
11. EQ: Select EQ mode.
12. KEY Number for selecting the certain track for USB flash drive or TF card.

CONTROL REMOTO PBX-21201

1. ESPERA: Hacer que la unidad sea el modo de espera.
2. Botón de modo de entrada: alterna entre USB, TF, FM, AUX, BT
3. Detener
4. Silencio: silencia la pista
5. REPRODUCIR / PAUSAR (presione para buscar canales en modo FM)
6. Pista anterior: seleccione el canal anterior
7. Siguiete pista: seleccione el siguiente canal.
8. VOL +: aumenta el volumen principal.
9. VOL -: Reduce el volumen principal.
10. REP: Repite la pista en reproducción.
11. EQ: seleccione el modo EQ.
12. KEY Número para seleccionar la pista determinada para la unidad flash USB o tarjeta de TF

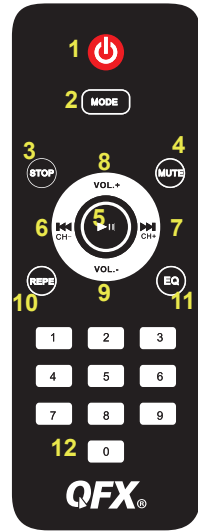



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2024 ©



1-800-864-CLUB (2582)
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

Enjoy your speaker and make many memories with it because
QFX is Where the Party Begins!

We would love to hear about your PBX-21201 Journey!
Tag us **@QFXUSA** to share your stories