

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL

IMPORTANT SAFETY GUIDELINES

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Avoid exposing the product to water or any liquid substances.
4. Do not use if unit has been dropped or damaged in any way.
5. Improper and unauthorized repairs may place user at serious risk.
6. Electrical equipment repairs should be exclusively handled by certified professionals.
Ensure the unit is placed on a stable, flat surface, away from heat sources and vibrations.
7. Do not insert any objects into the unit's openings.
8. Use the product only for its intended purpose.
9. Keep this product out of reach of children.
10. Remember, this product isn't a toy. Avoid playing music at high volumes, especially around children, to prevent potential hearing damage.

DIRECTRICES DE SEGURIDAD IMPORTANTES

1. Lea todas las instrucciones antes de usar este producto.
2. No deje este producto sin supervisión mientras esté conectado a la fuente de alimentación.
3. Evite exponer el producto al agua o a cualquier sustancia líquida.
4. No lo use si la unidad ha sido caída o dañada de alguna manera.
5. Las reparaciones inapropiadas y no autorizadas pueden poner al usuario en riesgo grave.
6. Las reparaciones de equipos eléctricos deben ser manejadas exclusivamente por profesionales certificados. Asegúrese de que la unidad esté colocada sobre una superficie estable y plana, lejos de fuentes de calor y vibraciones.
7. No inserte objetos en las aberturas de la unidad.
8. Utilice el producto solo para su propósito previsto.
9. Mantenga este producto fuera del alcance de los niños.
10. Recuerde, este producto no es un juguete. Evite reproducir música a volúmenes altos, especialmente cerca de los niños, para prevenir posibles daños auditivos.

DIRECTIVES DE SÉCURITÉ IMPORTANTES

1. Lisez toutes les instructions avant d'utiliser ce produit.
2. Ne laissez pas ce produit sans surveillance lorsqu'il est connecté à l'alimentation électrique.
3. Évitez d'exposer le produit à l'eau ou à des substances liquides.
4. N'utilisez pas l'unité si elle a été tombée ou endommagée de quelque manière que ce soit.
5. Les réparations inappropriées et non autorisées peuvent mettre l'utilisateur en danger sérieux.
6. Les réparations d'équipements électriques doivent être exclusivement effectuées par des professionnels certifiés. Assurez-vous que l'unité est placée sur une surface stable et plate, loin des sources de chaleur et des vibrations.
7. N'insérez aucun objet dans les ouvertures de l'unité.
8. Utilisez le produit uniquement à des fins prévues.
9. Gardez ce produit hors de la portée des enfants.
10. Rappelez-vous, ce produit n'est pas un jouet. Évitez de jouer de la musique à des volumes élevés, surtout autour des enfants, pour éviter tout risque de dommage auditif.

SPECIFICATIONS

Bluetooth version: 5.0
Input voltage: DC 5V
Power Rating: 3W*2
Battery: 1200 mAh
Operation range: 32.8ft
Charging Time: 3-4 hrs
Playing Time: 1-2 hrs

ESPECIFICACIONES

Versión de Bluetooth: 5.0
Voltaje de entrada: DC 5V
Potencia nominal: 3W*2
Batería: 1200 mAh
Rango de operación: 32.8 pies
Tiempo de carga: 3-4 horas
Tiempo de reproducción: 1-2 horas

SPÉCIFICATIONS

Version Bluetooth : 5.0
Tension d'entrée : CC 5V
Puissance nominale : 3W*2
Batterie : 1200 mAh
Portée opérationnelle : 32,8 pieds
Temps de charge : 3-4 heures
Temps de lecture : 1-2 heures

Instructions/Instrucciones/Instructions

Bluetooth Pairing

Set the mode to "Bluetooth" by switching to the "M" position. On your mobile device, search for "QFX BT-22" in Bluetooth settings. Select and pair with the device. Once paired, you can play music wirelessly. The speaker will automatically connect to your device the next time you use it.

Button Operations

Volume and Track Control:
— Button: Hold to decrease volume; press briefly to play the previous track.
+ Button: Hold to increase volume; press briefly to play the next track.

Power and Mode Selection

Toggle Switch: Turn the device on/off.
"M" Button: Cycle between Bluetooth, USB/TF, FM, and AUX modes.

Playback Control:

▶ Button: Press to play or pause music.

Emparejamiento Bluetooth

Configure el modo en "Bluetooth" cambiando a la posición "M". En su dispositivo móvil, busque "QFX BT-22" en la configuración de Bluetooth. Seleccione y empareje el dispositivo. Una vez emparejado, puede reproducir música de forma inalámbrica. El altavoz se conectará automáticamente a su dispositivo la próxima vez que lo utilice.

Operaciones de botones

Control de volumen y pistas: Botón **—**: Mantenga presionado para disminuir el volumen; presione brevemente para reproducir la pista anterior. Botón **+**: Mantenga presionado para aumentar el volumen; presione brevemente para reproducir la siguiente pista.

Encendido y selección de modo:

Interruptor basculante: Encienda/apague el dispositivo. Botón **M**: Cambie entre los modos Bluetooth, USB/TF, FM y AUX.

Control de reproducción:

Botón **▶**: Presione para reproducir o pausar la música.

Appairage Bluetooth

Réglez le mode sur "Bluetooth" en basculant sur la position "M". Sur votre appareil mobile, recherchez "QFX BT-22" dans les paramètres Bluetooth. Sélectionnez et appairiez avec l'appareil. Une fois appairé, vous pouvez écouter de la musique sans fil. Le haut-parleur se connectera automatiquement à votre appareil la prochaine fois que vous l'utiliserez.

Opérations des boutons

Contrôle du volume et des pistes :
 Bouton **—** : Maintenez enfoncé pour diminuer le volume ; appuyez brièvement pour lire la piste précédente.
 Bouton **+** : Maintenez enfoncé pour augmenter le volume ; appuyez brièvement pour lire la piste suivante.
Alimentation et sélection du mode :
 Interrupteur basculant : Allumez/éteignez l'appareil.
 Bouton **M** : Faites défiler entre les modes Bluetooth, USB/TF, FM et AUX.

Contrôle de lecture:

Bouton **▶** : Appuyez pour lire ou mettre en pause la musique.

AUX Input

To use an external audio source (e.g., portable player, CD player), connect it to the speaker's AUX jack using the provided 3.5mm stereo cable.

Bluetooth Call Handling

▶ Button: Answer or end a call. Double-click **▶**: Redial the last number.

FM Radio

Set the mode to FM by toggling to "M". Hold down the **▶** button; the speaker will automatically scan and save local radio stations (may take 1-2 minutes). Once saved, use the track buttons to switch between stations.

USB/TF Music Player

Insert a TF card or USB drive containing MP3 files to play music. Control tracks and volume using the same buttons as mentioned in the Button Operations section.

Entrada AUX

Para utilizar una fuente de audio externa (por ejemplo, reproductor portátil, reproductor de CD), conéctelo al conector AUX del altavoz mediante el cable estéreo de 3,5 mm proporcionado.

Manejo de llamadas Bluetooth

Botón **▶** : Responda o finalice una llamada. Doble clic en **▶** : Remarcar el último número.

Radio FM

Configure el modo en FM basculando a "M". Mantenga presionado el botón **▶** ; el altavoz escaneará y guardará automáticamente las estaciones de radio locales (puede llevar 1-2 minutos). Una vez guardadas, use los botones de pista para cambiar entre estaciones.

Reproductor de música USB/TF

Inserte una tarjeta TF o una unidad USB que contenga archivos MP3 para reproducir música. Controle las pistas y el volumen usando los mismos botones mencionados en la sección Operaciones de botones.

Entrée AUX

Pour utiliser une source audio externe (par exemple, lecteur portable, lecteur CD), connectez-la à la prise AUX du haut-parleur à l'aide du câble stéréo 3,5 mm fourni.

Gestion des appels Bluetooth

Bouton **▶** : Répondez ou mettez fin à un appel. Double-clic sur **▶** : Rappeler le dernier numéro.

Radio FM

Réglez le mode sur FM en basculant sur "M". Maintenez enfoncé le bouton **▶** ; le haut-parleur analysera et enregistrera automatiquement les stations de radio locales (cela peut prendre 1 à 2 minutes). Une fois enregistrées, utilisez les boutons de piste pour passer d'une station à l'autre.

Lecteur de musique USB/TF

Insérez une carte TF ou une clé USB contenant des fichiers MP3 pour lire de la musique. Contrôlez les pistes et le volume à l'aide des mêmes boutons mentionnés dans la section Opérations des boutons.

True Wireless Stereo (TWS)

Pair two BT-22 speakers for synchronized stereo sound: Hold down the "M" button on one speaker; it will search for the second one. Once paired (confirmed by a sound), connect to your mobile device to enjoy TWS.

Charging

Connect the provided USB cable to the speaker's Micro USB port. Red LED: Charging
 LED Off: Fully charged

LED Light Show

▶ Button: Hold down for the 7th/8th time to toggle party lights on/off. Press and hold to cycle through seven light modes.

Estéreo verdadero inalámbrico (TWS)

Empareje dos altavoces BT-22 para obtener un sonido estéreo sincronizado: Mantenga resionado el botón "M" en un altavoz; buscará el segundo. Una vez emparejado (confirmado por un sonido), conéctese a su dispositivo móvil para disfrutar de TWS.

Carga

Conecte el cable USB proporcionado al puerto Micro USB del altavoz. LED rojo: Cargando
 LED apagado: Cargado completamente

Espectáculo de luces LED

Botón **▶** : Mantenga presionado por 7ª/8ª vez para activar/desactivar las luces de fiesta. Mantenga presionado para cambiar entre siete modos de luz.

Son stéréo sans fil véritable (TWS)

Appairiez deux haut-parleurs BT-22 pour un son stéréo synchronisé : Maintenez le bouton "M" enfoncé sur un haut-parleur ; il recherchera le deuxième. Une fois appairé (confirmé par un son), connectez-vous à votre appareil mobile pour profiter du TWS.

Chargement

Connectez le câble USB fourni au port Micro USB du haut-parleur. LED rouge : En cours de chargement
 LED éteinte : Chargé complètement

Spectacle lumineux LED

Bouton **▶** : Maintenez enfoncé pour la 7e/8e fois pour activer/désactiver les lumières de fête. Appuyez et maintenez pour faire défiler sept modes lumineux.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2024 ©

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your BT-22 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

