

BT-ZX33



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRECAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The BT-ZX33 is a rechargeable battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume, The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El BT-ZX33 es un altavoz PA con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (8 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarlo con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.


BATTERIE

Le BT-ZX33 est un haut-parleur de sonorisation alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (8 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser avec un volume de 100 %. L'appareil peut fonctionner et se charger avec un volume inférieur. Le niveau de volume augmenterait à mesure que l'appareil est en charge.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 FCC ID: 2BGLF-LS-X2

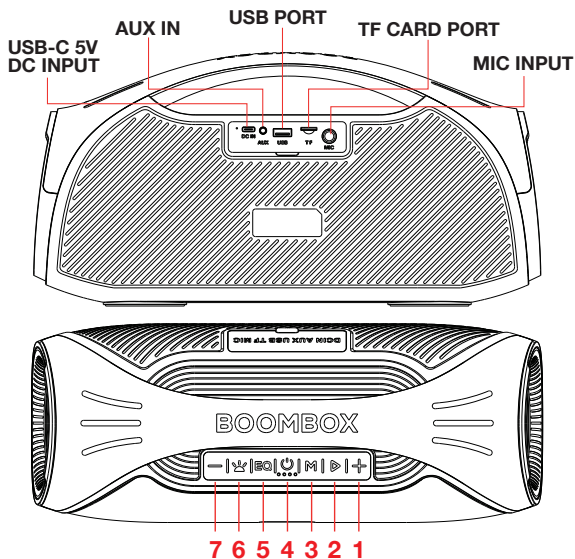

1. Press and Hold to switch to the next track, Short press to increase volume
2. Press pause/play
3. Press mode switch, long press to exit TWS mode
4. Press and Hold to turn on/off
5. Press to switch between three sound effects
6. Press and Hold to turn off/on the lights, short press to switch to light mode
7. Press and Hold to switch to the previous track, Short press to reduce volume

Bluetooth Connectivity:

1. When you turn on the product, it automatically enters Bluetooth mode.
2. At this point, it's ready to pair with your phone or any Bluetooth-enabled device.
3. To pair, simply enable Bluetooth on your phone and search for devices.
4. Look for a device named "BT-ZX33" and select it to establish a successful connection.
5. Once paired, you can play music from your phone through the device's speakers.

USB Drive and TF Card:

1. If you prefer using a USB drive or TF card, simply insert it into the designated slot on the device.
2. The device will automatically detect the inserted USB drive or TF card and start playing the music stored on it.
3. It supports playing music files in MP3 or WAV format.
4. It can handle TF cards or USB drives with a capacity of up to 64GB.

Charging:

1. When the device needs charging, connect the USB-C cable to a USB input. 5V, 1 A MIN
2. A red light indicates that the device is charging.
3. The light will turn off once the battery is fully charged.

REMOTE CONTROL FUNCTIONS



1. **Power:** ON/OFF
2. **Mute:** When music is playing, press to mute the sound, then press again to unmute sound.
3. **Mode:** Press Mode button to switch to different modes (BT, AUX, USB, TF, FM)
4. **Previous Song:** Press and hold to go to previous song track.
5. **Play/Pause:** Press to play music, then press to pause music.
6. **Next Song:** Press and hold to go to next song track.
7. **EQ Mode:** Press EQ1, EQ2, EQ3. Press and hold to silence.
8. **Light On/OFF:** Press to turn lights ON or OFF.
9. **Search and Store Radio Stations:** When in FM mode, press the "SCAN" button to automatically search for radio stations. This process may take up to 3 minutes. Wait until this process has been completed.
10. **Decrease Volume:** Press to increase the speaker volume from maximum to minimum level.
11. **Increase Volume:** Press to increase the speaker volume from minimum to maximum level.
12. **Light Mode:** Press for light mode. Press and hold to turn lights ON or OFF.
13. **Decrease Lights:** Press to decrease lights.
14. **Increase Lights:** Press to increase lights.
15. **Maximum Bright Lights:** Press to set lights at maximum brightness.
16. **EQ Presets:** Press to Select EQ1, EQ2 or EQ3

FM RADIO FUNCTION

 
FM Mode: Press the "MODE" Button to enter FM Mode.

Automatic Radio Search: When in FM Mode, press and hold "SCAN" Key to automatically search for radio stations.

Play/Pause: When in FM Mode press to pause radio, then press again to play radio.

Next Radio Station: When in FM mode, press and hold Next Button to switch to the next station.

Previous Radio Station: When in FM mode, press and hold Previous Button to switch to the next station.

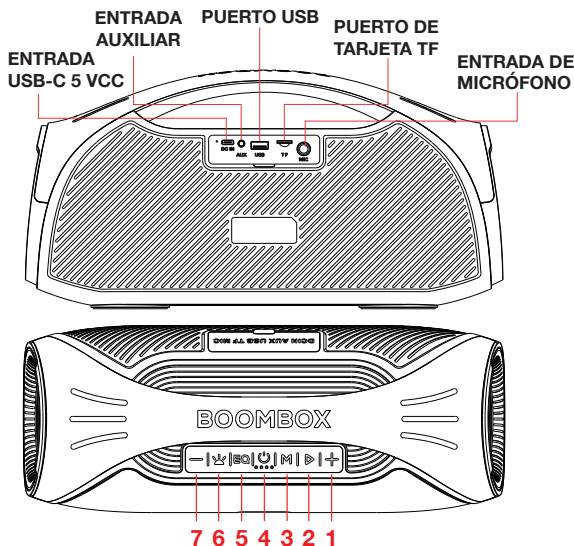

1. Mantenga presionado para cambiar a la siguiente pista, presione brevemente para aumentar el volumen
2. Presione brevemente pausar/reproducir
3. Presione brevemente el interruptor de modo, presione prolongadamente para salir del modo TWS
4. Mantenga presionado para encender/apagar
5. Presione brevemente para cambiar entre tres efectos de sonido.
6. Mantenga presionado para apagar/encender las luces, presione brevemente para cambiar al modo de luz
7. Mantenga presionado para cambiar a la pista anterior, presione brevemente para reducir el volumen

Conectividad Bluetooth:

1. Cuando enciende el producto, ingresa automáticamente al modo Bluetooth.
2. En este punto, está listo para emparejarse con su teléfono o cualquier dispositivo con Bluetooth.
3. Para emparejar, simplemente habilite Bluetooth en su teléfono y busque dispositivos.
4. Busque un dispositivo llamado "BT-ZX33" y selecciónelo para establecer una conexión exitosa.
5. Una vez emparejado, podrás reproducir música desde tu teléfono a través de los parlantes del dispositivo.

Unidad USB y tarjeta TF:

1. Si prefiere utilizar una unidad USB o una tarjeta TF, simplemente insértela en la ranura designada del dispositivo.
2. El dispositivo detectará automáticamente la unidad USB o la tarjeta TF insertada y comenzará a reproducir la música almacenada en ella.
3. Admite la reproducción de archivos de música en formato MP3 o WAV.
4. Puede manejar tarjetas TF o unidades USB con una capacidad de hasta 64 GB.

Cargando:

1. Cuando el dispositivo necesite cargarse, conecte el cable USB-C a una entrada USB. 5V, 1 AMIN
2. Una luz roja indica que el dispositivo se está cargando.
3. La luz se apagará una vez que la batería esté completamente cargada.

FUNCIONES DEL CONTROL REMOTO



1. **Encender:** ON/OFF
2. **Silenciar:** Cuando la música está sonando, presiona para silenciar el sonido, luego presiona de nuevo para activar el sonido.
3. **Modo:** Presiona el botón Mode para cambiar a diferentes modos (BT, AUX, USB, TF, FM).
4. **CanCIÓN Anterior:** Presiona y mantén pulsado para ir a la pista de la canción anterior.
5. **Reproducir/Pausar:** Presiona para reproducir música, luego presiona para pausar la música.
6. **Siguiente CanCIÓN:** Presiona y mantén pulsado para ir a la pista de la siguiente canción.
7. **Modo EQ:** Presiona EQ1, EQ2, EQ3. Mantén presionado para silenciar.
8. **Encender/Apagar Luces:** Presiona para encender o apagar las luces.
9. **Buscar y Guardar Estaciones de Radio:** Cuando estés en modo FM, presiona el botón "SCAN" para buscar automáticamente estaciones de radio. Este proceso puede tardar hasta 3 minutos. Espera hasta que este proceso se haya completado.
10. **Disminuir Volumen:** Presiona para disminuir el volumen del altavoz del nivel máximo al mínimo.
11. **Aumentar Volumen:** Presiona para aumentar el volumen del altavoz del nivel mínimo al máximo.
12. **Modo de Luces:** Presiona para el modo de luces. Mantén presionado para encender o apagar las luces.
13. **Disminuir Luces:** Presiona para disminuir la intensidad de las luces.
14. **Aumentar Luces:** Presiona para aumentar la intensidad de las luces.
15. **Luces Máximas Brillantes:** Presiona para poner las luces al máximo brillo.
16. **Preajustes EQ:** Presiona para seleccionar EQ1, EQ2 o EQ3.

FUNCIÓN DE RADIO FM

 
Modo FM: Presiona "MODE" para entrar en modo FM.

Búsqueda Automática: En modo FM, mantén presionada la tecla "SCAN" para buscar estaciones automáticamente.

Reproducir/Pausar: En modo FM, presiona para pausar o reproducir la radio.

Siguiente Estación: En modo FM, mantén presionado el botón Siguiente para cambiar a la siguiente estación.

Estación Anterior: En modo FM, mantén presionado el botón Anterior para cambiar a la estación anterior.

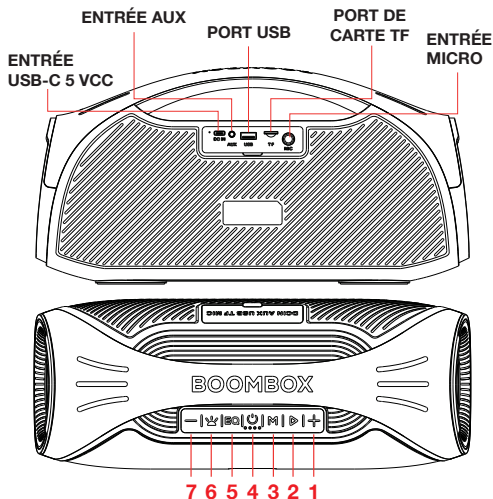

1. Appuyez longuement pour passer à la piste suivante, appuyez brièvement pour augmenter le volume.
2. Appuyez brièvement sur pause/lecture
3. Appuyez brièvement sur le commutateur de mode, appuyez longuement pour quitter le mode TWS.
4. Appuyez longuement pour allumer/éteindre
5. Appuyez brièvement pour basculer entre trois effets sonores
6. Appuyez longuement pour éteindre/allumer les lumières, appuyez brièvement pour passer en mode lumière.
7. Appuyez longuement pour passer à la piste précédente, appuyez brièvement pour réduire le volume.

Connectivité Bluetooth :

1. Lorsque vous allumez le produit, il passe automatiquement en mode Bluetooth.
2. À ce stade, il est prêt à être couplé à votre téléphone ou à tout appareil compatible Bluetooth.
3. Pour effectuer le couplage, activez simplement Bluetooth sur votre téléphone et recherchez des appareils.
4. Recherchez un appareil nommé « BT-ZX33 » et sélectionnez-le pour établir une connexion réussie.
5. Une fois couplé, vous pouvez écouter de la musique depuis votre téléphone via les haut-parleurs de l'appareil.

Clé USB et carte TF :

1. Si vous préférez utiliser une clé USB ou une carte TF, insérez-la simplement dans l'emplacement désigné de l'appareil.
2. L'appareil détectera automatiquement la clé USB ou la carte TF insérée et commencera à lire la musique qui y est stockée.
3. Il prend en charge la lecture de fichiers musicaux au format MP3 ou WAV.
4. Il peut gérer des cartes TF ou des clés USB d'une capacité allant jusqu'à 64 Go.

Mise en charge:

1. Cuando el dispositivo necesita cargarse, conecta el cable USB-C a una entrada USB. 5V, 1 A MIN
2. Una luz roja indica que el dispositivo se está cargando.
3. La luz se apagará una vez que la batería esté completamente cargada.

FONCTIONS DE LA TÉLÉCOMMANDE



1. **Alimentation** : ON/OFF
2. **Muet** : Appuyez pour couper/réactiver le son.
3. **Mode** : Appuyez pour changer de mode (BT, AUX, USB, TF, FM).
4. **Chanson Précédente** : Maintenez pour piste précédente.
5. **Lire/Pause** : Appuyez pour lire/pause.
6. **Chanson Suivante** : Maintenez pour piste suivante.
7. **Mode EQ** : Appuyez sur EQ1, EQ2, EQ3. Maintenez pour couper le son.
8. **Lumières ON/OFF** : Appuyez pour allumer/éteindre les lumières.
9. **Rechercher et Enregistrer Stations** : En mode FM, appuyez sur "SCAN" pour rechercher des stations.
10. **Diminuer Volume** : Appuyez pour diminuer le volume.
11. **Augmenter Volume** : Appuyez pour augmenter le volume.
12. **Mode Lumière** : Appuyez pour mode lumière. Maintenez pour allumer/éteindre les lumières.
13. **Diminuer Lumières** : Appuyez pour diminuer l'intensité.
14. **Augmenter Lumières** : Appuyez pour augmenter l'intensité.
15. **Lumières Maximales** : Appuyez pour luminosité maximale.
16. **Préréglages EQ** : Appuyez pour sélectionner EQ1, EQ2 ou EQ3.

FONCTION DE LA RADIO FM

Modo FM : Appuyez sur "MODE" pour entrer en mode FM.

Recherche Automatique : En mode FM, maintenez la touche "SCAN" enfoncée pour rechercher automatiquement des stations.

Lire/Pause : En mode FM, appuyez pour mettre la radio en pause ou la lire.

Station Suivante : En mode FM, maintenez enfoncé le bouton Suivant pour passer à la station suivante.

Station Précédente : En mode FM, maintenez enfoncé le bouton Précédent pour passer à la station précédente.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2024 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your BT-ZX33 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

