

BT-3

QFX[®]

WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL

IMPORTANT SAFETY GUIDELINES

1. Read all instructions before using this product.
2. Do not leave this product unattended while connected to the power supply.
3. Avoid exposing the product to water or any liquid substances.
4. Do not use if unit has been dropped or damaged in any way.
5. Improper and unauthorized repairs may place user at serious risk.
6. Electrical equipment repairs should be exclusively handled by certified professionals. Ensure the unit is placed on a stable, flat surface, away from heat sources and vibrations.
7. Do not insert any objects into the unit's openings.
8. Use the product only for its intended purpose.
9. Keep this product out of reach of children.
10. Remember, this product isn't a toy. Avoid playing music at high volumes, especially around children, to prevent potential hearing damage.

DIRECTRICES DE SEGURIDAD IMPORTANTES

1. Lea todas las instrucciones antes de usar este producto.
2. No deje este producto sin supervisión mientras esté conectado a la fuente de alimentación.
3. Evite exponer el producto al agua o a cualquier sustancia líquida.
4. No lo use si la unidad ha sido caída o dañada de alguna manera.
5. Las reparaciones inapropiadas y no autorizadas pueden poner al usuario en riesgo grave.
6. Las reparaciones de equipos eléctricos deben ser manejadas exclusivamente por profesionales certificados. Asegúrese de que la unidad esté colocada sobre una superficie estable y plana, lejos de fuentes de calor y vibraciones.
7. No inserte objetos en las aberturas de la unidad.
8. Utilice el producto solo para su propósito previsto.
9. Mantenga este producto fuera del alcance de los niños.
10. Recuerde, este producto no es un juguete. Evite reproducir música a volúmenes altos, especialmente cerca de los niños, para prevenir posibles daños auditivos.

DIRECTIVES DE SÉCURITÉ IMPORTANTES

1. Lisez toutes les instructions avant d'utiliser ce produit.
2. Ne laissez pas ce produit sans surveillance lorsqu'il est connecté à l'alimentation électrique.
3. Évitez d'exposer le produit à l'eau ou à des substances liquides.
4. N'utilisez pas l'unité si elle a été tombée ou endommagée de quelque manière que ce soit.
5. Les réparations inappropriées et non autorisées peuvent mettre l'utilisateur en danger sérieux.
6. Les réparations d'équipements électriques doivent être exclusivement effectuées par des professionnels certifiés. Assurez-vous que l'unité est placée sur une surface stable et plate, loin des sources de chaleur et des vibrations.
7. N'insérez aucun objet dans les ouvertures de l'unité.
8. Utilisez le produit uniquement à des fins prévues.
9. Gardez ce produit hors de la portée des enfants.
10. Rappelez-vous, ce produit n'est pas un jouet. Évitez de jouer de la musique à des volumes élevés, surtout autour des enfants, pour éviter tout risque de dommage auditif.

DESCRIPTION OF PARTS

1. OFF/ON.
2. Charging port (DC 5V).
3. Micro SD (TF) card slot.
4. USB slot.
5. Next track /VOL+
Previous track /VOL-
6. MODE Button:
Mode 1: BT-Connect
Mode 2: USB/TF
Mode 3: FM Mode / Press and Hold to connect TWS.
7. >||/SCAN: Auto scan in FM mode;
Press and hold to connect or disconnect equipment.

DESCRIPCIÓN DE LAS PARTES

1. APAGADO/ENCENDIDO
2. Puerto de carga (DC 5V)
3. Ranura para tarjeta Micro SD (TF)
4. Ranura USB
5. Pista siguiente /VOL+
Pista anterior/VOL-
6. Botón MODE:
Modo 1: BT-Connect
Modo 2: USB/TF
Modo 3: FM Mode / Presione y mantenga presionado para conectar TWS.
7. >||/SCAN: Escaneo automático en modo FM;
Presione y mantenga presionado para conectar o desconectar el equipo.

DESCRIPTION DES PARTIES

1. ARRÊT/MARCHE
2. Port de charge (DC 5V)
3. Fente pour carte Micro SD (TF)
4. Fente USB
5. Piste suivante /VOL+
Piste précédente/VOL-
6. Bouton MODE:
Mode 1: BT-Connect
Mode 2: USB/TF
Mode 3: FM Mode / Appuyez et maintenez pour connecter TWS
7. >||/SCAN: Scan automatique en mode FM;
Appuyez et maintenez pour connecter ou déconnecter l'équipement.

	Press and release: Mute the microphone. Press and hold: Toggle the microphone on or off.
	Click: Increase microphone volume.
	Click: Decrease microphone volume.
	Press and release: Cycle through voice effects (female voice, male voice, warcraft voice, doll voice, original sound). Press and hold: Remove the original music sound.
	Indicator Light
	DC 5V Type-C Charging Port

	Presiona y suelta: Silencia el micrófono. Mantén presionado: Activa o desactiva el micrófono.
	Haz clic: Aumenta el volumen del micrófono.
	Haz clic: Disminuye el volumen del micrófono.
	Presiona y suelta: Cambia entre efectos de voz (voz femenina, voz masculina, voz de Warcraft, voz de muñeca, sonido original). Mantén presionado: Elimina el sonido original de la música.
	Luz indicadora
	Puerto de carga Type-C DC 5V

	Press and release: Mute the microphone. Press and hold: Toggle the microphone on or off.
	Click: Increase microphone volume.
	Click: Decrease microphone volume.
	Press and release: Cycle through voice effects (female voice, male voice, warcraft voice, doll voice, original sound). Press and hold: Remove the original music sound.
	Indicator Light
	DC 5V Type-C Charging Port



ACCESSORIES

Wireless speaker: 1 PC
User manual: 1 PC
USB cable: 1 PC

ACCESORIOS

Altavoz inalámbrico: 1 pieza
Manual de usuario: 1 pieza
Cable USB: 1 pieza

ACCESSOIRES

Haut-parleur sans fil: 1 pièce
Manuel d'utilisation: 1 pièce
Câble USB: 1 pièce



BT-3 INSTRUCTIONS

CONNECTING THE UNIT

1. Initial Pairing:

- Turn on both the speaker and your mobile or other device.
- Search for and select the speaker's model name, "QFX BT-3" to pair the devices.
- After the initial pairing, the devices will automatically reconnect when the speaker is turned on.

2. Wireless Mode:

- Turn on the speaker to enter wireless mode.
- Pair your device to start playing music.
- Use the "▶||" button to play or pause music.
- Tap the "◀◀/V-" or "▶▶/V+" button to skip to the previous or next track.
- Press and hold the "◀◀/V-" or "▶▶/V+" button to adjust the volume.

3. USB/TF Card Mode:

- Insert a USB flash drive or TF card into the corresponding slot.
- The speaker will automatically start playing MP3 files.
- Use the "▶||" button to play or pause music.
- Tap the "◀◀/V-" or "▶▶/V+" button to skip tracks.
- Press and hold the "◀◀/V-" or "▶▶/V+" button to adjust the volume.

4. FM Radio Mode:

- Press the "▶||/SCAN" button to automatically search for FM channels.
- The speaker will scan and save all available FM stations, which may take a few minutes.
- Tap the "◀◀/V-" or "▶▶/V+" button to navigate through the stations.
- Press and hold the "◀◀/V-" or "▶▶/V+" button to adjust the volume.

5. TWS (True Wireless Stereo) Mode:

- To connect two speakers of the same model to one device, first turn on both speakers.
- Press and hold the "MODE" button on one speaker until you hear a "Ding~" sound, indicating successful pairing of the two units.
- Ensure neither speaker is connected to another device before pairing.

6. Charging:

- Connect the USB cable to the speaker's charging port and plug it into a power source.
- The red LED indicator will light up, showing that the speaker is charging.

Conexión de la Unidad

1. Emparejamiento Inicial:

- Enciende tanto el altavoz como tu dispositivo móvil u otro dispositivo.
- Busca y selecciona el nombre del modelo del altavoz, "QFX BT-3", para emparejar los dispositivos.
- Después del emparejamiento inicial, los dispositivos se reconectarán automáticamente cuando el altavoz se encienda.

2. Modo Inalámbrico:

- Enciende el altavoz para entrar en modo inalámbrico.
- Empareja tu dispositivo para comenzar a reproducir música.
- Usa el botón "▶||" para reproducir o pausar la música.
- Toca el botón "◀◀/V-" o "▶▶/V+" para saltar a la pista anterior o siguiente.
- Mantén presionado el botón "◀◀/V-" o "▶▶/V+" para ajustar el volumen.

3. Modo USB/Tarjeta TF:

- Inserta una unidad flash USB o tarjeta TF en la ranura correspondiente.
- El altavoz comenzará a reproducir archivos MP3 automáticamente.
- Usa el botón "▶||" para reproducir o pausar la música.
- Toca el botón "◀◀/V-" o "▶▶/V+" para cambiar de pista.
- Mantén presionado el botón "◀◀/V-" o "▶▶/V+" para ajustar el volumen.

4. Modo Radio FM:

- Presiona el botón "▶||/SCAN" para buscar automáticamente canales FM.
- El altavoz escaneará y guardará todas las estaciones FM disponibles, lo que puede tardar unos minutos.
- Toca el botón "◀◀/V-" o "▶▶/V+" para navegar por las estaciones.
- Mantén presionado el botón "◀◀/V-" o "▶▶/V+" para ajustar el volumen.

5. Modo TWS (True Wireless Stereo):

- Para conectar dos altavoces del mismo modelo a un dispositivo, primero enciende ambos altavoces.
- Mantén presionado el botón "MODE" en uno de los altavoces hasta que escuches un sonido "Ding~", indicando el emparejamiento exitoso de las dos unidades.
- Asegúrate de que ninguno de los altavoces esté conectado a otro dispositivo antes de emparejarlos.

6. Cargando:

- Conecta el cable USB al puerto de carga del altavoz y enchúfalo a una fuente de alimentación.
- El indicador LED rojo se iluminará, indicando que el altavoz se está cargando.

Connexion de l'Unité

1. Appairage Initial:

- Allumez à la fois le haut-parleur et votre appareil mobile ou autre.
- Recherchez et sélectionnez le nom du modèle du haut-parleur, "QFX BT-3", pour appairer les appareils.
- Après l'appairage initial, les appareils se reconnecteront automatiquement lorsque le haut-parleur sera allumé.

2. Mode Sans Fil:

- Allumez le haut-parleur pour entrer en mode sans fil.
- Appairez votre appareil pour commencer à jouer de la musique.
- Utilisez le bouton "▶||" pour lire ou mettre en pause la musique.
- Appuyez sur le bouton "◀◀/V-" ou "▶▶/V+" pour passer à la piste précédente ou suivante.
- Maintenez le bouton "◀◀/V-" ou "▶▶/V+" enfoncé pour régler le volume.

3. Mode USB/Carte TF:

- Insérez une clé USB ou une carte TF dans la fente correspondante.
- Le haut-parleur commencera automatiquement à lire les fichiers MP3.
- Utilisez le bouton "▶||" pour lire ou mettre en pause la musique.
- Appuyez sur le bouton "◀◀/V-" ou "▶▶/V+" pour changer de piste.
- Maintenez le bouton "◀◀/V-" ou "▶▶/V+" enfoncé pour régler le volume.

4. Mode Radio FM:

- Appuyez sur le bouton "▶||/SCAN" pour rechercher automatiquement les stations FM.
- Le haut-parleur scannerá et sauvegardera toutes les stations FM disponibles, ce qui peut prendre quelques minutes.
- Appuyez sur le bouton "◀◀/V-" ou "▶▶/V+" pour naviguer entre les stations.
- Maintenez le bouton "◀◀/V-" ou "▶▶/V+" enfoncé pour régler le volume.

5. Mode TWS (True Wireless Stereo):

- Pour connecter deux haut-parleurs du même modèle à un appareil, allumez d'abord les deux haut-parleurs.
- Maintenez le bouton "MODE" enfoncé sur l'un des haut-parleurs jusqu'à ce que vous entendiez un son "Ding~", indiquant le succès de l'appairage des deux unités.
- Assurez-vous qu'aucun des haut-parleurs n'est connecté à un autre appareil avant de les appairer.

6. Chargement:

- Connectez le câble USB au port de charge du haut-parleur et branchez-le à une source d'alimentation.
- Le voyant LED rouge s'allumera, indiquant que le haut-parleur est en charge.

SPECIFICATIONS

Input voltage: DC 5V TYPE C
Charging Time: 3-4 hrs

ESPECIFICACIONES

Voltaje de entrada: DC 5V TYPE C
Tiempo de carga: 3-4 horas

SPÉCIFICATIONS

Tension d'entrée: CC 5V TYPE C
Temps de charge: 3-4 heures



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.

RMA Processing

Customer Support Department

2957 E. 46th Street | Vernon, CA 90058



support@qfxusa.com



(800) 864-CLUB (2582) or (323) 864-6900



qfxusa.com



Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2024 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

Where the Party Begins!

We would love to hear about your **BT-3** journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

