PBX-831





INSTRUCTION MANUAL

WARNING/ADVERTENCIA/ATTENTION

DUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO

A ¡ADVERTENCIA! /₺

RA REDUCÍR EL RIESGO DE DESCARGA ELÉCTRICA. NO RETIRE LA CUBIERTA DE ESTE ALTAVOZ. NO HAY REPARABLES POR EL USUARIO ADENTRO. REFIERA TODAS LAS REPARACIONES A UN TÉCNICO

uarios deben exhibir una seguridad adicional cuando aparezca el símbolo de ADVERTENCIA o PRECAUCIÓN

RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CET HAUT-PARLE LUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN

ive d'une sécurité supplémentaire lorsque le symbole AVERTISSEMENT ou ATTEN' ctions et suivre toutes les précautions telles qu'elles sont énoncées.

PBX-831 BATTERY

The PBX-831 is a Lithium battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize battery's lifespan. Once the power adapter is connected to a power source, it will automatically begin charging (4~5 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is charging, the battery indicator light is red. When the battery is fully charge, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least

El PBX-831 es un altavoz PA alimentado por batería de litio. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar la vida útil de la batería. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (4 a 5 horas para cargar completamente la batería de litio). Incluso si la batería está baja, se encenderá cuando esté conectada a una fuente de alimentación. Cuando la energía de la batería se está cargando, la luz indicadora de la batería es roja. Cuando la batería esté completamente cargada, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días.

Le PBX-831 est un haut-parleur de sonorisation alimenté par batterie au lithium. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (4 à 5 heures pour charger complètement la batterie au lithium). Même și la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être réglé sur OFF pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant des périodes prolongées, la batterie perdra progressivement de sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

PBX-831 GUIDE/GUÍA/GUIDE

1.MIC Volume Knob: Adjust from Min to Max

2. ECHO Knob: Adjust from Min to Max 3. Microphone Input

4. Bass Knob: Adjust from Min to Max 5. Treble Knob: Adjust from Min to Max 6 USB Slot 7. TF Card Slot

8. AUX IN 9. Battery Indicator Light 10.Power Switch: ON/OFF.

Master Volume Knob: Adjust from Min to Max 11. Mode Button: Toggle Between USB,TF,FM,BT by short press, Press and hold to turn light on groff

press and hold to select / exit Mic Priority 13. Play/Pause Button (TWS connection) 14. Next Track Button: Select next track by short press,

press and hold to select/exit Record function 15. Power Supply: DC 5V IN

1. Perilla de volumen del micrófono: ajuste de mínimo a mÃximo 1. Bouton de volume MIC : régler du minimum au maximum Perilla FCHO: aiuste de minimo a mÃximo 2. Bouton ECHO: régler du minimum au maximum

3.Entrada de micrófono 1. Perilla de graves: ajuste de minimo a mÃximo 5. Perilla de agudos: ajuste de minimo a mÃximo

12. Previous Track Button: Select previous track by short press,

7 Ranura nara tarieta TE

8. ENTRADA AUXILIAR 9. Luz indicadora de batería

10.Interruptor de encendido: ON/OFF Perilla de volumen principal

11.Botón de modo:cambie entre USB, Tf, FM, BT presionando 11.Bouton Mode: basculez entre USB, TF, FM, BT en appuyant brièvement, appuyez et maintenez pour allumer ou éteindre la lum brevemente, mantenga presionado para encender o apagar la luz 12. Botón de pista anterior: seleccione la pista anterior presionando . Bouton de piste précédente : sélectionnez la piste précédente

revemente, presione y mantenga presionado para seleccionar/salir de Prioridad de micrófono 13 Botón Reproducir/Pausar(conexión TWS) 14.Botón de siguiente pista: seleccione la siguiente pista presionando

brevemente, presione y mantenga presionado para seleccionar/salir L5.Fuente de alimentación: entrada de 5 VCC

PBX-831 DISPLAY / PANTALLA PBX-831 / AFFICHAGE PBX-831

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX /FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio

files from the USB flash drive / TF Card. 2 Track Number: The track number currently playing from the USB/TE will display 3. FM Mode: All FM channels display here. Short press "play/pause" button for auto scan all channels.

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB / TF/BT/AUX / FM. Cuando se inserta una unidad de tarieta de memoria flash USB / TF en la entrada USB / TF, la unidad automáticamente cambiar al modo USB / TF v comenzar la

reproducción de archivos de audio .mp3 del flash USB Card unidad / TF. Frack Número: El número que se está reproduciendo de la pista USB / TF se mostrará Modo 3. Modo FM: Aquí se muestran todos los canales FM. Presione brevemente el botón "reproducir/pausar" para escanear automáticamente

1. Mode d'entrée : l'écran LED affichera les informations du mode d'entrée pour USB/TF/BT/AUX/FM. Lorsqu'une unité est insérée de la carte

mémoire flash USB/TF dans l'entrée USB/TF, l'appareil passe automatiquement en mode USB/TF et commence l'enregistrement. Lisez des fichiers audio .mp3 à partir d'une clé USB / carte TF. 2. Numéro de piste : le numéro de piste USB/TF en cours de lecture s'affiche.

3. Mode FM: Toutes les chaînes FM s'affichent ici. Appuyez brièvement sur le bouton "play/pause" pour balayer automatiquement tous

REMOTE CONTROL 0 0 3 4 5 6 7 8 1. **じ**: ON / Standby mode 2. MODE: Select USB,TF,FM,AUX, BT 3. XX: Mute Audio II: PLAY/PAUSE 5. ★4: Select previous channel Select next channel. 7. **E0**: Select EO mode. 3. VOL-: Reduce the master volume VOL+: Increase the master volume 10. **REP**: Repeat the playing track. 11. **SCAN**: Press to Scan Channel in FM Mode 12. **0-9**: for selecting the certain track for USB flash drive or TF card.

. Bouton de basse : régler du minimum au maximum

0.Interrupteur d'alimentation : ON/OFF Bouton de volume principal

puyant brièvementappuyez et maintenez pour sélectionner/sorti

14. Bouton de piste suivante : sélectionnez la piste suivante en

appuyant brièvement, appuyez etmaintenez pour sélectionner/sortir

5. Bouton Treble : régler du minimum au maximum

13.Bouton Lecture/Pause(connexion TWS)

6.Emplacement USB

7. Emplacement pour carte TE

1. U: ENCENDIDO / Modo de espera 2. MODE: seleccione USB, TF, FM, AUX, BT 3. ☑ : Silenciar el audio

 I: REPRODUCCIÓN/PAUSA 5. ★4: Seleccione el canal anterior

6. ► Seleccione el siguiente canal. 7. **EQ**: selecciona el modo EQ.

8. **VOL-**: Reduce el volumen maestro 9. **VOL+**: aumenta el volumen maestro

10. **REP**: repite la pista de reproducción. 11. SCAN: presione para escanear canales en modo FM 12. **0-9**: para seleccionar ciertos pista para unidad flash USB o tarjeta TF.



QFX.

PBX-831 GUIDE/GUÍA/GUIDE

TÉLÉCOMMANDÉ

CONTROL REMOTO

1. **U**: Marche / Mode veille 2. **MODE**: sélectionnez USB, TF, FM, AUX, BT

3. 🜠 : Couper le son


4. ▶■: LECTURE/PAUSE 5. ★: sélectionner la chaîne précédente

6. ►M: Sélectionnez la chaîne suivante. 7. **E0**: sélectionnez le mode EO.

8. **VOL-**: Réduit le volume principal 9. **VOL+**: Augmente le volume principal

10. **REP**: Répète la piste en cours de lecture. 11. **SCAN**: Appuyez pour balayer la chaîne en mode FM

12. **0-9**: pour sélectionner le certain piste pour lecteur flash USB ou carte TF.

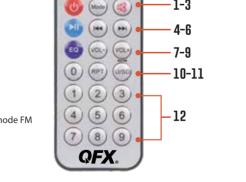

QFX. PBX-831 OPERATION/OPERACIÓN/OPÉRATION



Sync 2 PBX-831 speakers for True Wireless Stereo (TWS)



Turn on both PBX-831 speakers and enable Bluetooth mode on both speakers.

Press the Play/Pause/TWS button for 3 seconds on one speaker only to 3. On your mobile device under the Bluetooth menu, search for QFX PBX-831

4. Open your favorite music app and enjoy True Wireless Stereo. 5. To Exit TWS press and hold the Play/Pause/TWS button.



Sincroniza 2 altavoces PBX-831 para True Wireless Stereo (TWS) 1. Encienda ambos altavoces PBX-831 y habilite el modo Bluetooth en

resione el botón Reproducir/Pausar/TWS durante 3 segundos en un solo altavoz para sincronizar ambos altavoces. 3. On your mobile device under the Bluetooth menu, search for QFX

PRX-831 and connect. 4. Abra su aplicación de música favorita y disfrute de True Wireless Stereo.

5. Para salir de TWS, mantenga presionado el botón Reproducir/Pausar/TWS.



Synchronisez 2 haut-parleurs PBX-831 pour une véritable stéréo sans fil (TWS)

2. Appuvez sur le bouton Lecture/Pause/TWS pendant 3 secondes sur un seul haut-parleur pour synchroniser les deux haut-parleurs.

3. Sur votre appareil mobile, dans le menu Bluetooth, recherchez QFX PBX-831 et connectez-vous.

4. Ouvrez votre application musicale préférée et profitez de la véritable stéréo

5. Pour quitter TWS, maintenez enfoncé le bouton Lecture/Pause/TWS.

BLUETOOTH

BLUETOOTH MODE: use the MODE button to enable Bluetooth on the PBX-831. Open the Bluetooth settings on your mobile device and search for QFX PBX-831. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

MODD BLUETOOTH: use el botón MODE para habilitar Bluetooth en el PBX-831. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX PBX-831. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

MODE BLUETOOTH: utilisez le bouton MODE pour activer Bluetooth sur le PBX-831. Quyrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX PBX-831. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de vote application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.

FM RADIO / RADIO FM

Frequency-Modulated stations operate in a frequency band extending from 87.5 MHz to 108 MHz. Use the MODE button to select the FM mode. In FM mode, press the Play/Pause button to scan available frequencies in the area.

s estaciones de frecuencia modulada operan en una banda de frecuencia que se extiende desde 87.5 MHz hasta 108 MHz. Utilice el botón MODE para seleccionar el modo FM. En el modo FM, presione el botón Reproducir/Pausar para buscar las frecuencias

Les stations à modulation de fréquence fonctionnent dans une bande de fréquences allant de 87,5 MHz à 108 MHz. Utilisez le bouton MODE pour sélectionner le mode FM. En mode FM, appuyez sur le bouton Lecture/Pause pour balayer les fréquences disponibles dans la zone..





LIMITED PRODUCT WARRANTY POLICY

Refore returning your Product for service under this Warranty please (i) read the instruction manual carefully and visit our website at www.ofxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the OFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period. OFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or as applicable, any component thereoft or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty

This warranty covers only normal use. This warranty is not transferable, QFX is not responsible for warranty replacement should the QFX label or logo be

removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by OFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOOD: REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QF AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX

may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must ser the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product. (4) a cashier's check or money order payable to OFX. Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The OEX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.



All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please

contact The QFX Customer Support Department directly for additional shipping fees and return instructions. If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have

support@afxusa.com

gfxusa.com

(800) 864-CLUB (2582) or (323) 864-6900

O Hours of Operation: Monday - Friday, 9am - 5pm PST

purchased will fall under, please contact our Customer Support Department for further instruction. In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below.

Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED AROVE ARE EXCLUSIVE AND IN LIFT OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING BLIT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PLIRPOSE SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID, EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, NCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©

RMA Processing

Customer Support Department

2957 E. 46th Street | Vernon, CA 90058







