

PBX-268



INSTRUCTION MANUAL



## WARNING!

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



## ¡ADVERTENCIA!

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítalo todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



## AVERTISSEMENT !

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRECAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

### BATTERY

The PBX-268 is a rechargeable battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (6-8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

### BATERÍA

El PBX-268 es un altavoz PA con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (6-8 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante periodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarlo con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.

### BATTERIE

Le PBX-268 est un haut-parleur de sonorisation alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (6-8 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser avec un volume de 100 %. L'appareil peut fonctionner et se charger avec un volume inférieur. Le niveau de volume augmentera à mesure que l'appareil est en charge.




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AWHGK-6616


## PBX-268 PANEL

 1. Power Switch: ON/OFF
2. Microphone Input 2
3. Microphone Input 1
4. USB Slot
5. TF Card Slot
6. AUX IN
7. Power Supply: DC 9V
8. Battery Indicator Light
9. -: Decrease the volume
10. +: Increase the volume
11. LIGHT: Press to select the lighting mode, press and hold to turn on/off the light
12. True Wireless Stereo (TWS)
13. M. PRI: ON/OFF
14. Menu: Press to toggle between "u" (master volume), "t" (treble volume), "b" (bass volume), "n" (Mic Volume), "E" (Echo Volume), and then use "+", "-" to adjust from min to max
15. Previous Track Button: Select previous track
16. Play/Pause Button
17. Next Track Button: Select next track
18. Mode Button: Toggle between AUX, USB, TF, FM, BT

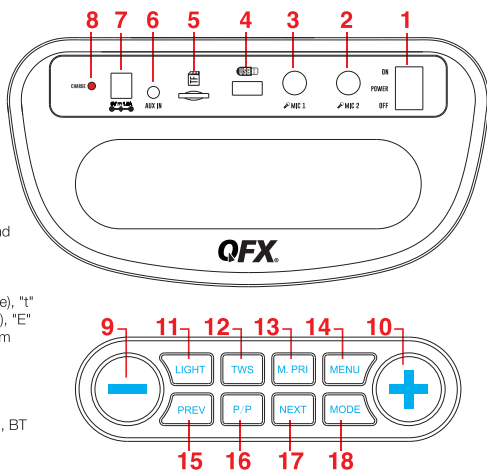

## PBX-268 REMOTE CONTROL

 1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB, TF, FM, AUX, BT
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous channel
6. Next Track: Select next channel.
7. EQ: Select EQ mode.
8. VOL-: Reduce the master volume
9. VOL+: Increase the master volume
10. REP: Repeat the playing track.
11. Press to Scan Channel in FM Mode
- 12-21. KEY Number for selecting the certain track for USB flash drive or TF card.

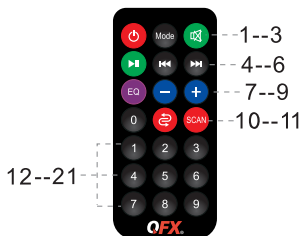

## PBX-268 DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT AUX/FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Press "play/pause" button for auto scan all channels. Turn off the LED lights for better FM radio reception.

## PBX-268 BLUETOOTH

 
Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "QFX PBX-268" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

## PBX-268 TWS CONNECTION

1. TWS connection: TWS Connection is only for two PBX-268 speakers, cannot support more than 2 units.
2. Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode, and the word "BLUE" on the LED screen will flash.
3. On the first use, please press the TWS button on one of the units. The two speakers will then connect to each other
4. To connect the phone: Open the Bluetooth settings on your phone, search for the device named "QFX PBX-268," and select it to connect.
5. Select music on your phone and enjoy TWS playback in stereo with both speakers.
6. To exit TWS mode, press the TWS button again.


## PANEL PBX-268

1. Interruptor de encendido: ON/OFF
2. Entrada de micrófono 2
3. Entrada de micrófono 1
4. Ranura USB
5. Ranura para tarjeta TF
6. AUX IN
7. Fuente de alimentación: DC 9V
8. Luz indicadora de batería
9. -: Disminuir el volumen
10. +: Aumentar el volumen
11. LIGHT: Presione para seleccionar el modo de iluminación, presione y mantenga presionado para encender/apagar la luz
12. True Wireless Stereo (TWS)
13. M. PRI: ON/OFF
14. Menú: Presione para alternar entre "u" (volumen principal), "t" (volumen de agudos), "b" (volumen de graves), "n" (volumen del micrófono), "E" (volumen del eco) y luego use "+" "-" para ajustar de mínimo a máximo
15. Botón de pista anterior: Seleccione la pista anterior
16. Botón de reproducción/pausa
17. Botón de pista siguiente: Seleccione la pista siguiente
18. Botón de modo: Alternar entre AUX, USB, TF, FM, BT

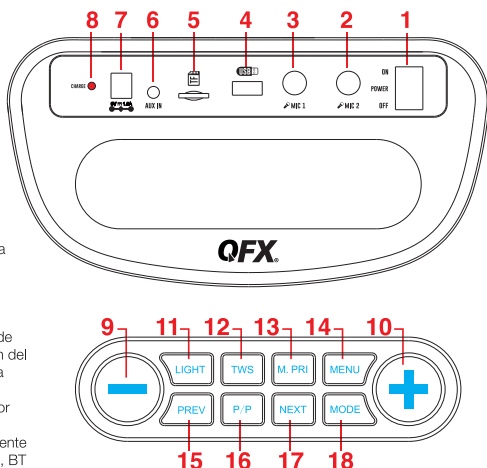

## CONTROL REMOTO PBX-268

 1. STANDBY: hace que la unidad esté en modo de espera.
2. Botón de modo de entrada: alterna entre USB, TF, FM, AUX, BT
3. Silencio: silencia la pista
4. REPRODUCIR/PAUSAR
5. Pista anterior: selecciona el canal anterior
6. Pista siguiente: selecciona el canal siguiente.
7. EQ: selecciona el modo EQ.
8. VOL-: reduce el volumen principal
9. VOL+: aumenta el volumen principal
10. REP: repite la pista que se está reproduciendo.
11. Presiónelo para escanear el canal en modo FM
- 12-21. Número de CLAVE para seleccionar la pista determinada para la unidad flash USB o la tarjeta TF.

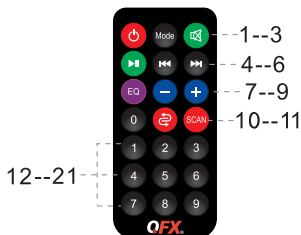

## CONFIGURACIÓN DEL SISTEMA DE VISUALIZACIÓN PBX-268

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB/TF/BT AUX/FM. Cuando se inserta una unidad flash USB/tarjeta TF en la entrada USB/TF, la unidad cambiará automáticamente al modo USB/TF y comenzará a reproducir archivos de audio Mp3 desde la unidad flash USB/tarjeta TF.
2. Número de pista: Se mostrará el número de pista que se está reproduciendo actualmente desde el USB/TF.
3. Modo FM: Aquí se muestran todos los canales FM. Presione el botón "reproducir/pausar" para escanear automáticamente todos los canales. Apague las luces LED para una mejor recepción de radio FM.

## PBX-268 BLUETOOTH

 
Modo Bluetooth: abra el Bluetooth del teléfono. Busque el nombre de Bluetooth de la unidad llamada "QFX PBX-268" para conectarla. Después de una conexión exitosa, puede reproducir la música desde el altavoz. No necesitará volver a conectar el Bluetooth al cambiar de modo.

## CONEXIÓN TWS PBX-268

1. Conexión TWS: La conexión TWS es solo para dos PBX-268 altavoces, no admite más de 2 unidades.
2. Encienda los altavoces, presione el botón MODE para cambiar al modo BLUETOOTH y la palabra "BLUE" en la pantalla LED parpadeará.
3. En el primer uso, presione el botón TWS en una de las unidades. Los dos altavoces se conectarán entre sí.
4. Para conectar el teléfono: Abra la configuración de Bluetooth en su teléfono, busque el dispositivo llamado "QFX PBX-268" y selecciónelo para conectarlo.
5. Seleccione música en su teléfono y disfrute de la reproducción TWS en estéreo con ambos altavoces.
6. Para salir del modo TWS, presione el botón TWS nuevamente.


## PBX-268 PANEL

1. Interrupteur d'alimentation : marche/arrêt
2. Entrée micro 2
3. Entrée micro 1
4. Emplacement USB
5. Emplacement pour carte TF
6. ENTRÉE AUX.
7. Alimentation: cc 9V
8. Voyant de batterie
9. - : Diminuer le volume
10. + : Augmenter le volume
11. LUMIERE : appuyez pour sélectionner le mode d'éclairage, appuyez et maintenez pour allumer/éteindre la lumière
12. Stéréo sans fil True (TWS)
13. M. PRI : ON/OFF
14. Menu : appuyez pour basculer entre "u" (volume principal), "t" (volume des aigus), "b" (volume des graves), "n" (volume du microphone), "E" (volume de l'écho), puis utilisez "+" "-" pour régler du minimum au maximum
15. Bouton Piste précédente : sélectionnez la piste précédente
16. Bouton lecture/pause
17. Bouton Piste suivante : sélectionnez la piste suivante
18. Bouton Mode : basculer entre AUX, USB, TF, FM, BT

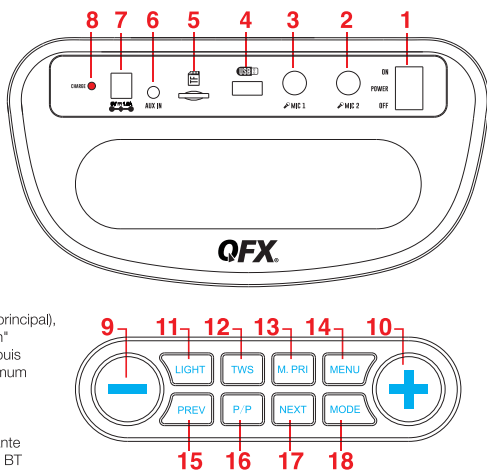

## TÉLÉCOMMANDE PBX-268

 1. STANDBY : permet de mettre l'appareil en mode veille.
2. Bouton de mode d'entrée : bascule entre USB, TF, FM, AUX, BT
3. Mute : coupe le son de la piste
4. PLAY/PAUSE
5. Piste précédente : sélectionne la chaîne précédente
6. Piste suivante : sélectionne la chaîne suivante.
7. EQ : sélectionne le mode EQ.
8. VOL- : réduit le volume principal
9. VOL+ : augmente le volume principal
10. REP : répète la lecture de la piste.
11. Appuyez pour rechercher les chaînes en mode FM
- 12-21. Numéro de touche permettant de sélectionner une piste spécifique pour une clé USB ou une carte TF.

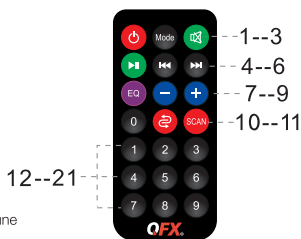

## PARAMÈTRES DU SYSTÈME D'AFFICHAGE DU PBX-268

1. Mode d'entrée : l'écran LED affiche les informations du mode d'entrée pour USB/TF/BT AUX/FM. Lorsqu'une clé USB/carte TF est insérée dans l'entrée USB/TF, l'appareil passe automatiquement en mode USB/TF et commence à lire les fichiers audio Mp3 à partir de la clé USB/carte TF.
2. Numéro de piste : le numéro de piste en cours de lecture à partir de la clé USB/TF s'affiche.
3. Mode FM : tous les canaux FM s'affichent ici. Appuyez sur le bouton « lecture/pause » pour rechercher automatiquement tous les canaux. Éteignez les voyants LED pour une meilleure réception radio FM.

## PBX-268 BLUETOOTH

Mode Bluetooth : ouvrez le Bluetooth du téléphone. Recherchez le nom Bluetooth de l'unité appelée « QFX PBX-268 » pour vous connecter. Après une correspondance réussie, vous pouvez écouter la musique depuis le haut-parleur. Vous n'aurez pas besoin de reconnecter le Bluetooth lors du changement de mode.

## CONNEXION TWS PBX-268

1. Connexion TWS : La connexion TWS est réservée à deux enceintes PBX-268 uniquement, elle ne peut pas prendre en charge plus de 2 unités.
2. Allumez les enceintes, appuyez sur le bouton MODE pour passer en mode BLUETOOTH et le mot « BLUE » sur l'écran LED clignotera.
3. Lors de la première utilisation, veuillez appuyer sur le bouton TWS de l'une des unités. Les deux enceintes se connecteront alors l'une à l'autre.
4. Pour connecter le téléphone : ouvrez les paramètres Bluetooth sur votre téléphone, recherchez l'appareil nommé « QFX PBX-268 » et sélectionnez-le pour vous connecter.
5. Sélectionnez de la musique sur votre téléphone et profitez de la lecture TWS en stéréo avec les deux enceintes.
6. Pour quitter le mode TWS, appuyez à nouveau sur le bouton TWS.



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc., (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com  
 (800) 864-CLUB (2582) or (323) 864-6900  
 qfxusa.com  
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

| PRODUCT CATEGORY                                                  | HANDLING | LABOR  | PARTS  |
|-------------------------------------------------------------------|----------|--------|--------|
| Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers | \$5.00   | 1 Year | 1 Year |
| Personal Stereos                                                  | \$10.00  | 1 Year | 1 Year |
| Portable Radio/Cassette                                           | \$15.00  | 1 Year | 1 Year |
| Large Portable Radio Cassette                                     | \$20.00  | 1 Year | 1 Year |
| Mobile Audio                                                      | \$10.00  | 1 Year | 1 Year |
| Pro Audio SBX Systems                                             | \$75.00  | 1 Year | 1 Year |
| Pro Audio PBX Systems                                             | \$75.00  | 1 Year | 1 Year |
| Televisions                                                       | \$25.00  | 1 Year | 1 Year |
| Telephones                                                        | \$10.00  | 1 Year | 1 Year |

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©

  
1-800-864-2582  
Mon-Fri 9AM - 5PM (PST)

  
support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)



[www.qfxusa.com](http://www.qfxusa.com)

# THANK YOU.

**QFX** Where the Party Begins!

We would love to hear about your PBX-268 Journey!  
Tag us **@QFXUSA** to share your stories.

**FOLLOW US @QFXUSA**

