

PBX-806



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The PBX-806 is a rechargeable battery powered speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (6-8 hours to fully charge the battery). Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El PBX-806 es un altavoz con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (6-8 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarlo con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.

BATTERIE

Le PBX-806 est un haut-parleur alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (6-8 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser avec un volume de 100 %. L'appareil peut fonctionner et se charger avec un volume inférieur. Le niveau de volume augmenterait à mesure que l'appareil est en charge.

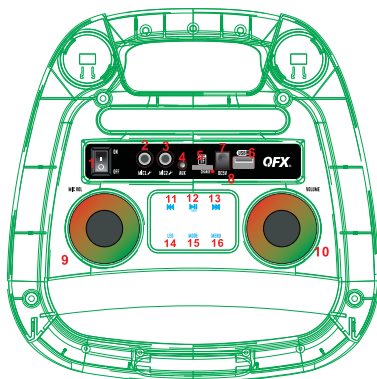


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AWHG-TK8908

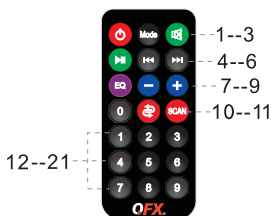
PBX-806 PANEL

1. Power Switch: ON/OFF
2. Microphone Input 1
3. Microphone Input 2
4. AUX IN
5. TF Card Slot
6. USB Slot
7. Power Supply: DC 5V
8. Battery Indicator Light
9. MIC Volume: Adjust the Mic Volume and Echo Volume from Min to Max
10. Volume: Adjust the Master Volume/ Bass Volume/ Treble Volume from Min to Max
11. Previous Track Button: Select previous track
12. Play/Pause Button (TWS connection)
13. Next Track Button: Select next track
14. LED: Press to select the lighting mode, press and hold to turn on/off the light
15. Mode Button: Toggle between AUX, USB, TF, FM, BT
16. Menu: Press to toggle between "U" (master volume), "T" (treble volume), "B" (bass volume), "N" (Mic Volume), "E" (Echo Volume), and then use "Mic Volume" "Volume" knob to adjust from min to max



PBX-806 REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB,TF,FM,AUX,BT
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous channel
6. Next Track: Select next channel.
7. EQ: Select EQ mode.
8. VOL-: Reduce the master volume
9. VOL+: Increase the master volume
10. REP: Repeat the playing track.
11. Press to Scan Channel in FM Mode
- 12-21. KEY Number for selecting the certain track for USB flash drive or TF card.



PBX-806 Wireless Microphone

The Wireless Microphone has a built-in battery.

When not in use, please turn the microphone OFF, preventing battery exhaustion.

When the microphone is not in use for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

1. Power: Press and hold to turn on/off the Mic
2. Voice Changer
3. Battery Indicator Light: When the battery is charging, the battery indicator light will be red. Once the battery is fully charge, the indicator light will turn off.
4. V-: Decrease Mic Volume
5. V+: Increase Mic Volume
6. Power Supply: DC 5V



PBX-806 DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT AUX/FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Press "play/pause" button for auto scan all channels.
4. Turn off the LED lights for better FM radio reception.

PBX-806 BLUETOOTH

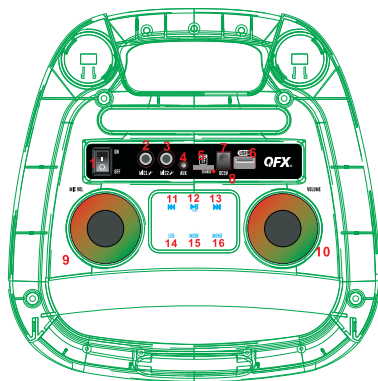
Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "QFX PBX-806" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching

PBX-806 TWS CONNECTION

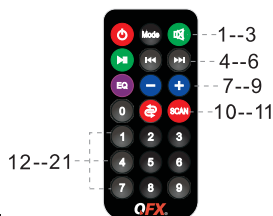
1. TWS connection: TWS Connection is only for two PBX-806 speakers, can not support quantity over 2 PCS.
2. Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode, and the word "BLUE" on the LED screen will flash.
3. At the first time, please press the Play/Pause (TWS) button of one of unit for 3 seconds. Then two speakers will connect together.
4. Connect the phone: Open the phone Bluetooth settings, Search and Connect the main device Bluetooth Name 'QFX PBX-806'
5. Select music from phone and enjoy TWS playing in pairs with two Speakers.
6. Exit TWS: Press and hold the Play/Pause (TWS) button for 3 seconds to exit the TWS function

PANEL PBX-806

1. Interruptor de encendido: ON/OFF
2. Entrada de micrófono 1
3. Entrada de micrófono 2
4. AUX IN
5. Ranura para tarjeta TF
6. Ranura USB
7. Fuente de alimentación: DC 5V
8. Luz indicadora de batería
9. Volumen del micrófono: Ajuste el volumen del micrófono y el volumen del eco de mínimo a máximo
10. Volumen: Ajuste el volumen maestro/volumen de graves/volumen de agudos de mínimo a máximo
11. Botón de pista anterior: Seleccione la pista anterior
12. Botón de reproducción/pausa (conexión TWS)
13. Botón de pista siguiente: Seleccione la pista siguiente
14. LED: Presione para seleccionar el modo de iluminación, presione y mantenga presionado para encender/apagar la luz
15. Botón de modo: Alterna entre AUX, USB, TF, FM, BT
16. Menú: Presione para alternar entre "U" (volumen maestro), "T" (volumen de agudos), "B" (volumen de graves), "N" (volumen del micrófono), "E" (volumen del eco) y luego use la perilla "Volumen" de "Volumen del micrófono" para ajustar de mínimo a máximo


CONTROL REMOTO PBX-806

1. STANDBY: hace que la unidad esté en modo de espera.
2. Botón de modo de entrada: alterna entre USB, TF, FM, AUX, BT
3. Silencio: silencia la pista
4. REPRODUCIR/PAUSAR
5. Pista anterior: selecciona el canal anterior
6. Pista siguiente: selecciona el canal siguiente.
7. EQ: selecciona el modo EQ.
8. VOL-: reduce el volumen principal
9. VOL+: aumenta el volumen principal
10. REP: repite la pista que se está reproduciendo.
11. Presiónelo para escanear el canal en modo FM
- 12-21. Número de CLAVE para seleccionar la pista determinada para la unidad flash USB o la tarjeta TF.


Micrófono inalámbrico PBX-806

El micrófono inalámbrico tiene una batería incorporada.

Cuando no esté en uso, apague el micrófono para evitar que se agote la batería.

Cuando el micrófono no se use durante períodos prolongados, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días.

1. Encendido: mantenga presionado para encender o apagar el micrófono
2. Cambiador de voz
3. Luz indicadora de batería: cuando la batería se está cargando, la luz indicadora de batería estará roja. Una vez que la batería esté completamente cargada, la luz indicadora se apagará.
4. V-: Disminuir el volumen del micrófono
5. V+: Aumentar el volumen del micrófono
6. Fuente de alimentación: CC 5 V


CONFIGURACIÓN DEL SISTEMA DE VISUALIZACIÓN PBX-806

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB/TF/BT AUX/FM. Cuando se inserta una unidad flash USB/tarjeta TF en la entrada USB/TF, la unidad cambiará automáticamente al modo USB/TF y comenzará a reproducir archivos de audio Mp3 desde la unidad flash USB/tarjeta TF.
2. Número de pista: Se mostrará el número de pista que se está reproduciendo actualmente desde el USB/TF.
3. Modo FM: Aquí se muestran todos los canales FM. Presione el botón "reproducir/pausar" para escanear automáticamente todos los canales.
4. Apague las luces LED para una mejor recepción de radio FM.

PBX-806 BLUETOOTH

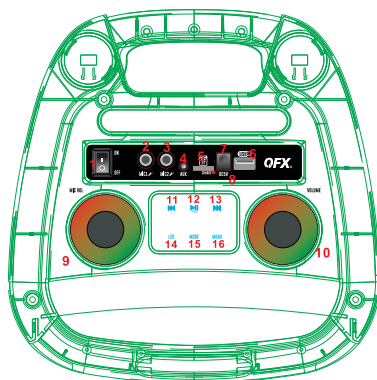
Modo Bluetooth: abra el Bluetooth del teléfono. Busque el nombre de Bluetooth de la unidad llamada "QFX PBX-806" para conectarla. Después de una conexión exitosa, puede reproducir la música desde el altavoz. No necesitará volver a conectar el Bluetooth al cambiar de dispositivo.

CONEXIÓN PBX-806 TWS

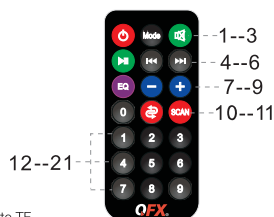
1. Conexión TWS: la conexión TWS es solo para dos PBX-806 altavoces, no admite una cantidad superior a 2 unidades.
2. Encienda los altavoces, presione el botón MODE para cambiar al modo BLUETOOTH y la palabra "BLUE" en la pantalla LED parpadeará.
3. La primera vez, presione el botón Reproducir/Pausa (TWS) de una de las unidades durante 3 segundos. Luego, los dos altavoces se conectarán entre sí.
4. Conectar el teléfono: abra la configuración de Bluetooth del teléfono, busque y conecte el nombre de Bluetooth del dispositivo principal 'QFX PBX-806'.
5. Selección música del teléfono y disfrute de la reproducción TWS en pares con dos altavoces.
6. Salir de TWS: Mantenga pulsado el botón Reproducir/Pausa (TWS) durante 3 segundos para salir de la función TWS

PANNEAU PBX-806

1. Interrupteur d'alimentation : ON/OFF
2. Entrée microphone 1
3. Entrée microphone 2
4. AUX IN
5. Emplacement pour carte TF
6. Emplacement USB
7. Alimentation : DC 5V
8. Voyant de batterie
9. Volume du micro : Réglez le volume du micro et le volume de l'écho du minimum au maximum
10. Volume : Réglez le volume principal/volume des basses/volume des aigus du minimum au maximum
11. Bouton de piste précédente : Sélectionnez la piste précédente
12. Bouton Lecture/Pause (connexion TWS)
13. Bouton de piste suivante : Sélectionnez la piste suivante
14. LED : Appuyez pour sélectionner le mode d'éclairage, appuyez et maintenez pour allumer/éteindre la lumière
15. Bouton Mode : Basculez entre AUX, USB, TF, FM, BT
16. Menu : Appuyez pour basculer entre « U » (volume principal), « T » (volume des aigus), « B » (volume des basses), « N » (volume du micro), « E » (volume de l'écho), puis utilisez le bouton « Volume du micro » « Volume » pour régler du minimum au maximum


TÉLÉCOMMANDE PBX-806

1. STANDBY : permet de mettre l'appareil en mode veille.
2. Bouton de mode d'entrée : bascule entre USB, TF, FM, AUX, BT
3. Mute : coupe le son de la piste
4. PLAY/PAUSE
5. Piste précédente : sélectionne la chaîne précédente
6. Piste suivante : sélectionne la chaîne suivante.
7. EQ : sélectionne le mode EQ.
8. VOL- : réduit le volume principal
9. VOL+ : augmente le volume principal
10. REP : répète la lecture de la piste.
11. Appuyez pour rechercher les chaînes en mode FM
- 12-21. Numéro de touche permettant de sélectionner une piste spécifique pour une clé USB ou une carte TF.


Microphone sans fil PBX-806

Le microphone sans fil est doté d'une batterie intégrée. Lorsque vous ne l'utilisez pas, veuillez éteindre le microphone pour éviter que la batterie ne s'épuise. Lorsque le microphone n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

1. Alimentation : appuyez et maintenez pour allumer/éteindre le micro
2. Changeur de voix
3. Voyant lumineux de la batterie : lorsque la batterie est en charge, le voyant lumineux de la batterie est rouge. Une fois la batterie complètement chargée, le voyant lumineux s'éteint.
4. V- : diminuer le volume du micro
5. V+ : augmenter le volume du micro
6. Alimentation : DC 5V


PARAMÈTRES DU SYSTÈME D'AFFICHAGE DU PBX-806

1. Mode d'entrée : l'écran d'affichage LED affiche les informations du mode d'entrée pour USB/TF/BT AUX/FM. Lorsqu'une clé USB/carte TF est insérée dans l'entrée USB/TF, l'appareil passe automatiquement en mode USB/TF et commence à lire les fichiers audio Mp3 à partir de la clé USB/carte TF.
2. Numéro de piste : le numéro de piste en cours de lecture à partir de la clé USB/TF s'affiche.
3. Mode FM : tous les canaux FM s'affichent ici. Appuyez le bouton « lecture/pause » pour rechercher automatiquement tous les canaux.
4. Éteignez les voyants LED pour une meilleure réception radio FM.

PBX-806 BLUETOOTH

Mode Bluetooth : ouvrez le Bluetooth du téléphone. Recherchez le nom Bluetooth de l'unité appelée « QFX PBX-806 » pour vous connecter. Après une correspondance réussie, vous pouvez écouter la musique depuis le haut-parleur. Vous n'aurez pas besoin de reconnecter le Bluetooth lors du changement

CONNEXION TWS PBX-806

1. Connexion TWS : la connexion TWS est réservée à deux PBX-806 haut-parleurs uniquement, elle ne peut pas prendre en charge plus de 2 pièces.
2. Allumez les haut-parleurs, appuyez sur le bouton MODE pour passer en mode BLUETOOTH et le mot « BLEU » sur l'écran LED clignotera.
3. La première fois, appuyez sur le bouton Lecture/Pause (TWS) de l'une des unités pendant 3 secondes. Ensuite, deux haut-parleurs se connecteront ensemble.
4. Connecter le téléphone : ouvrez les paramètres Bluetooth du téléphone, recherchez et connectez l'appareil principal Bluetooth nommé « QFX PBX-806 »
5. Sélectionnez la musique du téléphone et profitez de la lecture TWS par paires avec deux haut-parleurs.
6. Quitter TWS : Appuyez et maintenez sur le bouton Lecture/Pause (TWS) pendant 3 secondes pour quitter la fonction TWS



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PBX-806 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

