

R-334BT



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The R-334BT is a rechargeable battery powered speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El R-334BT es un altavoz que funciona con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (8 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecte a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante periodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarlo con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.


BATTERIE

Le R-334BT est un haut-parleur alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (8 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser avec un volume de 100 %. L'appareil peut fonctionner et se charger avec un volume inférieur. Le niveau de volume augmenterait à mesure que l'appareil est en charge.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

 FCC ID: 2A0MX-81215

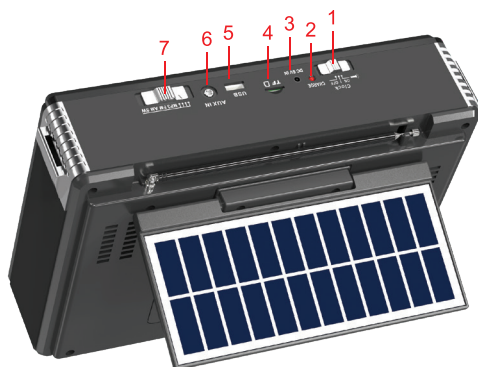

Function Keys Illustration

- | | |
|-----------------------|---------------------------|
| 1. TORCH(ON/OFF) | 12. MP3 MONITOR |
| 2. CHARGE LED | 13. BATTERY COMPARTMENT |
| 3. DC 6V IN SOCKET | 14. MP3 MODE BUTTON |
| 4. CARD SLOT | 15. MP3 EQ BUTTON |
| 5. USB JACK | 16. MP3 REPEAT PLAYBACK |
| 6. AUX In | 17. MP3 PLAY/PAUSE BUTTON |
| 7. BAND SWITCH | 18. MP3 PREV BUTTON |
| 8. TELESCOPIC ANTENNA | 19. MP3 NEXT BUTTON |
| 9. TORCH | 20. TUNING KNOB |
| 10. AC IN JACK | 21. TIME SETTING |
| 11. VOLUME CONTROL | |

Operations Specifications for Radio and MP3 Player:

Powering On and Power Supply:

Insert the battery correctly into the battery compartment or use an external power supply.

Radio Operation:

Turn the volume knob clockwise to turn on the radio. A "DI" sound indicates it's on, with volume increasing. Turn counterclockwise to lower volume. Turn further to turn off upon hearing "DI."

Radio Tuning:

Adjust the band selector and use the tuning knob for AM/FM/SW programs. For FM/SW, extend the antenna for clearer reception. For AM, adjust radio position for best signal.

MP3 Player:

Insert USB/card into the slot, select USB/card mode, press PLAY/PAUSE to control playback, PREV/NEXT for song navigation, long press for rewind/fast forward. Use MODE for different device music files, REPEAT for repeat play, and EQ for music tone.

 
Wireless Link:

Use WIRELESS LINK with mobile phones or computers, open WIRELESS LINK, pair, and select media for playback.

Battery Charging:

Built-in rechargeable battery. Low or no sound indicates low power; use an external charger. Full charge takes 3-4 hours; solar panel charging takes 7-9 hours.

These operations specifications guide users through using the device effectively, from basic power and volume control to advanced features like radio tuning, MP3 playback, wireless connectivity, and battery management.

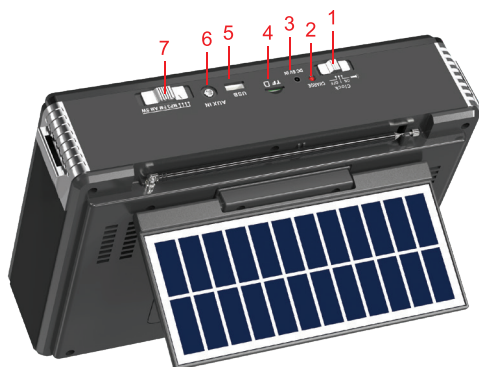

Function Keys Illustration

1. TORCH(ON/OFF)
2. CHARGE LED
3. DC 6V IN SOCKET
4. CARD SLOT
5. USB JACK
6. Entrada auxiliar
7. BAND SWITCH
8. TELESCOPIC ANTENNA
9. TORCH
10. AC IN JACK
11. VOLUME CONTROL

12. MP3 MONITOR
13. BATTERY COMPARTMENT
14. MP3 MODE BUTTON
15. MP3 EQ BUTTON
16. MP3 REPEAT PLAYBACK
17. MP3 PLAY/PAUSE BUTTON
18. MP3 PREV BUTTON
19. MP3 NEXT BUTTON
20. TUNING KNOB
21. TIME SETTING

Especificaciones de operaciones para radio y reproductor de MP3:

Encendido y Suministro de Energía:

Inserte la batería correctamente en el compartimento de la batería o utilice una fuente de alimentación externa.

Operación de la Radio:

Gire el botón de volumen en sentido horario para encender la radio. Un sonido "DI" indica que está encendida, con el volumen aumentando. Gire en sentido contrario a las agujas del reloj para disminuir el volumen. Siga girando para apagarla al oír "DI".

Sintonización de la Radio:

Ajuste el selector de banda y utilice el botón de sintonización para programas de AM/FM/Onda Corta (SW). Para FM/Onda Corta, extienda la antena para una recepción más clara. Para AM, ajuste la posición de la radio para obtener la mejor señal.

Reproductor MP3:

Inserte el USB/tarjeta en la ranura, seleccione el modo USB/tarjeta, presione PLAY/PAUSE para controlar la reproducción, PREV/NEXT para la navegación entre canciones, mantenga presionado para retroceder/avanzar rápidamente. Use el modo MODE para diferentes archivos de música del dispositivo, REPEAT para reproducción repetida y EQ para el tono de la música.

 
Enlace Inalámbrico:

Utilice el ENLACE INALÁMBRICO con teléfonos móviles o computadoras, abra el ENLACE INALÁMBRICO, vincule y seleccione medios para la reproducción.

Carga de la Batería:

Batería recargable integrada. Un sonido bajo o ausente indica baja energía; utilice un cargador externo. La carga completa tarda de 3 a 4 horas; la carga con panel solar tarda de 7 a 9 horas.

Estas especificaciones de operación guían a los usuarios en el uso efectivo del dispositivo, desde el control básico de encendido y volumen hasta características avanzadas como la sintonización de radio, la reproducción de MP3, la conectividad inalámbrica y la gestión de la batería.

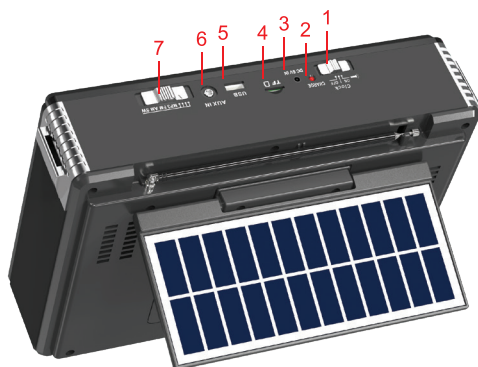

Function Keys Illustration

1. TORCH(ON/OFF)
2. CHARGE LED
3. DC 6V IN SOCKET
4. CARD SLOT
5. USB JACK
6. Entrée auxiliaire
7. BAND SWITCH
8. TELESCOPIIC ANTENNA
9. TORCH
10. AC IN JACK
11. VOLUME CONTROL

12. MP3 MONITOR
13. BATTERY COMPARTMENT
14. MP3 MODE BUTTON
15. MP3 EQ BUTTON
16. MP3 REPEAT PLAYBACK
17. MP3 PLAY/PAUSE BUTTON
18. MP3 PREV BUTTON
19. MP3 NEXT BUTTON
20. TUNING KNOB
21. TIME SETTING

Spécifications de fonctionnement pour la radio et le lecteur MP3 :

Mise en Marche et Alimentation :

Insérez correctement la batterie dans le compartiment à batterie ou utilisez une alimentation externe.

Fonctionnement de la Radio :

Tournez le bouton de volume dans le sens des aiguilles d'une montre pour allumer la radio. Un son "DI" indique qu'elle est allumée, avec une augmentation du volume. Tournez dans le sens inverse des aiguilles d'une montre pour réduire le volume. Continuez à tourner pour l'éteindre lorsque vous entendez "DI".

Réglage de la Radio :

Réglez le sélecteur de bande et utilisez le bouton de réglage pour les programmes AM/FM/Onde courte (SW). Pour FM/Onde courte, déployez l'antenne pour une réception plus claire. Pour AM, ajustez la position de la radio pour obtenir le meilleur signal.

Lecteur MP3 :

Insérez le USB/carte dans la fente, sélectionnez le mode USB/carte, appuyez sur PLAY/PAUSE pour contrôler la lecture, PREV/NEXT pour la navigation des chansons, maintenez enfoncé pour revenir en arrière/avancer rapidement. Utilisez le mode MODE pour différents fichiers musicaux de l'appareil, REPEAT pour la lecture répétée et EQ pour le ton musical.

Liaison sans Fil :

Utilisez la LIAISON SANS FIL avec des téléphones mobiles ou des ordinateurs, ouvrez la LIAISON SANS FIL, apparez et sélectionnez des médias pour la lecture.

Recharge de la Batterie :

Batterie rechargeable intégrée. Un son faible ou inexistant indique une faible puissance ; utilisez un chargeur externe. La charge complète prend de 3 à 4 heures ; la charge par panneau solaire prend de 7 à 9 heures.

Ces spécifications opérationnelles guident les utilisateurs dans l'utilisation efficace du dispositif, depuis le contrôle basique de l'alimentation et du volume jusqu'aux fonctionnalités avancées telles que le réglage de la radio, la lecture MP3, la connectivité sans fil et la gestion de la batterie.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

support@qfxusa.com
(800) 864-CLUB (2582) or (323) 864-6900
qfxusa.com
Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your R-334BT Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

