

R-56



WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

FUNCTIONS

1. TELESCOPIC ANTENNA
2. FAN SWITCH
(WIND SPEED SELECTION)
3. MP3 PLAY/PAUSE BUTTON
4. MP3 PREV BUTTON
5. MP3 NEXT BUTTON
6. TUNING KNOB
7. VOLUME CONTROL
8. BATTERY COMPARTMENT
9. BAND SWITCH
10. CARD SLOT
11. USB JACK
12. DC 5V IN JACK
13. INDICATOR LIGHTS

FUNCIONES

1. ANTENA TELESCÓPICA
2. INTERRUPTOR DEL VENTILADOR
(SELECCIÓN DE LA VELOCIDAD DEL VIENTO)
3. BOTÓN DE REPRODUCCIÓN/PAUSA DE MP3
4. BOTÓN MP3 PREV
5. BOTÓN MP3 NEXT
6. BOTÓN DE SINTONIZACIÓN
7. CONTROL DE VOLUMEN
8. COMPARTIMENTO DE LA PILA
9. INTERRUPTOR DE BANDA
10. RANURA PARA TARJETA
11. ENCHUFE USB
12. DC 5V IN JACK
13. LUCES INDICADORAS

LES FONCTIONS

1. ANTENNE TÉLESCOPIQUE
2. COMMUTATEUR DU VENTILATEUR
(SÉLECTION DE LA VITESSE DU VENT)
3. BOUTON LECTURE/PAUSE MP3
4. BOUTON MP3 PREV
5. BOUTON MP3 SUIVANT
6. BOUTON DE SYNTONISATION
7. COMMANDE DE VOLUME
8. COMPARTIMENT DES PILES
9. COMMUTATEUR DE BANDE
10. LOGEMENT DE LA CARTE
11. PRISE USB
12. PRISE D'ENTRÉE DC 5V
13. VOYANTS LUMINEUX



RADIO FUNCTION

1. Insert the battery into the battery compartment in the correct direction or use an external input power supply.
2. Turn the volume knob clockwise to turn on the radio. When you hear the "DI" sound, you can turn on the radio and the volume will increase. Turn the volume knob counterclockwise to reduce the volume, turn it all the way to the end, and turn off the radio after hearing the sound of "DI".
3. Adjust the band selector and turn the tuning knob to receive different programmes from AM/FM/SW. When listening to FM/shortwave, pull out the antenna and change the length to hear more clearly. When listening to an AM programme, vary the position of the radio until you get the best signal.

FUNCIÓN RADIO

1. Inserte la batería en el compartimento de la batería en la dirección correcta o utilice una fuente de alimentación de entrada externa.
2. Gire el botón de volumen en el sentido de las agujas del reloj para encender la radio. Cuando oiga el sonido «DI», puede encender la radio y el volumen aumentará. Gire el mando del volumen en el sentido contrario a las agujas del reloj para reducir el volumen, gírelo hasta el final y apague la radio después de escuchar el sonido «DI».
3. Ajuste el selector de banda y gire el mando de sintonización para recibir diferentes programas de AM/FM/SW. Cuando escuche FM/onda corta, saque la antena y cambie la longitud para oír con más claridad. Cuando escuche un programa de AM, varíe la posición de la radio hasta obtener la mejor señal.

FONCTION RADIO

1. Insérez la batterie dans son compartiment dans le bon sens ou utilisez une source d'alimentation externe.
2. Tournez le bouton de volume dans le sens des aiguilles d'une montre pour allumer la radio. Lorsque vous entendez le son «DI», vous pouvez allumer la radio et le volume augmentera. Tournez le bouton de volume dans le sens inverse des aiguilles d'une montre pour réduire le volume, tournez-le à fond et éteignez la radio après avoir entendu le son «DI».
3. Réglez le sélecteur de bande et tournez le bouton de réglage pour recevoir différents programmes AM/FM/SW. Lorsque vous écoutez la FM/les ondes courtes, sortez l'antenne et modifiez sa longueur pour entendre plus clairement. Lorsque vous écoutez un programme AM, modifiez la position de la radio jusqu'à ce que vous obteniez le meilleur signal.

BLUETOOTH FUNCTION

Use a WIRELESS LINK device such as a mobile phone or a computer, turn on the WIRELESS LINK and pair it, and choose to play media songs.

FUNCIÓN BLUETOOTH

Utiliza un dispositivo WIRELESS LINK, como un teléfono móvil o un ordenador, enciende el WIRELESS LINK y emparejalo, y elige reproducir canciones multimedia.

FONCTION BLUETOOTH

Utilisez un appareil WIRELESS LINK tel qu'un téléphone portable ou un ordinateur, allumez le WIRELESS LINK et associez-le, puis choisissez de lire des chansons multimédias.

USB/TF CARD PLAYBACK FUNCTION

Insert the U disk/card into the U disk/card slot, select the U disk/card to play music, press PLAY/PAUSE to choose to play or pause, press PREV or NEXT to play the previous or next song, long press PREV or NEXT Play back/forward function.

FUNCIÓN DE REPRODUCCIÓN DE TARJETAS USB/TF

Inserte el disco/tarjeta U en la ranura para disco/tarjeta U, seleccione el disco/tarjeta U para reproducir música, pulse PLAY/PAUSE para elegir reproducir o pausar, pulse PREV o NEXT para reproducir la canción anterior o siguiente, pulse prolongadamente PREV o NEXT Función de reproducción hacia atrás/adelante.

FONCTION DE LECTURE DES CARTES USB/TF

Insérez la carte/disque U dans la fente de la carte/disque U, sélectionnez la carte/disque U pour lire de la musique, appuyez sur PLAY/PAUSE pour choisir la lecture ou la pause, appuyez sur PREV ou NEXT pour lire le morceau précédent ou suivant, appuyez longuement sur PREV ou NEXT pour lire la fonction de retour/avance.

FAN FUNCTION

Press the (FAN SWITCH) button to select the wind speed or turn off the fan.

FUNCIÓN VENTILADOR

Pulse el botón (FAN SWITCH) para seleccionar la velocidad del viento o apagar el ventilador.

FONCTION DU VENTILATEUR

Appuyez sur le bouton (FAN SWITCH) pour sélectionner la vitesse du vent ou éteindre le ventilateur.

BATTERY

Built-in rechargeable battery. When the sound of the machine is small or does not work, it means that the lithium battery is undervoltage or dead. Plug in the external charger and charge. The battery can be fully charged in 3-4 hours.

BATERÍA

Batería recargable incorporada. Cuando el sonido de la máquina es pequeño o no funciona, significa que la batería de litio está baja de tensión o agotada. Enchufe el cargador externo y cargue. La batería puede cargarse completamente en 3-4 horas.

BATTERIE

Batterie rechargeable intégrée. Lorsque le son de l'appareil est faible ou qu'il ne fonctionne pas, cela signifie que la batterie au lithium est sous-tension ou déchargée. Branchez le chargeur externe et rechargez. La batterie peut être entièrement rechargée en 3 à 4 heures.

NOTE

1. Please take out batteries if not using the unit in a long time.
2. Please don't hit or drop strongly, don't stay it in the condition of damp, corrosive, high temperature and under strong light.
3. To clean surface of it, please use soft cloth light with a mild detergent solution. Do not use any strong solvents such as alcohol, benzene or corrosive.

NOTA

1. Por favor, saque las pilas si no va a utilizar la unidad en mucho tiempo.
2. Por favor, no lo golpee ni lo deje caer con fuerza, no lo deje en condiciones de humedad, corrosión, altas temperaturas y bajo luz intensa.
3. Para limpiar la superficie, utilice un paño suave con una solución de detergente suave. No utilice disolventes fuertes como alcohol, bencina o corrosivos.

NOTE

1. Retirez les piles si vous n'utilisez pas l'appareil pendant une longue période.
 2. Ne pas cogner ou faire tomber l'appareil, ne pas le laisser dans des conditions humides, corrosives, à haute température ou sous une forte lumière.
 3. Pour nettoyer la surface de l'appareil, utilisez un chiffon doux imbibé d'une solution détergente douce. Ne pas utiliser de solvants puissants tels que l'alcool, la benzine ou des produits corrosifs.
-

This product is not waterproof and should not be exposed to rain during outdoor use.

Este producto no es impermeable y no debe exponerse a la lluvia durante su uso en exteriores.

Ce produit n'est pas étanche et ne doit pas être exposé à la pluie lors d'une utilisation extérieure.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 864-6900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouuct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)

www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your **R-56** journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

