

HP-E110

QFX[®]


WHERE THE PARTY BEGINS[™]



INSTRUCTION MANUAL

**SWEATPROOF + BLUETOOTH V5.3 + TWS EARBUDS
SMART WIRELESS CHARGING CASE with LED Battery Display**

Thank you for purchasing the QFX HP-E110 TWS EARBUDS Smart Wireless Charging Case with LED Battery Display. Please read these instructions for proper use and care of this product.

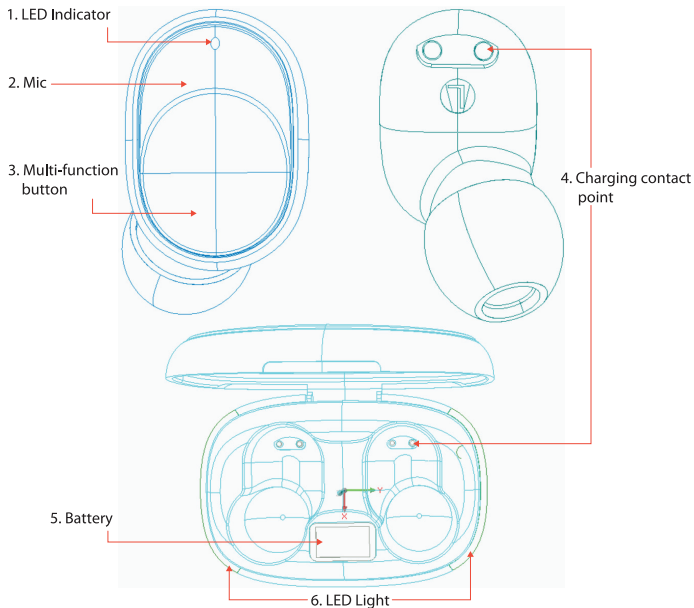**SPECIFICATIONS**

Bluetooth version: 5.3
Support: HFP/HSP/ A2DP/AVRCP
Bluetooth working range:
10 meters (without barrier)
Play time: 2-3 hours
Charge time: 1-2 hours
Charging port: Type-C

ESPECIFICACIONES

Versión de Bluetooth: 5.3
Soporte: HFP/HSP/A2DP/AVRCP
Rango de trabajo de Bluetooth:
10 metros (sin barreras)
Tiempo de reproducción: 2-3 horas
Tiempo de carga: 1-2 horas
Puerto de carga: Tipo-C

SPÉCIFICATIONS

Version Bluetooth : 5.3
Support: HFP/HSP/A2DP/AVRCP
Portée de travail Bluetooth:
10 mètres (sans obstacle)
Temps de lecture: 2-3 heures
Temps de charge: 1-2 heures
Port de charge: Type-C

CHARGING THE EARBUDS

When placing the earbuds in the charging case, the earbud LEDs will turn solid red while charging and will turn off when they are fully charged.

CARGANDO LOS AURICULARES

Cuando coloque los auriculares en la funda de carga, los LEDs de los auriculares se iluminarán de rojo fijo durante la carga y se apagarán cuando estén completamente cargados.

CHARGE DES ÉCOUTEURS

Lorsque vous placez les écouteurs dans l'étui de charge, les LEDs des écouteurs s'allumeront en rouge fixe pendant la charge et s'éteindront lorsqu'ils seront entièrement chargés.



RECHARGING THE CHARGING CASE


To recharge the charging case, connect the USB-C cable to a computer USB port or use an USB-to-AC power adapter (not included) that provides a minimum of 5VDC, 500mA minimum power. When charging the case, its digital display will begin to flash, indicating that the case is recharging. It will continue charging up to a maximum of 100% fully charged level.

RECARGANDO EL ESTUCHE DE CARGA

Para recargar la funda de carga, conecta el cable USB-C a un puerto USB de la computadora o utiliza un adaptador de corriente USB a CA (no incluido) que proporcione un mínimo de 5VCC, 500 mA de potencia como mínimo. Cuando la funda se está cargando, su pantalla digital comenzará a parpadear, indicando que la funda se está recargando. Continuará cargándose hasta alcanzar el nivel máximo del 100%.

RECHARGE DU BOÎTIER DE CHARGE

Pour recharger l'étui de charge, connectez le câble USB-C à un port USB d'un ordinateur ou utilisez un adaptateur d'alimentation USB vers CA (non inclus) fournissant au moins 5VCC, une puissance minimale de 500 mA. Lors de la charge de l'étui, son affichage numérique commencera à clignoter, indiquant que l'étui est en cours de recharge. Il continuera à se charger jusqu'à atteindre un niveau de charge complet de 100%.

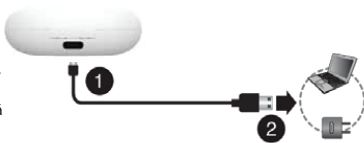

RECHARGING THE CHARGING CASE USING WIRELESS CHARGER

1. Open the Charging Case.
2. Insert the "HP-E110" into the slots in the case, making sure that the left Bud is in the left slot and the right Bud is in the right slot.
3. Close the Charging Case.
4. Place the Charging Case on top of a Wireless Charger

RECARGANDO LA FUNDA DE CARGA USANDO UN CARGADOR INALÁMBRICO

1. Abre la funda de carga.
2. Inserta el "HP-E110" en las ranuras de la funda, asegurándote de que el auricular izquierdo esté en la ranura izquierda y el auricular derecho esté en la ranura derecha.
3. Cierra la funda de carga.
4. Coloca la funda de carga encima de un cargador inalámbrico.

RECHARGE DU BOÎTIER DE CHARGE À L'AIDE D'UN CHARGEUR SANS FIL

1. Ouvrez le boîtier de charge.
2. Insérez le "HP-E110" dans les fentes du boîtier, en vous assurant que l'écouteur gauche est dans la fente gauche et l'écouteur droit est dans la fente droite.
3. Fermez le boîtier de charge.
4. Placez le boîtier de charge sur un chargeur sans fil.





HP-E110 INSTRUCTIONS

Instructions

Earbud Quick Guide

Power On: Remove from case or hold either button for 3 seconds.
Power Off: Place in case or hold either button for 3 seconds.

Playback & Calls:

Play/Pause: Tap either button once.
Next Track: Hold right button for 1 second.
Previous Track: Hold left button for 1 second.
Answer/End Call: Tap either button once.
Reject Call: Hold either button for 2 seconds.
Call Back: Triple-tap left button during music play.

Volume Down: Double-tap right button.
Volume Up: Double-tap left button.

Voice Assistant: Triple-tap right button.

Pairing:

Remove both earbuds from case.
Look for 'HP-E110' in Bluetooth settings.
Both can pair separately if needed.



Remove the insulation film prior to usage.
Retire la pellicula de aislamiento antes de usar.
Retirez le film d'isolation avant utilisation.

Guía Rápida de los Auriculares

Encender: Saca del estuche o mantén presionado cualquier botón durante 3 segundos.
Apagar: Coloca en el estuche o mantén presionado cualquier botón durante 3 segundos.

Reproducción y Llamadas:

Reproducir/Pausar: Toca cualquier botón una vez.
Siguiente Pista: Mantén presionado el botón derecho durante 1 segundo.
Pista Anterior: Mantén presionado el botón izquierdo durante 1 segundo.
Responder/Finalizar Llamada: Toca cualquier botón una vez.
Rechazar Llamada: Mantén presionado cualquier botón durante 2 segundos.
Devolver Llamada: Toca tres veces el botón izquierdo durante la reproducción de música.

Bajar Volumen: Toca dos veces el botón derecho.
Subir Volumen: Toca dos veces el botón izquierdo.

Asistente de Voz: Toca tres veces el botón derecho.

Emparejamiento:

Saca ambos auriculares del estuche.
Busca 'HP-E110' en ajustes de Bluetooth.
Ambos se pueden emparejar por separado si es necesario.

Guide Rapide des Écouteurs

Allumer : Retirer de l'étui ou maintenir n'importe quel bouton enfoncé pendant 3 secondes.
Eteindre : Placer dans l'étui ou maintenir n'importe quel bouton enfoncé pendant 3 secondes.

Lecture & Appels :

Lecture/Pause : Appuyer une fois sur n'importe quel bouton.
Piste suivante : Maintenir le bouton droit enfoncé pendant 1 seconde.
Piste précédente : Maintenir le bouton gauche enfoncé pendant 1 seconde.
Répondre/Terminer un appel : Appuyer une fois sur n'importe quel bouton.
Rejeter un appel : Maintenir n'importe quel bouton enfoncé pendant 2 secondes.
Rappeler : Appuyer trois fois sur le bouton gauche pendant la lecture de musique.

Diminuer le volume : Appuyer deux fois sur le bouton droit.
Augmenter le volume : Appuyer deux fois sur le bouton gauche.

Assistant vocal : Appuyer trois fois sur le bouton droit.

Appairage :

Retirer les deux écouteurs de l'étui.
Chercher 'HP-E110' dans les paramètres Bluetooth.
Chacun peut être appairé séparément si nécessaire.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA® , Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your HP-E110 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

