



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

Battery Charging:

1. Power off the unit and connect the provided micro USB charging cable into the charging slot of the speaker. Connect the other end to the PC or other chargers with 5V output. The red light means that the speaker is now charging.
2. Charge time should be 3-5 hours. When the speaker is fully charged, the red indicator light will turn off.
3. In order to prolong the life of battery, please do not charge for more than 8 hours.

Carga de la batería:

1. Apague la unidad y conecte el cable micro USB incluido a la ranura de carga del altavoz. Conecte el otro extremo a la PC o a otro cargador con salida de 5 V. La luz roja indica que el altavoz se está cargando.
2. El tiempo de carga es de 3 a 5 horas. Cuando el altavoz esté completamente cargado, la luz roja se apagará.
3. Para prolongar la vida útil de la batería, no la cargue durante más de 8 horas.

Chargement de la batterie :

1. Éteignez l'appareil et branchez le câble de chargement micro-USB fourni sur la prise de charge de l'enceinte. Connectez l'autre extrémité à un PC ou à un autre chargeur 5 V. Le voyant rouge indique que l'enceinte est en charge.
2. Le temps de charge est de 3 à 5 heures. Une fois l'enceinte complètement chargée, le voyant rouge s'éteint.
3. Pour prolonger la durée de vie de la batterie, ne la chargez pas plus de 8 heures.

Model: BT-10
Rechargeable Bluetooth Speaker
DC Input: 5V/1A MIN.
FCC ID: 2AOMX-BT579
MADE IN CHINA




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AOMX-BT579

Functions

 1. Charging jack
2. ON/OFF button
3. USB flash drive
4. Aux-in jack
5. Backwards/ Volume Down
6. Mode (Bluetooth, USB Port, FM and AUX input)
7. Forward/Volume up
8. Play/Pause

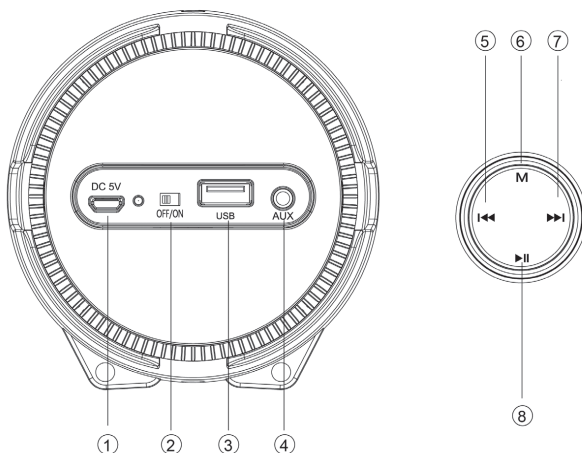

Bluetooth

1. Turn the power button to "ON" and the LED light will turn blue and flash quickly.
2. Activate Bluetooth on your mobile phone and search for device name "QFX BT-10" and then connect. The blue LED light will turn on once connected.
3. Play your music from your mobile phone and enjoy.
4. Press Forward or Backward button on the device or on Mobile phone to select songs you like.
5. Press Play/pause button on the device or on Mobile phone to play or stop the music.
6. Use your phone to adjust volume up and down. Or hold down for a few seconds the Forward or Backward button to adjust volume up and down.

True Wireless Stereo (TWS)

1. Power on both speakers
2. Pair your mobile phone via Bluetooth to one of the speakers (main unit). Then double click play/pause button on the same unit (main unit) and the TWS connection will be live
3. Press and hold the Play/Pause button to disconnect True Wireless Stereo mode.

Playing music from USB Flash Drive:

1. Turn the Power button to "ON".
2. Insert USB flash drive into USB slot, the music stored will be played automatically and blue LED light will stay on.
3. While in PLAY mode, press Forward or Backward button to select songs you like. If you hold down these buttons for a few seconds you will be able to adjust volume up and down.
4. PLAY/PAUSE to play or pause.
5. Please turn the Power button to "OFF" if speaker not in use.

Note If you are in Bluetooth® mode and you insert USB flash drive, this will disconnect the Bluetooth and switch the playing mode to USB. You can press the MODE button to switch to Bluetooth mode again.

How to Use FM Radio:

 
 
1. Under FM radio mode, the audio cable provided can be used as an antenna. Please insert the audio cable to get the best FM signal.
2. Turn the power button "ON", press the "MODE" button to switch to FM radio mode.
3. Press and hold the Play/Pause button to auto scan and store FM stations received in your area. This process may take up to 2 minutes to complete.
4. Press the Forward or Backward button to change the stored FM channel

AUX-IN Connection

Use the supplied AUX input cable to connect an external audio source. The press "MODE" to switch to AUX-IN mode. Press Play/Pause to mute audio. Press and hold the Next button to increase the volume or press and hold the Previous button to decrease the volume

Funciones

1. Conector de carga
2. Botón de encendido/apagado
3. Unidad flash USB
4. Conector de entrada auxiliar
5. Retroceder/Bajar volumen
6. Modo (Bluetooth, puerto USB, FM y entrada auxiliar)
7. Avanzar/Subir volumen
8. Reproducir/Pausa

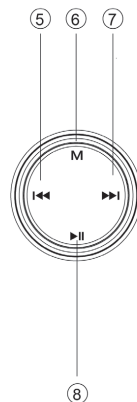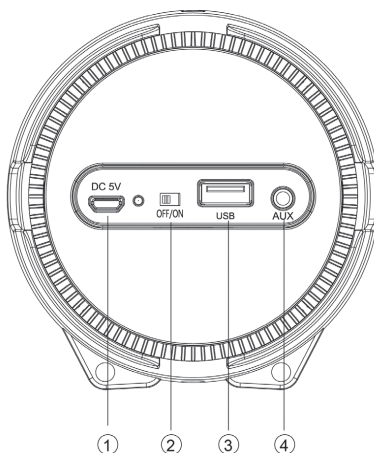

Bluetooth

1. Gire el botón de encendido a la posición "ON" y la luz LED se encenderá en azul y parpadeará rápidamente.
2. Active el Bluetooth en su teléfono móvil, busque el dispositivo "QFX BT-10" y conéctelo. La luz LED azul se encenderá una vez conectado.
3. Reproduzca su música desde su teléfono móvil y disfrute.
4. Pulse el botón de Avanzar o Retroceder en el dispositivo o en el teléfono móvil para seleccionar las canciones que desee.
5. Pulse el botón de Reproducir/Pausar en el dispositivo o en el teléfono móvil para reproducir o detener la música.
6. Utilice su teléfono para subir o bajar el volumen. O mantenga pulsado el botón de Avanzar o Retroceder durante unos segundos para subir o bajar el volumen.

True Wireless Stereo (TWS)

1. Enciende ambos altavoces.
2. Empareja tu teléfono móvil por Bluetooth con uno de los altavoces (unidad principal). Haz doble clic en el botón de reproducción/pausa de la misma unidad y se activará la conexión TWS.
3. Mantenga presionado el botón Reproducir/Pausa para desconectar el modo estéreo inalámbrico verdadero.

Reproducción de música desde una unidad flash USB:

1. Gire el botón de encendido a la posición "ON".
2. Inserte una memoria USB en la ranura USB; la música almacenada se reproducirá automáticamente y la luz LED azul permanecerá encendida.
3. En el modo de reproducción, pulse el botón de avance o retroceso para seleccionar las canciones que desee. Si mantiene pulsados estos botones durante unos segundos, podrá subir o bajar el volumen.
4. REPRODUCIR/PAUSAR para reproducir o pausar.
5. Gire el botón de encendido a la posición "OFF" si no utiliza el altavoz.

Nota: Si está en modo Bluetooth® e inserta una memoria USB, se desconectará el Bluetooth y el modo de reproducción cambiará a USB. Puede pulsar el botón MODE para volver al modo Bluetooth. Puede pulsar el botón MODE para volver al modo Bluetooth.

Cómo utilizar la radio FM:

 
 
1. En el modo de radio FM, el cable de audio incluido puede usarse como antena. Conecte el cable de audio para obtener la mejor señal.
2. Encienda el dispositivo y presione el botón "MODE" para cambiar al modo de radio FM.
3. Mantenga presionado el botón de Reproducir/Pausa para buscar y guardar automáticamente las estaciones FM recibidas en su área. Este proceso puede tardar hasta 2 minutos.
4. Presione el botón Avanzar o Retroceder para cambiar la emisora FM guardada.

Conexión AUX-IN

Utilice el cable de entrada AUX incluido para conectar una fuente de audio externa. Pulse "MODE" para cambiar al modo AUX-IN. Pulse Reproducir/Pausa para silenciar el audio. Mantenga pulsado el botón Siguiente para subir el volumen o el botón Anterior para bajarlo.

Fonctions

1. Connecteur de charge
2. Bouton d'allumage/extinction
3. Clé USB
4. Connecteur d'entrée auxiliaire
5. Volumes inversés/diminués
6. Mode (Bluetooth, port USB, FM et entrée auxiliaire)
7. Avancer/Augmenter le volume
8. Lecture/Pause

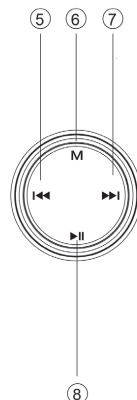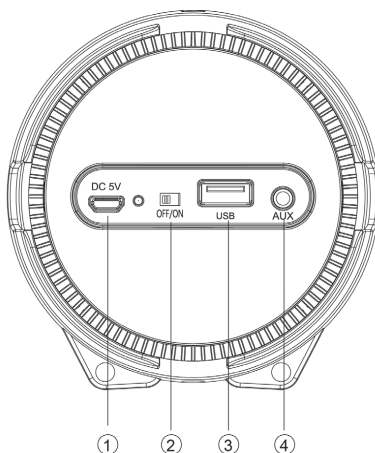

Bluetooth

1. Allumez l'appareil : le voyant LED deviendra bleu, clignotera rapidement et émettra deux bips.
2. Activez le Bluetooth® sur votre téléphone portable, recherchez l'appareil « QFX BT-10 » et connectez-le. Le voyant LED bleu clignotera lentement et émettra trois bips une fois la connexion établie.
3. Écoutez votre musique depuis votre téléphone portable et profitez-en.
4. Appuyez sur le bouton Avancer ou Retour rapide de l'appareil ou du téléphone portable pour sélectionner les morceaux que vous aimez.
5. Appuyez sur le bouton Lecture/Pause de l'appareil ou du téléphone portable pour lire ou mettre en pause la musique.
6. Utilisez votre téléphone pour augmenter ou diminuer le volume. Ou maintenez le bouton Avancer ou Retour rapide enfoncé pendant quelques secondes pour augmenter ou diminuer le volume, pour subir ou réduire le volume.

True Wireless Stereo (TWS)

1. Allumez les deux enceintes.
2. Appairez votre téléphone via Bluetooth avec l'une des enceintes (unité principale). Double-cliquez sur le bouton lecture/pause de l'unité principale pour activer la connexion TWS.
3. Appuyez sur le bouton Lecture/Pause et maintenez-le enfoncé pour déconnecter le mode True Wireless Stereo.

Lecture de musique à partir d'une clé USB :

1. Placez le bouton d'alimentation sur la position « ON ».
2. Insérez la clé USB dans le port USB ; la musique enregistrée sera lue automatiquement et le voyant bleu restera allumé.
3. En mode lecture, appuyez sur les boutons avant et arrière pour sélectionner le morceau souhaité. Maintenez ces boutons enfoncés quelques secondes pour augmenter ou diminuer le volume.
4. LECTURE/PAUSE pour lire ou mettre en pause.
5. Placez le bouton d'alimentation sur la position « OFF » si vous n'utilisez pas l'enceinte.

Remarque : si vous êtes en mode Bluetooth® et que vous insérez une clé USB, le Bluetooth sera déconnecté et le mode de lecture passera en USB. Vous pouvez appuyer sur le bouton MODE pour repasser en mode Bluetooth.

Comment utiliser la radio FM :

1. En mode radio FM, le câble audio fourni peut servir d'antenne. Veuillez l'insérer pour obtenir le meilleur signal FM.
2. Allumez l'appareil et appuyez sur le bouton « MODE » pour passer en mode radio FM.
3. Maintenez le bouton Lecture/Pause enfoncé pour rechercher et mémoriser automatiquement les stations FM captées dans votre région. Cette opération peut prendre jusqu'à 2 minutes.
4. Appuyez sur les boutons « Avancer » et « Retour » pour changer de station FM mémorisée.

Connexion AUX-IN :

Utilisez le câble d'entrée AUX fourni pour connecter une source audio externe. Appuyez ensuite sur « MODE » pour passer en mode AUX-IN. Appuyez sur Lecture/Pause pour couper le son. Maintenez le bouton Suivant enfoncé pour augmenter le volume ou le bouton Précédent pour le baisser.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (4) all of the accessories that came with the Product package must be sent along with the main Product, (5) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your prouct or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your BT-10 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

