

PBX-2010

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL

⚠ WARNING! ⚠

TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.

⚠ ¡ADVERTENCIA! ⚠

PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario. Remítir todo servicio a un técnico calificado.

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.

⚠ AVERTISSEMENT ! ⚠

POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

BATTERY

The PBX-2010 is a rechargeable battery powered speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8-8 hours to fully charge the battery). Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

BATERÍA

El PBX-2010 es un altavoz con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente está conectado a una fuente de alimentación, comenzará a cargarse automáticamente (8-8 horas para cargar completamente la batería). Incluso si la carga de la batería es baja, se encenderá cuando se conecta a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de la batería está roja. Cuando la batería se cargue por completo, la luz indicadora se apagará. Al finalizar la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad agote la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente vacía, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usarlo con el 100% del volumen. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se esté cargando.

BATTERIE

Le PBX-2010 est un haut-parleur alimenté par batterie rechargeable. Assurez-vous d'avoir complètement chargé la batterie avant la première utilisation afin de maximiser la durée de vie de la batterie. Une fois que l'adaptateur secteur est connecté à une source d'alimentation, il commencera automatiquement à se charger (8-8 heures pour charger complètement la batterie). Même si la batterie est faible, il s'allumera lorsqu'il sera connecté à une source d'alimentation. Lorsque la batterie est en charge, le voyant de la batterie est rouge. Lorsque la batterie est complètement chargée, le voyant s'éteint. Une fois la charge terminée, veuillez débrancher l'appareil. Lorsqu'il n'est pas utilisé, le haut-parleur doit toujours être éteint pour éviter que l'appareil ne décharge la batterie. Lorsque l'appareil n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est complètement vide, l'appareil ne peut pas fonctionner à 100 % du volume lorsqu'il est immédiatement connecté à une source d'alimentation. Il est suggéré de charger pendant un certain temps avant de l'utiliser avec un volume de 100 %. L'appareil peut fonctionner et se charger avec un volume inférieur. Le niveau de volume augmenterait à mesure que l'appareil est en charge.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.


FCC ID: 2A6Y4-PBX-1212A



PBX-2010 GUIDE

PBX-2010 PANEL

1. Power Switch: ON/OFF
2. USB Slot
3. TF Card Slot
4. AUX IN
5. Guitar Input
6. Microphone Input 2
7. Microphone Input 1
8. Battery Indicator Light
9. Power Supply: DC 9V
10. MIC Volume: Adjust from Min to Max
11. Volume Knob: Adjust from Min to Max
12. 4 Sliders to adjust Guitar Volume, Echo, Bass and Treble
13. Mode Button: Press to toggle between AUX, USB, TF, FM, BT, Press and hold to select/exit Mic Priority
14. Rec
15. Previous Track Button: Select previous track
16. Play/Pause Button (TWS connection)
17. Next Track Button: Select next track
18. Light: Press to select the lighting mode, press and hold to turn on/off the light

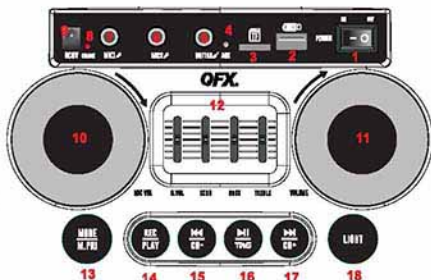

PBX-2010 Recording Function

Put USB/TF card in the slot, then inserting the wired microphone or turn on the wireless microphone, make sure it is working. Press and hold the "REC" button to start recording sound, short press "REC" playing recording file. Short press again to exit recording function.

PBX-2010 REMOTE CONTROL

1. STANDBY: Make the unit to be standby mode.
2. Input Mode Button: Toggle between USB, TF, FM, AUX, BT
3. Mute: Mute the track
4. PLAY/PAUSE
5. Previous Track: Select previous channel
6. Next Track: Select next channel.
7. EQ: Select EQ mode.
8. VOL-: Reduce the master volume
9. VOL+: Increase the master volume
10. REP: Repeat the playing track.
11. Press to Scan Channel in FM Mode
- 12-21. KEY Number for selecting the certain track for USB flash drive or TF card.



PBX-2010 Wireless Microphone

The Wireless Microphone has a built-in battery.

When not in use, please turn the microphone OFF, preventing battery exhaustion.

When the microphone is not in use for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days.

1. Power: Press and hold to turn on/off the Mic
2. Voice Changer
3. Battery Indicator Light: When the battery is charging, the battery indicator light will be red. Once the battery is fully charge, the indicator light will turn off.
4. V-: Decrease Mic Volume
5. V+: Increase Mic Volume
6. Power Supply: DC 5V



PBX-2010 DISPLAY SYSTEM SETTINGS

1. Input Mode: The LED display screen will display the information of input mode for USB/TF/BT/AUX/FM. When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive / TF Card.
2. Track Number: The track number currently playing from the USB/TF will display.
3. FM Mode: All FM channels display here. Press "play/pause" button for auto scan all channels.
4. Turn off the LED lights for better FM radio reception.

PBX-2010 BLUETOOTH


Bluetooth Mode: Open the Bluetooth of phone. Find the Bluetooth name of the unit called "QFX PBX-2010" to connect. After a successful match, you can play the music from speaker. You won't need reconnect the Bluetooth when switching mode.

PBX-2010 TWS CONNECTION

1. TWS connection: TWS Connection is only for two PBX-2010 speakers, can not support quantity over 2 PCS.
2. Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode, and the word "BLUE" on the LED screen will flash.
3. At the first time, please press the Play/Pause (TWS) button of one of unit for 3 seconds. Then two speakers will connect together.
4. Connect the phone: Open the phone Bluetooth settings, Search and Connect the main device Bluetooth Name "QFX PBX-2010"
5. Select music from phone and enjoy TWS playing in pairs with two Speakers.
6. Exit TWS: Press and hold the Play/Pause (TWS) button for 3 seconds to exit the TWS function

PANEL PBX-2010

1. Interruptor de encendido: ENCENDIDO/APAGADO
2. Ranura USB
3. Ranura para tarjeta TF
4. ENTRADA AUXILIAR
5. Entrada de guitarra
6. Entrada de micrófono 2
7. Entrada de micrófono 1
8. Luz indicadora de batería
9. Alimentación: CC 9 V
10. Volumen del micrófono: Ajustar de mínimo a máximo
11. Perilla de volumen: Ajustar de mínimo a máximo
12. 4 controles deslizantes para ajustar el volumen de la guitarra, el eco, los graves y los agudos
13. Botón de modo: Presionar para alternar entre AUX, USB, TF, FM, BT. Mantener presionado para seleccionar/salir de Prioridad de micrófono
14. Grabación
15. Botón de pista anterior: Seleccionar la pista anterior
16. Botón de reproducción/pausa (conexión TWS)
17. Botón de pista siguiente: Seleccionar la siguiente pista
18. Luz: Presionar para seleccionar el modo de iluminación, mantener presionado para encender/apagar la luz

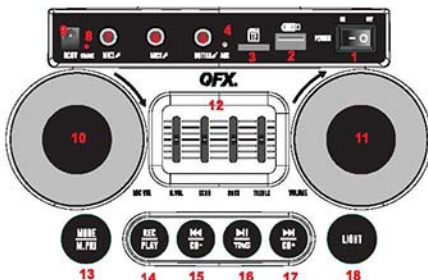

Función de grabación PBX-2010

Coloque la tarjeta USB/TF en la ranura, luego inserte el micrófono con cable o encienda el micrófono inalámbrico, asegúrese de que esté funcionando. Mantenga presionado el botón "REC" para comenzar a grabar sonido, presione brevemente "REC" para reproducir el archivo de grabación. Presione brevemente nuevamente para salir de la función de grabación.

CONTROL REMOTO PBX-2010

1. STANDBY: hace que la unidad esté en modo de espera.
2. Botón de modo de entrada: alterna entre USB, TF, FM, AUX, BT
3. Silencio: silencia la pista
4. REPRODUCIR/PAUSAR
5. Pista anterior: selecciona el canal anterior
6. Pista siguiente: selecciona el canal siguiente.
7. EQ: selecciona el modo EQ.
8. VOL-: reduce el volumen principal
9. VOL+: aumenta el volumen principal
10. REP: repite la pista que se está reproduciendo.
11. Presiónelo para escanear el canal en modo FM
- 12-21. Número de CLAVE para seleccionar la pista determinada para la unidad flash USB o la tarjeta TF.



Micrófono inalámbrico PBX-2010

El micrófono inalámbrico tiene una batería incorporada. Cuando no esté en uso, apague el micrófono para evitar que se agote la batería. Cuando el micrófono no se use durante períodos prolongados, la batería perderá energía gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días.

1. Encendido: mantenga presionado para encender o apagar el micrófono
2. Cambiador de voz
3. Luz indicadora de batería: cuando la batería se está cargando, la luz indicadora de batería estará roja. Una vez que la batería esté completamente cargada, la luz indicadora se apagará.
4. V-: Disminuir el volumen del micrófono
5. V+: Aumentar el volumen del micrófono
6. Fuente de alimentación: CC 5 V



CONFIGURACIÓN DEL SISTEMA DE VISUALIZACIÓN PBX-2010

1. Modo de entrada: La pantalla LED mostrará la información del modo de entrada para USB/TF/BT AUX/FM. Cuando se inserta una unidad flash USB/tarjeta TF en la entrada USB/TF, la unidad cambiará automáticamente al modo USB/TF y comenzará a reproducir archivos de audio Mp3 desde la unidad flash USB/tarjeta TF.
2. Número de pista: Se mostrará el número de pista que se está reproduciendo actualmente desde el USB/TF.
3. Modo FM: Aquí se muestran todos los canales FM. Presione el botón "reproducir/pausa" para escanear automáticamente todos los canales.
4. Apague las luces LED para una mejor recepción de radio FM.

PBX-2010 BLUETOOTH


Modo Bluetooth: abra el Bluetooth del teléfono. Busque el nombre de Bluetooth de la unidad llamada "QFX PBX-2010" para conectarla. Después de una conexión exitosa, puede reproducir la música desde el altavoz. No necesitará volver a conectar el Bluetooth al cambiar de modo.

CONEXIÓN PBX-2010 TWS

1. Conexión TWS: la conexión TWS es solo para dos PBX-2010 altavoces, no admite una cantidad superior a 2 unidades.
2. Encienda los altavoces, presione el botón MODE para cambiar al modo BLUETOOTH y la palabra "BLUE" en la pantalla LED parpadeará.
3. La primera vez, presione el botón Reproducir/Pausa (TWS) de una de las unidades durante 3 segundos. Luego, los dos altavoces se conectarán entre sí.
4. Conectar el teléfono: abra la configuración de Bluetooth del teléfono, busque y conecte el nombre de Bluetooth del dispositivo principal 'QFX PBX-2010'.
5. Selección música del teléfono y disfrute de la reproducción TWS en pares con dos altavoces.
6. Salir de TWS: Mantenga pulsado el botón Reproducir/Pausa (TWS) durante 3 segundos para salir de la función TWS

PANNEAU PBX-2010

1. Interrupteur d'alimentation : ON/OFF
2. Port USB
3. Emplacement pour carte TF
4. Entrée auxiliaire
5. Entrée guitare
6. Entrée microphone 2
7. Entrée microphone 1
8. Voyant de batterie
9. Alimentation : 9 V CC
10. Volume du micro : réglable du minimum au maximum
11. Bouton de volume : réglable du minimum au maximum
12. 4 curseurs pour régler le volume de la guitare, l'écho, les graves et les aigus
13. Bouton Mode : appuyez pour basculer entre AUX, USB, TF, FM, BT. Maintenez enfoncé pour sélectionner/quitter la priorité micro
14. Enregistrement
15. Bouton Piste précédente : sélectionnez la piste précédente
16. Bouton Lecture/Pause (connexion TWS)
17. Bouton Piste suivante : sélectionnez la piste suivante
18. Éclairage : appuyez pour sélectionner le mode d'éclairage, maintenez enfoncé pour allumer/éteindre l'éclairage

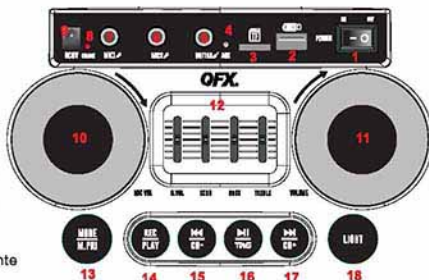
Fonction d'enregistrement du PBX-2010

Insérez la carte USB/TF dans la fente, puis insérez le microphone filaire ou allumez le microphone sans fil, assurez-vous qu'il fonctionne.

Appuyez et maintenez enfoncé le bouton « REC » pour démarrer l'enregistrement du son, appuyez brièvement sur « REC » pour lire le fichier d'enregistrement. Appuyez à nouveau brièvement pour quitter la fonction d'enregistrement.

TÉLÉCOMMANDE PBX-2010

1. STANDBY : permet de mettre l'appareil en mode veille.
2. Bouton de mode d'entrée : bascule entre USB, TF, FM, AUX, BT
3. Mute : coupe le son de la piste
4. PLAY/PAUSE
5. Piste précédente : sélectionne la chaîne précédente
6. Piste suivante : sélectionne la chaîne suivante.
7. EQ : sélectionne le mode EQ.
8. VOL- : réduit le volume principal
9. VOL+ : augmente le volume principal
10. REP : répète la lecture de la piste.
11. Appuyez pour rechercher les chaînes en mode FM
- 12-21. Numéro de touche permettant de sélectionner une piste spécifique pour une clé USB ou une carte TF.


Microphone sans fil PBX-2010

Le microphone sans fil est doté d'une batterie intégrée.

Lorsque vous ne l'utilisez pas, veuillez éteindre le microphone pour éviter que la batterie ne s'épuise.

Lorsque le microphone n'est pas utilisé pendant une période prolongée, la batterie perd progressivement sa puissance. Il est recommandé de charger complètement la batterie au moins tous les 60 jours.

1. Alimentation : appuyez et maintenez pour allumer/éteindre le micro
2. Changeur de voix
3. Voyant lumineux de la batterie : lorsque la batterie est en charge, le voyant lumineux de la batterie est rouge. Une fois la batterie complètement chargée, le voyant lumineux s'éteint.
4. V- : diminuer le volume du micro
5. V+ : augmenter le volume du micro
6. Alimentation : DC 5V


PARAMÈTRES DU SYSTÈME D'AFFICHAGE DU PBX-2010

1. Mode d'entrée : l'écran d'affichage LED affiche les informations du mode d'entrée pour USB/TF/BT AUX/FM. Lorsqu'une clé USB/carte TF est insérée dans l'entrée USB/TF, l'appareil passe automatiquement en mode USB/TF et commence à lire les fichiers audio Mp3 à partir de la clé USB/carte TF.
2. Numéro de piste : le numéro de piste en cours de lecture à partir de la clé USB/TF s'affiche.
3. Mode FM : tous les canaux FM s'affichent ici. Appuyez le bouton « lecture/pause » pour rechercher automatiquement tous les canaux.
4. Éteignez les voyants LED pour une meilleure réception radio FM.

PBX-2010 BLUETOOTH

Mode Bluetooth : ouvrez le Bluetooth du téléphone. Recherchez le nom Bluetooth de l'unité appelée « QFX PBX-2010 » pour vous connecter. Après une correspondance réussie, vous pouvez écouter la musique depuis le haut-parleur. Vous n'aurez pas besoin de reconnecter le Bluetooth lors du de mode

CONNEXION TWS PBX-2010

1. Connexion TWS : la connexion TWS est réservée à deux PBX-2010 haut-parleurs uniquement, elle ne peut pas prendre en charge plus de 2 pièces.
2. Allumez les haut-parleurs, appuyez sur le bouton MODE pour passer en mode BLUETOOTH et le mot « BLEU » sur l'écran LED clignotera.
3. La première fois, appuyez sur le bouton Lecture/Pause (TWS) de l'une des unités pendant 3 secondes. Ensuite, deux haut-parleurs se connecteront ensemble.
4. Connecter le téléphone : ouvrez les paramètres Bluetooth du téléphone, recherchez et connectez l'appareil principal Bluetooth nommé « QFX PBX-2010 »
5. Sélectionnez la musique du téléphone et profitez de la lecture TWS par paires avec deux haut-parleurs.
6. Quitter TWS : Appuyez et maintenez sur le bouton Lecture/Pause (TWS) pendant 3 secondes pour quitter la fonction TWS



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This Warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth vSpeakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your PBX-2010 Journey!
Tag us @QFXUSA to share your stories.

FOLLOW US @QFXUSA

