



INSTRUCTION MANUAL



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remitir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



AVERTISSEMENT !



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-- Reorient or relocate the receiving antenna.

-- Increase the separation between the equipment and receiver.

-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2A0MX-BTR4567

1. CLK/MEM/H/BT PAIR/TIME--S Button

In CLOCK mode, this button is used to set the clock. In RADIO mode, it's used to store radio stations in the memory. In BLUETOOTH mode, it's used to unpair or pair with the Bluetooth device. Additionally, this button can be used to select the time sync function.

2. </HR Button

In CLOCK mode, this button adjusts the hour. In RADIO mode, it searches the radio station backward. In BLUETOOTH mode, it goes back to the beginning of the track or the previous track.

3. >/MIN Button

In CLOCK mode, this button adjusts the minute. In RADIO mode, it searches the radio station in forward direction. In BLUETOOTH mode, it skips to the next track.

4. DIMMER Button

Use this button to change the brightness of the display.

5. ALM2/VOL- Button

In CLOCK mode, use this button to set the alarm time in ALARM2. In RADIO mode, use this button to decrease the volume.

6. ALM1/VOL+ Button

In CLOCK mode, use this button to set the alarm time in ALARM1. In RADIO mode, use this button to increase the volume.

7. ALARM OFF/SOURCE/0Button

Use this button to turn the ALARM off after alarm activates. Use this button to select AM, FM, BLUETOOTH or AUX mode. **8. SNOOZE/SLEEP Button**
Use to button to temporarily suspend the ALARM for a short period. In RADIO mode, use this to set the SLEEP time..

9. LED Display

Display for the CLOCK and RADIO frequency..

10. PM Indicator

This indicator shows that the time display is PM.

11. ALARM2 BUZZER Indicator

This indicator shows that the unit is set in ALARM2 buzzer mode.

12. ALARM2 RADIO Indicator

This indicator shows that the unit is set in ALARM2 radio mode.

13. BT Indicator

This indicator shows the Bluetooth pairing status.

14. ALARM1 BUZZER Indicator

This indicator shows that the unit is set in ALARM1 buzzer mode.

15. ALARM1 RADIO Indicator

This indicator shows that the unit is set in ALARM1 radio mode.

16. Battery Compartment

Compartment for the back-up battery.

17. FM Wire Antenna

Extend this wire antenna to obtain better FM broadcasting.

18. AC Power Cord

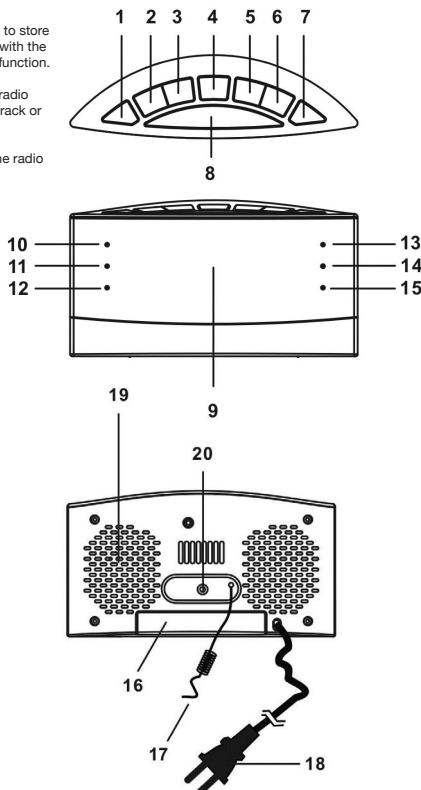 
Connect the unit to the wall AC outlet.

19. SPEAKER

Sound output

20. AUX-IN JACK

Connect the unit to the external audio device.


SETTING THE CLOCK

1. With the unit in CLOCK mode, press and hold the CLK/MEM button for about 1 second, the time will begin to flash on the LED display.
2. Press the </HR button to adjust the hour.
3. Press the >/MIN button to adjust the minute.
4. When the correct time is selected, press the CLK/MEM button again to confirm.

SETTING THE ALARMS

1. With the unit in CLOCK mode, press the ALM1/VOL+ or ALM2/VOL- button. The ALARM time will begin to flash on the LED display.
2. Press the </HR button to adjust the alarm hour.
3. Press the >/MIN button to adjust the alarm minute.
4. When the correct time is selected, press the ALM1/VOL+ or ALM2/VOL- button to confirm.
5. Press the ALM1/VOL+ or ALM2/VOL- button to select the ALARM sound mode - buzzer or currently set radio station. The alarm buzzer or radio indicator will light up.

SNOOZE FUNCTION

1. Whenever the alarm (radio or buzzer) activates, it can be temporarily suspended for a short period of 9 minutes by pressing the SNOOZE/SLEEP button once.
2. The buzzer or radio will then automatically activate again after the 9 minutes SNOOZE period has ended.
3. This procedure can be repeated for up to approximately one hour.

TURN OFF THE ALARM

When the Alarm activate, press the ALM OFF/SOURCE button to turn off the Alarm.

LISTENING TO THE AM/FM RADIO

1. Press the ALM OFF/SOURCE button to select the FM or AM mode.
2. Press the </HR button or >/MIN button step by step to tune to the desired radio stations.
3. Press and hold the </HR button or >/MIN buttons for approx. 1 second, it will start to search the next radio station in the direction of the search. The search operation simply finds stations with strong signals. Stations with weak reception can only be tuned in manually.

ANTENNA

For best reception, fully extend the FM wire antenna to receive FM stations. For AM reception, the unit has a built-in antenna, turn the whole unit for best reception.

SAVING A RADIO STATION TO THE MEMORY

1. Tune the radio to the desired station.
2. Press and hold the **CLK/MEM** button for approx. 1 second, the LED display will show **P01** and flash, the radio station will be stored in the memory.
3. Up to 10 AM and 10 FM radio stations can be stored in the memory.

TO LISTEN TO A SAVED RADIO STATION

1. Press the **ALM OFF/SOURCE** button to select **FM** or **AM** model
2. Press the **CLK/MEM** button to select the stored radio station.

SLEEP TO MUSIC FUNCTION

1. This function allows you to listen to the radio while you fall asleep.
2. Press the **SNOOZE/SLEEP** button, the display will show the default sleep time of 90 minutes
3. Press the **SNOOZE/SLEEP** button again to adjust the desired sleep time.
4. The options are 90-80-70-60-50-40-30-20-10-min. or OFF
5. Now you can enjoy listening to the radio for the pre-set period of sleep time.
6. After this pre-set time has elapsed, the unit will switch off automatically.

BLUETOOTH OPERATION**Connecting BLUETOOTH**

1. Press the **ALM OFF/SOURCE** button to select the **Bluetooth** mode
2. The display shows " **bt** " and the Bluetooth indicator will blink.
3. Turn on the Bluetooth of your device and search the unit for connection. Your Bluetooth device should find " **QFX CR-35** ". Select this for connection.
4. If connection is successful, the Bluetooth indicator will stay lighted and your Bluetooth device will show Bluetooth is connected
5. Select and play the audio file through your Bluetooth device.
6. Press the **>>/HR** button to go to the next track.
7. Press the **<</HR** button to go back to the previous track.
8. Press the **CLK/MEM/II/BT PAIR/TIME-S** button to pause playing.
9. To resume, press the **CLK/MEM/II/BT PAIR/TIME-S** button again.
10. Press **ALM1/VOL+** button to increase the volume. Press **ALM2/VOL-** button to decrease the volume.

BLUETOOTH AUTO PAIRING

Once the unit paired with the Bluetooth device, it will automatically pair with that device next time when you turn on the unit and that Bluetooth device.

BLUETOOTH UNPAIRING

To unpair the Bluetooth device, press and hold the **CLK/MEM/II/BT PAIR/TIME-S** button. The unit will start to search for a new connection. The "BT" indicator will flash.

AUTO TIME-SYNC WITH BLUETOOTH

Once the Bluetooth is connected, the time on your mobile phone will sync to the clock radio.

If you would like to cancel this auto time sync function:

In clock mode, press and hold **CLK/MEM/II/BT PAIR/TIME-S** button for approx. 10 seconds until the display shows " **S_n** ". Then, this function is inactive.

If you would like to reactivate the auto time-sync function, in clock mode, press and hold the **CLK/MEM/II/BT PAIR/TIME-S** button for approx. 10 seconds until the display shows " **S_y** ".

AUX IN CONNECTION

1. Insert one side of the audio cable (requires 3.5mm stereo plug, not supplied) into the line-out jack or phones jack on your MP3 player or audio device and the other side to the aux-in jack on the unit.
2. Press the **ALM OFF/SOURCE** button to select **AUX** mode, " **AUX** " will display in the LED display for a few seconds.
3. Turn on your MP3 player and follow the playback instruction.
4. To stop this function, simply turn off your MP3 player.

1. CLK/MEM/H/BT PAIR/TIME--S Button

En el modo RELOJ, este botón se utiliza para ajustar el reloj. En el modo RADIO, se utiliza para almacenar emisoras de radio. En el modo BLUETOOTH, se utiliza para desvincular o vincular el dispositivo Bluetooth. Además, este botón permite seleccionar la función de sincronización horaria.

2. /Botón HR

En el modo RELOJ, este botón ajusta la hora. En el modo RADIO, busca la emisora de radio hacia adelante. En el modo BLUETOOTH, retrocede al principio de la pista o a la pista anterior.

3. /Botón MIN

En el modo RELOJ, este botón ajusta los minutos. En el modo RADIO, busca la emisora de radio hacia adelante. En el modo BLUETOOTH, salta a la siguiente pista.

4. Botón DIMMER

Utilice este botón para cambiar el brillo de la pantalla.

5. Botón ALM2/VOL--

En el modo RELOJ, utilice este botón para configurar la hora de la alarma en ALARMA2. En el modo RADIO, utilice este botón para disminuir el volumen.

6. Botón ALM1/VOL+

En el modo RELOJ, utilice este botón para configurar la hora de la alarma en ALARMA1. En el modo RADIO, utilice este botón para aumentar el volumen.

7. Botón ALARMA APAGADA/FUENTE

Utilice este botón para desactivar la ALARMA después de que se active. Utilice este botón para seleccionar el modo AM, FM, BLUETOOTH o AUX.

8. Botón SNOOZE/SLEEP

Utilice el botón para suspender temporalmente la ALARMA por un período corto. En el modo RADIO, utilice este para configurar el tiempo de SUSPENSIÓN.

9. Pantalla LED

Visualización de la frecuencia del RELOJ y RADIO.

10. Indicador PM

Este indicador muestra que la hora mostrada es PM.

11. Indicador ZUMBADOR DE ALARMA2

Este indicador muestra que la unidad está configurada en modo de timbre ALARMA2.

12. Indicador de RADIO ALARM2

Este indicador muestra que la unidad está configurada en modo de radio ALARMA2.

13. Indicador BT

Este indicador muestra el estado de emparejamiento de Bluetooth.

14. Indicador ZUMBADOR DE ALARMA1

Este indicador muestra que la unidad está configurada en el modo de timbre ALARMA1.

15. Indicador de RADIO ALARMA1

Este indicador muestra que la unidad está configurada en modo de radio ALARMA1.

16. Compartimento de la batería

Compartimento para la batería de respaldo.

17. Antena de cable FM

Extiende esta antena de cable para obtener una mejor transmisión FM.

18. Cable de alimentación de CA

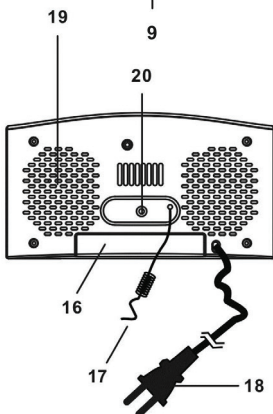 
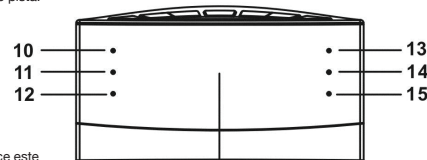 
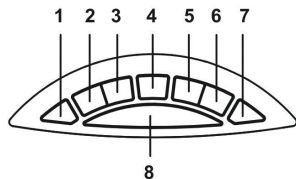 
Conecte la unidad a la toma de CA de pared.

19. VOCERO

Salida de sonido

20. ENTRADA AUXILIAR

Conecte la unidad al dispositivo de audio externo.


AJUSTE DEL RELOJ

1. Con la unidad en modo RELOJ, mantenga presionado el botón **CLK/MEM** durante aproximadamente 1 segundo; la hora comenzará a parpadear en la pantalla LED.
2. Presione el botón **<</HR** para ajustar la hora.
3. Presione el botón **>>/MIN** para ajustar los minutos.
4. Cuando haya seleccionado la hora correcta, presione el botón **CLK/MEM** nuevamente para confirmar.

AJUSTE DE LAS ALARMAS

1. Con la unidad en modo RELOJ, presione el botón **ALM1/VOL+** o **ALM2/VOL--**. La hora de la ALARMA comenzará a parpadear en la pantalla LED.
2. Presione el botón **<</HR** para ajustar la hora de la alarma.
3. Presione el botón **>>/MIN** para ajustar los minutos de la alarma.
4. Cuando haya seleccionado la hora correcta, presione el botón **ALM1/VOL+** o **ALM2/VOL--** para confirmar. 5. Pulse el botón **ALM1/VOL+** o **ALM2/VOL--** para seleccionar el modo de sonido de la ALARMA: timbre o emisora de radio sintonizada. El indicador de timbre o radio se iluminará.

FUNCIÓN DE REPOSO

1. Al activarse la alarma (radio o timbre), puede suspenderse temporalmente durante 9 minutos pulsando el botón **SNOOZE/SLEEP** una vez.
2. El timbre o la radio se activarán automáticamente una vez transcurridos 9 minutos de REPOSO.
3. Este procedimiento puede repetirse durante aproximadamente una hora.

APAGAR LA ALARMA

Cuando se active la alarma, pulse el botón **ALM OFF/SOURCE** para apagarla.

ESCUCHA DE RADIO AM/FM

1. Pulse el botón **ALM OFF/SOURCE** para seleccionar el modo **FM** o **AM**. 2. Pulse el botón **<</HR** o **>>/MIN** paso a paso para sintonizar las emisoras de radio deseadas.
3. Mantenga pulsado el botón **<</HR** o **>>/MIN** durante aproximadamente 1 segundo. Se iniciará la búsqueda de la siguiente emisora en la dirección de búsqueda. La búsqueda simplemente encuentra emisoras con señal fuerte. Las emisoras con señal débil solo se pueden sintonizar manualmente.

ANTENA

Para una mejor recepción, extienda completamente la antena FM. Para la recepción AM, la unidad cuenta con una antena integrada; gire la unidad completamente para obtener la mejor recepción.

ALMACENAMIENTO DE UNA EMISORA DE RADIO EN LA MEMORIA

1. Sintoniche la emisora deseada.
2. Pulse y mantenga pulsado el botón **CLK/MEM** durante aproximadamente 1 segundo. La pantalla LED mostrará P01 y parpadeará. La emisora se almacenará en la memoria.
3. Se pueden almacenar hasta 10 emisoras AM y 10 FM en la memoria.

PARA ESCUCHAR UNA EMISORA DE RADIO GUARDADA

1. Pulse el botón **ALM OFF/SOURCE** para seleccionar el modelo FM o AM.
2. Pulse el botón **CLK/MEM** para seleccionar la emisora de radio guardada.

FUNCIÓN DORMIR CON MÚSICA

1. Esta función le permite escuchar la radio mientras se duerme.
2. Pulse el botón **SNOOZE/SLEEP**; la pantalla mostrará el tiempo de sueño predeterminado de 90 minutos.
3. Pulse el botón **SNOOZE/SLEEP** de nuevo para ajustar el tiempo de sueño deseado.
4. Las opciones son 90-80-70-60-50-40-30-20-10 min o APAGADO.
5. Ahora puede disfrutar de la radio durante el tiempo de sueño preestablecido.
6. Transcurrido este tiempo, la unidad se apagará automáticamente.

FUNCIONAMIENTO DEL BLUETOOTH**Conexión del BLUETOOTH**

1. Pulse el botón **ALM OFF/SOURCE** para seleccionar el modo Bluetooth.
2. La pantalla mostrará "bt" y el indicador de Bluetooth parpadeará.
3. Active el Bluetooth de su dispositivo y busque la unidad para conectarlo. Su dispositivo Bluetooth debería encontrar "QFX CR-35". Selecciónelo para la conexión.
4. Si la conexión es correcta, el indicador de Bluetooth permanecerá encendido y su dispositivo Bluetooth mostrará que está conectado.
5. Seleccione y reproduzca el archivo de audio a través de su dispositivo Bluetooth.
6. Pulse el botón **>>/MIN** para ir a la siguiente pista.
7. Presione el botón **<</HR** para volver a la pista anterior.
8. Pulse el botón **CLK/MEM/II/BT PAIR/TIME--S** para pausar la reproducción.
9. Para reanudar, pulse el botón **CLK/MEM/II/BT PAIR/TIME--S** de nuevo. 10. Pulse el botón **ALM1/VOL+** para subir el volumen. Pulse el botón **ALM2/VOL-** para bajarlo.

EMPAREJAMIENTO AUTOMÁTICO DE BLUETOOTH

Una vez que la unidad se haya emparejado con el dispositivo Bluetooth, se emparejará automáticamente con ese dispositivo la próxima vez que encienda la unidad y el dispositivo Bluetooth.

DESEMPAREJAMIENTO DE BLUETOOTH

Para desemparejar el dispositivo Bluetooth, mantenga pulsado el botón **CLK/MEM/II/BT PAIR/TIME--S**. La unidad comenzará a buscar una nueva conexión. El indicador "BT" parpadeará.

SINCRONIZACIÓN AUTOMÁTICA DE LA HORA CON BLUETOOTH

Una vez conectado al Bluetooth, la hora de su teléfono móvil se sincronizará con la del radio reloj.

Si desea cancelar esta sincronización automática de la hora:

En el modo reloj, mantenga pulsado el botón **CLK/MEM/II/BT PAIR/TIME--S** durante aproximadamente 10 segundos hasta que la pantalla muestre "S_n". A continuación, esta función quedará inactiva.

Si desea reactivar la función de sincronización horaria automática, en el modo reloj, mantenga pulsado el botón **CLK/MEM/II/BT PAIR/TIME--S** durante aproximadamente 10 segundos hasta que la pantalla muestre "S_y".

CONEXIÓN DE ENTRADA AUXILIAR

1. Inserte un extremo del cable de audio (requiere un conector estéreo de 3,5 mm, no incluido) en la salida de línea o la toma de auriculares de su reproductor MP3 o dispositivo de audio y el otro extremo en la entrada auxiliar de la unidad.
2. Pulse el botón **ALM OFF/SOURCE** para seleccionar el modo **AUX**. "AUX" se mostrará en la pantalla LED.

1. Bouton CLK/MEM//BT PAIR/TIME- S

En mode HORLOGE, ce bouton permet de régler l'horloge. En mode RADIO, il permet de mémoriser les stations de radio. En mode BLUETOOTH, il permet de dissocier ou d'appairer l'appareil Bluetooth. De plus, ce bouton permet de sélectionner la fonction de synchronisation de l'heure.

2. Bouton /HR

En mode HORLOGE, ce bouton permet de régler l'heure. En mode RADIO, il permet de rechercher la station de radio en arrière. En mode BLUETOOTH, il permet de revenir au début du morceau ou au morceau précédent.

3. Bouton /MIN

En mode HORLOGE, ce bouton permet de régler les minutes. En mode RADIO, il permet de rechercher la station de radio en avant. En mode BLUETOOTH, il permet de passer au morceau suivant.

4. Bouton DIMMER

Utilisez ce bouton pour modifier la luminosité de l'écran.

5. Bouton ALM2/VOL-

En mode HORLOGE, utilisez ce bouton pour régler l'heure de l'alarme sur ALARME 2. En mode RADIO, utilisez ce bouton pour baisser le volume.

6. Bouton ALM1/VOL+

En mode HORLOGE, utilisez ce bouton pour régler l'heure de l'alarme sur ALARME 1. En mode RADIO, utilisez ce bouton pour augmenter le volume.

7. Bouton ALARME OFF/SOURCE/

Utilisez ce bouton pour désactiver l'alarme après son activation. Utilisez ce bouton pour sélectionner les modes AM, FM, BLUETOOTH ou AUX.

8. Bouton SNOOZE/SLEEP

Utilisez ce bouton pour suspendre temporairement l'alarme pendant une courte période. En mode RADIO, utilisez ce bouton pour régler l'heure de veille.

9. Affichage LED

Affichage de l'HORLOGE et de la fréquence RADIO.

10. Voyant PM Cet indicateur

indique que l'heure est affichée en PM.

11. Voyant BUZZER ALARME 2 Cet indicateur

indique que l'appareil est réglé en mode buzzer ALARME 2.

12. Voyant RADIO ALARME 2

Cet indicateur indique que l'appareil est réglé en mode radio ALARME 2.

13. Voyant BT Cet indicateur

indique l'état du couplage Bluetooth.

14. Voyant BUZZER ALARME

1 Ce voyant indique que l'appareil est réglé en mode buzzer ALARME 1.

15. Voyant RADIO ALARME 1

SCe voyant indique que l'appareil est réglé en mode radio ALARME 1.

16. Compartiment à piles :

compartiment pour la batterie de secours.

17. Antenne filaire FM :

déployez cette antenne filaire pour obtenir une meilleure diffusion FM.

18. Cordon d'alimentation secteur :

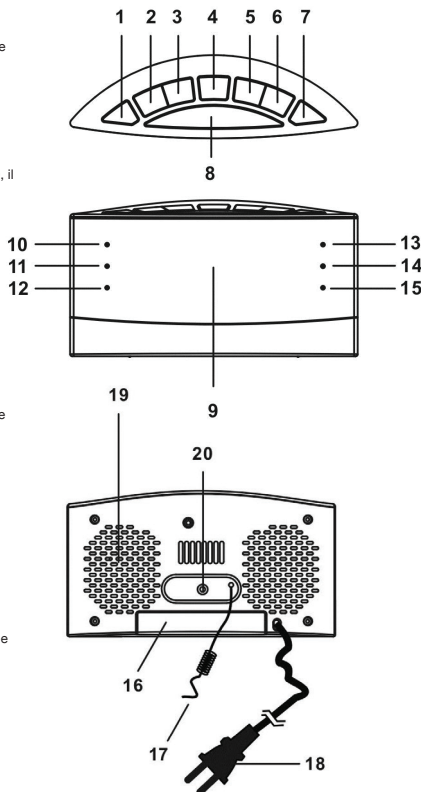 
connectez l'appareil à une prise secteur murale.

19. Sortie audio

HAUT-PARLEUR

20. PRISE D'ENTRÉE AUXILIAIRE :

connectez l'appareil à un périphérique audio externe.


RÉGLAGE DE L'HORLOGE**

1. En mode HORLOGE, appuyez et maintenez enfoncé le bouton **CLK/MEM** pendant environ 1 seconde ; l'heure se mettra à clignoter sur l'affichage LED.
2. Appuyez sur le bouton **</HR** pour régler l'heure.
3. Appuyez sur le bouton **>/MIN** pour régler les minutes.
4. Lorsque l'heure correcte est sélectionnée, appuyez de nouveau sur **CLK/MEM** pour confirmer.

RÉGLAGE DES ALARMES**

1. En mode HORLOGE, appuyez sur le bouton **ALM1/VOL+** ou **ALM2/VOL-**. L'heure de l'alarme clignotera sur l'écran LED.
2. Appuyez sur **</HR** pour régler l'heure de l'alarme.
3. Appuyez sur **>/MIN** pour régler les minutes de l'alarme.
4. Lorsque l'heure correcte est sélectionnée, appuyez de nouveau sur **ALM1/VOL+** ou **ALM2/VOL-** pour confirmer.
5. Appuyez sur **ALM1/VOL+** ou **ALM2/VOL-** pour choisir le mode de sonnerie de l'alarme — "buzzer" ou "station radio réglée". L'indicateur du buzzer ou de la radio s'allumera.

FONCTION RÉPÉTÉ (SNOOZE)**

1. Lorsque l'alarme (radio ou buzzer) se déclenche, elle peut être temporairement suspendue pendant 9 minutes en appuyant sur le bouton **SNOOZE/SLEEP**.
2. Le buzzer ou la radio se réactivera automatiquement après les 9 minutes.
3. Cette opération peut être répétée pendant environ une heure maximum.

ARRÊTER L'ALARME**

Lorsque l'alarme se déclenche, appuyez sur le bouton **ALM OFF/SOURCE** pour l'arrêter.

ÉCOUTER LA RADIO AM/FM**

1. Appuyez sur le bouton **ALM OFF/SOURCE** pour choisir le mode **FM** ou **AM**.
2. Appuyez sur **</HR** ou **>/MIN** pour rechercher manuellement une station.
3. Maintenez l'un des deux boutons enfoncé pendant environ 1 seconde pour rechercher automatiquement la prochaine station avec un signal fort. Les stations à faible signal doivent être réglées manuellement.

ANTENNE**

Pour une meilleure réception FM, déployez complètement le fil d'antenne FM. Pour la réception AM, l'unité utilise une antenne interne ; tournez l'appareil pour améliorer la réception.

ENREGISTRER UNE STATION RADIO**

1. Réglez la radio sur la station souhaitée.
2. Appuyez et maintenez le bouton **"CLK/MEM"** pendant environ 1 seconde, l'écran affichera **"P01"** en clignotant. La station sera enregistrée.
3. Vous pouvez enregistrer jusqu'à **"10 stations AM"** et **"10 stations FM"**.

ÉCOUTER UNE STATION ENREGISTRÉE**

1. Appuyez sur **"ALM OFF/SOURCE"** pour choisir le mode **"FM"** ou **"AM"**.
2. Appuyez sur **"CLK/MEM"** pour accéder à la station mémorisée.

FONCTION SLEEP (MUSIQUE POUR S'ENDORMIR)**

1. Cette fonction vous permet d'écouter la radio avant de vous endormir.
2. Appuyez sur le bouton **"SNOOZE/SLEEP"** ; l'écran affiche par défaut 90 minutes.
3. Appuyez de nouveau sur le bouton pour régler la durée de veille souhaitée.
4. Les options disponibles sont : 90 - 80 - 70 - 60 - 50 - 40 - 30 - 20 - 10 minutes ou OFF.
5. Vous pouvez maintenant écouter la radio pendant la durée définie.
6. À la fin de ce temps, l'appareil s'éteindra automatiquement.

FONCTIONNEMENT BLUETOOTH**

1. Appuyez sur **"ALM OFF/SOURCE"** pour sélectionner le mode **"Bluetooth"**.
2. L'écran affiche **"bt"** et l'indicateur Bluetooth clignote.
3. Activez le Bluetooth de votre appareil et recherchez **"QFX CR-35"**. Sélectionnez-le pour établir la connexion.
4. Une fois connecté, l'indicateur Bluetooth reste allumé et l'appareil affichera que Bluetooth est connecté.
5. Lancez la lecture audio via votre appareil Bluetooth.
6. Appuyez sur **">>/HR"** pour passer à la piste suivante.
7. Appuyez sur le bouton **"<</HR"** pour revenir à la piste précédente.
8. Appuyez sur **"CLK/MEM/ BT PAIR/TIME S"** pour mettre en pause.
9. Appuyez à nouveau pour reprendre la lecture.
10. Appuyez sur **"ALM1/VOL+"** pour augmenter le volume, **"ALM2/VOL-"** pour le baisser.

Appairage automatique Bluetooth

Une fois jumelé, l'appareil se reconnectera automatiquement à ce même appareil Bluetooth lors des prochaines utilisations.

Déjumeler un appareil Bluetooth

Appuyez et maintenez le bouton **"CLK/MEM/ BT PAIR/TIME S"** pour rechercher une nouvelle connexion. L'indicateur **"BT"** clignotera.

SYNCHRONISATION AUTOMATIQUE DE L'HEURE PAR BLUETOOTH**

Une fois le Bluetooth connecté, l'heure du téléphone se synchronisera automatiquement avec l'horloge.

Pour désactiver la synchronisation automatique :

En mode horloge, maintenez le bouton **"CLK/MEM/ BT PAIR/TIME S"** pendant environ 10 secondes jusqu'à ce que l'écran affiche **"S_n"**. La fonction est alors désactivée.

Pour réactiver la synchronisation automatique :

En mode horloge, maintenez de nouveau le bouton pendant 10 secondes jusqu'à ce que l'écran affiche **"S_y"**.

CONNEXION ENTRÉE AUXILIAIRE (AUX IN)**

1. Branchez une extrémité du câble audio (jack 3,5 mm, non fourni) dans la sortie audio de votre appareil (MP3, etc.) et l'autre dans l'entrée AUX de l'unité.
2. Appuyez sur **"ALM OFF/SOURCE"** pour sélectionner le mode AUX. « AUX » s'affichera brièvement.
3. Allumez votre appareil audio et suivez ses instructions de lecture.
4. Pour arrêter, éteignez simplement votre lecteur MP3.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

 support@qfxusa.com
 (800) 864-CLUB (2582) or (323) 457-9900
 qfxusa.com
 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2025 ©


1-800-864-2582
Mon-Fri 9AM - 5PM (PST)


support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your CR-35 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

