

黑白印 折页 三版一面 双面印刷 128g铜版纸印刷

QFX BT-2012 INSTRUCTION MANUAL	QFX BT-2012 GUIDE/GUÍA/GUIDE Features - Telescopic Antenna - Play/Pause/Mode Button - ON/OFF Button/Light Button - Volume Down/Previous Track - Volume Up/Next Track - USB Slot - TF Card Slot - Charging Port Características - Antena telescópica - Botón de reproducción/pausa/Botón de luz - Botón de encendido/apagado/modo de luz - Bajar volumen/pista anterior - Subir volumen/pista siguiente - Ranura USB - Ranura para tarjeta TF - Puerto de carga Caractéristiques - Antenne télescopique - Bouton Lecture/Pause/Mode - Bouton Marche/Arrêt/Bouton lumineux - Volume -/Piste précédente - Volume +/Piste suivante - Port USB - Port pour carte TF - Port de charge	QFX BT-2012 GUIDE/GUÍA/GUIDE Powering Speaker / Turning Speaker Lights On/Off Press and hold the ON/OFF button to turn on/off the speaker. Pairing - Turn on the speaker. - A sound will play to indicate it is in Bluetooth mode. - Enable Bluetooth on your source device (e.g., phone, tablet, or computer). - Start a Bluetooth device search on your source device. - Wait for "QFX BT-2012" to appear in the list of available devices. - Select "QFX BT-2012" to pair and connect. <i>Once connected, you're ready to play audio through the speaker.</i> TWS function: Double press "-" for TWS connection and TWS disconnection. Play/Pause/Mode Button: - Press the button to play or pause the music. - Press and hold the button to change to BT/USB/TF/FM mode. Volume up/Next song Button: - Press to change to next music. - Press and hold to increase the volume. Volume down/Previous Button: - Press to change to previous music. - Press and hold to decrease the volume. FM mode: - Switch to FM mode on the speaker. - Press the Play/Pause button to start automatic frequency scanning. The speaker will begin searching for available FM stations. - To stop the auto-scan, press the Play/Pause button again. All found stations will be saved automatically. - To browse saved stations, short press the "+" or "-" buttons to switch between channels. - To adjust the volume, Press and hold the "+" or "-" buttons. TF card & USB mode: - Insert the TF Card or USB drive into the appropriate slot. Music will play automatically if MP3 files are detected. - Press and hold the "+" or "-" buttons to adjust the volume. - Press the "+" or "-" buttons to skip to the next or previous track. Charging: Connect the small end of the included charging cable to the charging port on the speaker. Plug the larger end into a USB port on your computer or a USB power adapter (not included). The LED indicator will turn red while charging. Once fully charged, the red LED will turn off.	QFX BT-2012 GUIDE/GUÍA/GUIDE Encendido del altavoz / Encendido y apagado de las luces del altavoz Mantenga pulsado el botón de encendido/apagado para encender o apagar el altavoz. Emparejamiento - Encienda el altavoz. - Se reproducirá un sonido para indicar que está en modo Bluetooth. - Activa el Bluetooth en tu dispositivo de origen (p.ej., teléfono, tableta u ordenador). - Inicia una búsqueda de dispositivos Bluetooth en tu dispositivo de origen. - Espera a que aparezca "QFX BT-2012" en la lista de dispositivos disponibles. - Selecciona "QFX BT-2012" para emparejar y conectar. <i>Una vez conectado, estará listo para reproducir audio a través del altavoz.</i> Función TWS: Presione dos veces "-" para conectar y desconectar TWS Botón de reproducción/pausa/modo: - Pulse el botón para reproducir o pausar la música. - Mantén pulsado el botón para cambiar al modo Bluetooth/USB/TF/FM. Botón Subir volumen/Siguiente canción: - Pulse para cambiar a la siguiente canción. - Mantenga pulsado para subir el volumen. Botón Bajar volumen/Anterior: - Pulse para cambiar a la canción anterior. - Mantenga pulsado para bajar el volumen. Modo FM: - Cambie al modo FM en el altavoz. - Pulse el botón Reproducir/Pausa para iniciar la búsqueda automática de frecuencias. El altavoz comenzará a buscar emisoras FM disponibles. - Para detener la búsqueda automática, vuelva a pulsar el botón Reproducir/Pausa. Todas las emisoras se encontrarán se guardarán automáticamente. - Para explorar las emisoras guardadas, pulse brevemente los botones "+" o "-" para cambiar de canal. - Para ajustar el volumen, mantenga pulsados los botones "+" o "-". Modo Tarjeta TF y USB: - Inserte la tarjeta TF o la unidad USB en la ranura correspondiente. La música se reproducirá automáticamente si se detectan archivos MP3. - Mantenga pulsados los botones "+" o "-" para ajustar el volumen. - Pulse brevemente los botones "+" o "-" para pasar a la pista siguiente o anterior. Carga: Conecta el extremo pequeño del cable de carga incluido al puerto de carga del altavoz. Conecta el extremo grande a un puerto USB de tu ordenador o a un adaptador de corriente USB (no incluido). El indicador LED se iluminará en rojo durante la carga. Una vez cargada por completo, el LED rojo se apagará.
---	---	--	--



BT-2012 GUIDE/GUÍA/GUIDE



Alimentation du haut-parleur / Allumage/extinction des lumières du haut-parleur

Appuyez longuement sur le bouton ON/OFF pour allumer/éteindre l'enceinte.

Appariement

1. Allumez l'enceinte.
2. Un signal sonore retentit pour indiquer qu'elle est en mode Bluetooth.
3. Activez le Bluetooth sur votre appareil source (par exemple, téléphone, tablette ou ordinateur).
4. Lancez une recherche d'appareils Bluetooth sur votre appareil source.
5. Attendez que « QFX BT-2012 » apparaisse dans la liste des appareils disponibles.
6. Sélectionnez « QFX BT-2012 » pour l'appairer et la connecter.

Une fois connecté, vous êtes prêt à diffuser de l'audio via le haut-parleur.

Función TWS: Presione dos veces "-" para conectar y desconectar TWS.

Bouton Lecture/Pause/Mode :

1. Appuyez sur ce bouton pour lire ou mettre en pause la musique.
2. Appuyez longuement sur le bouton pour basculer entre les modes Bluetooth, USB, TF et FM.

Bouton Volume +/-Chanson suivante :

1. Appuyez pour passer au morceau suivant.
2. Maintenez le bouton enfoncé pour augmenter le volume.

Bouton Volume -/Précédent :

1. Appuyez pour revenir au morceau précédent.
2. Maintenez le bouton enfoncé pour baisser le volume.

Mode FM :

1. Passez en mode FM sur l'enceinte.
2. Appuyez sur le bouton Lecture/Pause pour lancer la recherche automatique des fréquences. L'enceinte recherchera les stations FM disponibles.
3. Pour arrêter la recherche automatique, appuyez à nouveau sur le bouton Lecture/Pause. Toutes les stations trouvées seront automatiquement enregistrées.
4. Pour parcourir les stations enregistrées, appuyez brièvement sur les boutons « + » ou « - » pour passer d'une station à l'autre.
5. Pour régler le volume, maintenez les boutons « + » ou « - » enfoncés.

Mode carte TF et USB :

1. Insérez la carte TF ou la clé USB dans le lecteur approprié. La musique sera lue automatiquement si des fichiers MP3 sont détectés.
2. Appuyez sur les boutons « + » ou « - » et maintenez-les enfoncés pour régler le volume.
3. Appuyez brièvement sur les boutons « + » ou « - » pour passer à la piste suivante ou précédente.

Chargement :

Connectez la petite extrémité du câble de charge fourni au port de charge de l'enceinte. Branchez la grande extrémité sur un port USB de votre ordinateur ou un adaptateur secteur USB (non fourni). Le voyant LED devient rouge pendant la charge. Une fois la charge terminée, le voyant rouge s'éteint.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. ("herein after called "QFX") is the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the data stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (I) OF MERCHANTABILITY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR IMPAIRMENT OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY INCLUDING NEGLIGENCE AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FROM ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

The Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid; (2) a detailed description of Customer's problem with Product; (3) Customer's full name, phone number, and e-mail address; (4) all of the accessories that came with the Product package must be sent along with the main Product; (5) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling; if in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earpieces, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereo	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

All prices and details below are for US Destinations excluding Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please send the product you wish to return by air category or model number refs. QFX will provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.



support@qfxusa.com
(800) 864-CLUB (2582) or (323) 457-9900
qfxusa.com



Hours of Operation: Monday - Friday, 9am - 5pm PST

THANK YOU.



We would love to hear about your BT-2012 Journey!
Tag us @QFXUSA to share your stories.

FOLLOW US @QFXUSA








1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com