

MPX-803

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



WARNING/ADVERTENCIA/ATTENTION



WARNING!



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers. Clean only with a dry cloth. Users should exhibit extra safety when this symbol appears in this instruction manual and follow all precautions as they are stated.



¡ADVERTENCIA!



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. NO HAY PARTES REPARABLES POR EL USUARIO ADENTRO. REMITIR TODO SERVICIO A UN TÉCNICO CALIFICADO

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece este símbolo en este manual de instrucciones y seguir todas las precauciones tal como se indican.



WARNING!



POUR RÉDUIRE LE RISQUE DE DÉCHARGE ÉLECTRIQUE, NE RETIREZ PAS LE COUVERCLE DE CETTE ENCEINTE. IL N'Y A AUCUNE PIÈCE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. RÉFÉREZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ

Pour éviter un incendie ou un choc électrique, n'exposez pas cet équipement à la pluie ou à l'humidité. Ne stockez pas ou n'utilisez pas ce produit à proximité de liquides, de sources de chaleur telles que des radiateurs, des registres de chaleur. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de plus de sécurité lorsque ce symbole apparaît dans ce manuel d'instructions et suivre toutes les précautions telles qu'elles sont indiquées..

MPX-803 BATTERY

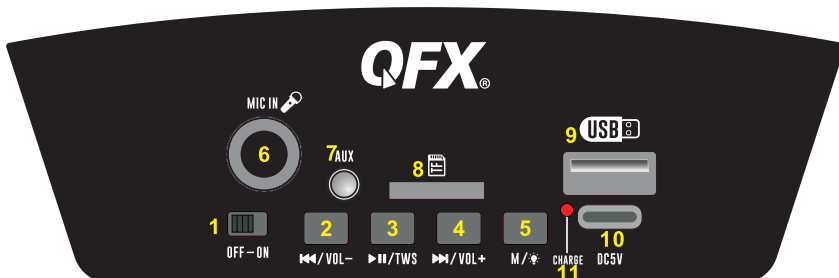
The MPX-803 is a rechargeable battery powered PA loudspeaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging(3-4 hours to fully charge the lithium battery) Even if the battery power is low, it will power on when connected to a power source. When the battery power is charging , the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, Please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When the battery has been depleted , the unit will not play at maximum volume even when it is connected to a power source initially. Please charge the unit for a short while and the volume level will increase while the battery is being restored to its full capacity.

MPX-803 BATERIA

El MPX-803 es un altavoz PA recargable con batería. Asegúrese de cargar completamente la batería antes del primer uso para maximizar su vida útil. Una vez conectado el adaptador de corriente a una fuente de alimentación, comenzará a cargarse automáticamente (de 3 a 4 horas para cargar completamente la batería de litio). Incluso con poca carga, se encenderá al conectarlo a una fuente de alimentación. Mientras se carga, el indicador de batería se ilumina en rojo. Cuando la batería esté completamente cargada, el indicador se apagará. Una vez finalizada la carga, desconecte el altavoz. Cuando no esté en uso, mantenga el altavoz apagado para evitar que la batería se descargue. Si no se utiliza durante periodos prolongados, la batería se descargará gradualmente. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería esté agotada, el altavoz no reproducirá al máximo volumen, incluso al conectarlo a una fuente de alimentación. Cargue el dispositivo durante un breve periodo de tiempo y el nivel de volumen aumentará mientras la batería se recarga a su capacidad máxima.

BATTERIE MPX-803

Le MPX-803 est une enceinte de sonorisation rechargeable. Assurez-vous de charger complètement la batterie avant la première utilisation afin d'optimiser sa durée de vie. Une fois l'adaptateur secteur branché, la charge démarre automatiquement.(3 à 4 heures pour une charge complète de la batterie au lithium). Même avec un niveau de batterie faible, l'enceinte s'allume lorsqu'elle est branchée. Le voyant de la batterie est rouge pendant la charge. Une fois la batterie chargée, le voyant s'éteint. Débranchez l'appareil après la charge. Lorsqu'elle n'est pas utilisée, l'enceinte doit toujours être éteinte afin d'éviter la décharge de la batterie. En cas d'inutilisation prolongée, la batterie se décharge progressivement. Il est recommandé de recharger complètement la batterie au moins tous les 60 jours. Lorsque la batterie est déchargée, l'appareil ne fonctionnera pas au volume maximal, même s'il est branché initialement. Veuillez recharger l'appareil pendant quelques instants ; le volume augmentera progressivement pendant que la batterie se recharge complètement.

**MPX-803 PANEL**

1. Power Switch: ON/OFF
2. Previous Track Button: Press to select previous track; press and hold to decrease volume.
3. Play/Pause Button(TWS connection)
4. Next Track Button: Press to select next track , press and hold to increase volume.
5. Mode Button: Press to toggle between AUX, USB, TF, FM, BT, press and hold to turn light on or off .
6. Microphone Input
7. AUX IN
8. TF Card Slot
9. USB Slot
10. Power Supply: DC 5V
11. Battery Indicator Light

PANEL MPX-803

1. Interruptor de encendido: ON/OFF
2. Botón de pista anterior: Púlselo para seleccionar la pista anterior; manténgalo pulsado para bajar el volumen.
3. Botón de reproducción/pausa (conexión TWS)
4. Botón de pista siguiente: Púlselo para seleccionar la pista siguiente; manténgalo pulsado para subir el volumen.
5. Botón de modo: Púlselo para alternar entre AUX, USB, TF, FM y BT; manténgalo pulsado para encender o apagar la luz.
6. Entrada de micrófono
7. Entrada AUX
8. Ranura para tarjeta TF
9. Ranura USB
10. Alimentación: CC 5 V
11. Indicador de batería

Panneau MPX-803

1. Interrupteur marche/arrêt
2. Bouton Piste précédente : Appuyez pour sélectionner la piste précédente ; maintenez la pression pour diminuer le volume.
3. Bouton Lecture/Pause (connexion TWS)
4. Bouton Piste suivante : Appuyez pour sélectionner la piste suivante ; maintenez la pression pour augmenter le volume.
5. Bouton Mode : Appuyez pour basculer entre AUX, USB, TF, FM et BT ; maintenez la pression pour allumer ou éteindre le voyant.
6. Entrée microphone
7. Entrée AUX
8. Emplacement pour carte TF
9. Port USB
10. Alimentation : 5 V CC
11. Voyant de batterie



MPX-803 OPERATION/OPERACIÓN/OPÉRATION

TWS
TRUE WIRELESS STEREO



Sync two speakers to play audio simultaneously

1. TWS connection: TWS Connection is only for two speakers, can not support quantity over 2 pcs
2. Turn on the Speakers, press the MODE button to switch to BLUETOOTH mode.
3. At the first time, please press the Play/Pause (TWS) button of one unit for 3 seconds. Then two speakers will connect together.
4. Connect the phone: Open the phone Bluetooth settings, Search and Connect the main device Bluetooth Name 'QFX MPX-803'.
5. Select music from phone and enjoy TWS playing in pairs with two Speakers.
6. Exit TWS: Press and Hold the Play/Pause (TWS) button for 3 seconds to exit the TWS function

TWS
TRUE WIRELESS STEREO



Sincroniza dos altavoces para reproducir audio simultáneamente

1. Conexión TWS: la conexión TWS es solo para dos altavoces, no puede admitir una cantidad superior a 2 piezas
2. Encienda los altavoces, presione el botón MODE para cambiar al modo BLUETOOTH.
3. La primera vez, presione el botón Reproducir/Pausar (TWS) de una unidad durante 3 segundos. Entonces dos altavoces se conectarán juntos.
4. Conecte el teléfono: abra la configuración de Bluetooth del teléfono, busque y conecte el nombre de Bluetooth del dispositivo principal 'QFX MPX-803'.
5. Seleccione música desde el teléfono y disfrute de la reproducción de TWS en pares con dos altavoces.
6. Salir de TWS: mantenga presionado el botón Reproducir/Pausar (TWS) durante 3 segundos para salir de la función TWS

TWS
TRUE WIRELESS STEREO



Synchronisez deux haut-parleurs pour lire de l'audio simultanément

1. Connexion TWS : la connexion TWS est uniquement pour deux haut-parleurs, ne peut pas prendre en charge une quantité supérieure à 2 pièces.
2. Allumez les haut-parleurs, appuyez sur le bouton MODE pour passer en mode BLUETOOTH.
3. La première fois, veuillez appuyer sur le bouton Lecture/Pause (TWS) d'une unité pendant 3 secondes. Ensuite, deux haut-parleurs se connecteront ensemble.
4. Connectez le téléphone : ouvrez les paramètres Bluetooth du téléphone, recherchez et connectez le nom Bluetooth de l'appareil principal « QFX MPX-803 ».
5. Sélectionnez la musique du téléphone et profitez de TWS en jouant par paires avec deux haut-parleurs.
6. Quitter TWS : appuyez longuement sur le bouton Lecture/Pause (TWS) pendant 3 secondes pour quitter la fonction TWS

MPX-803 SYSTEM SETTINGS

1. Input Mode: When a USB flash drive / TF Card is inserted into the USB/TF input, the unit will automatically switch to USB/TF mode and begin playing Mp3 audio files from the USB flash drive /TF Card.
2. FM Mode: Short Press "play/pause" button for auto scan all channels.

MPX-803 AJUSTES DEL SISTEMA

1. Modo de entrada: Cuando se inserta una unidad de tarjeta de memoria flash USB / TF en la entrada USB /TF, la unidad automáticamente cambiar al modo USB /TF y comenzará la reproducción de archivos de audio .mp3 del flash USB Card unidad / Tarjeta TF.
2. Modo FM: Pulse brevemente el botón "reproducir/pausar" para realizar una búsqueda automática de todos los canales.

RÉGLAGES SYSTÈME MPX-803

1. Mode d'entrée : Lorsqu'une clé USB ou une carte TF est insérée dans l'entrée USB/TF, l'appareil bascule automatiquement en mode USB/TF et lit les fichiers audio MP3 depuis la clé USB ou la carte TF.
2. Mode FM : Appuyez brièvement sur le bouton « Lecture/Pause » pour lancer la recherche automatique des stations.

BLUETOOTH

BLUETOOTH MODE: use the MODE button to enable Bluetooth on the MPX-803. Open the Bluetooth settings on your mobile device and search for QFX MPX-803. Select the option to pair both devices. Now you can sit back and enjoy the music from your favorite app. You will not need to reconnect Bluetooth when changing modes.

MODE BLUETOOTH: use el botón MODE para habilitar Bluetooth en el MPX-803. Abra la configuración de Bluetooth en su dispositivo móvil y busque QFX MPX-803. Seleccione la opción para emparejar ambos dispositivos. Ahora puede sentarse y disfrutar de la música de su aplicación favorita. No necesitará volver a conectar el Bluetooth al cambiar de modo.

MODE BLUETOOTH: utilisez le bouton MODE pour activer Bluetooth sur le MPX-803. Ouvrez les paramètres Bluetooth sur votre appareil mobile et recherchez QFX MPX-803. Sélectionnez l'option pour coupler les deux appareils. Vous pouvez maintenant vous asseoir et profiter de la musique de votre application préférée. Vous n'aurez pas besoin de reconnecter Bluetooth lors du changement de mode.



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (I) OF MERCHANTABILITY, (II) OF FITNESS FOR A PARTICULAR PURPOSE, OR (III) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

✉ support@qfxusa.com
☎ (800) 864-CLUB (2582) or (323) 457-9900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID, EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY. QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your MPX-803 journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

