

RETRO-30

QFX

WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítir todo servicio a un técnico calificado

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.




This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AOMX-BTR4567

FUNCTIONS

1. PREVIOUS TRACK
2. NEXT TRACK
3. STOP
4. PROGRAM / TX
5. ON/OFF AND PLAY/PAUSE
6. REPEAT AND BLUETOOTH.
7. VOLUME -
8. VOLUME +
9. DISPLAY
10. HOLD ON / OFF
11. LINE OUT JACK
12. HEADPHONE JACK
13. USB-C DC 5V IN
14. BUILT-IN SPEAKER
15. OPEN CD DOOR
16. BATTERY COMPARTMENT

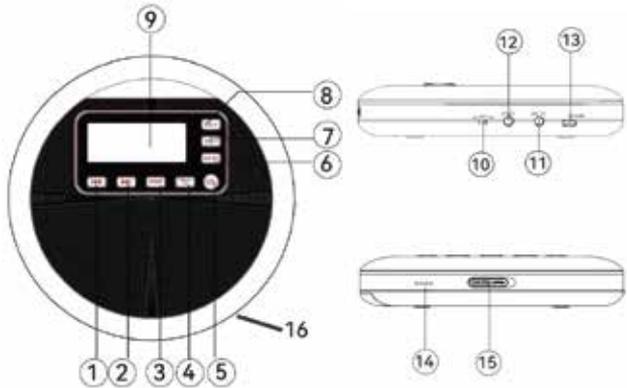

POWER SOURCE

Connect from a USB-C powered source to the USB-C DC 5v in jack to charge rechargeable battery or open the battery compartment and insert 2 x "AA" batteries (batteries not included). Press and hold the "on/off" button to turn power on. The LCD will turn on. To turn the power off, press and hold "on/off" button.

HOLD FUNCTION

When the switch is set to the "no" position, all function will locked. The display will show "hold". Pressing any key will have no effect until the hold switch is set to the "off" position.

ADJUSTING THE SOUND

To adjust the volume, press the "volume + or -" buttons on control panel of the cd player.

BLUETOOTH RECIEVER

Press and hold the "bluetooth" button. The display will show "blue" and to pair the player with your bluetooth-enabled device, search and connect to "QFX RETRO-30" and enjoy music over bluetooth.

CONNECT AN EARPHONE OR HEADPHONES

You can connect an earphone or headphones to enjoy private listening. if earphone/headphones are not plugged in, the cd player will use its built-in speaker to play the music instead.

BLUETOOTH TRANSMITTER (TX) FUNCTION

You can connect wirelessly to any bluetooth-enabled earphones, headphones or speaker. Press and hold the "tx" button, this will search to pair the right bluetooth headphone or speaker.

ESP FUNCTION

- 60 seconds anti-shock for cd
- 120 seconds anti-shock for cd-mp3

RECHARGING

Connect the included USB-C cable to a powered USB port. The display will show the battery level.

PLAYING CD, CD-R, CD-RW, MP3-CD AND WMA CD FORMATS

Press and hold the "on/off" button to turn power on. Lift the CD cover to insert a CD and close the cover.

Press the "play/pause" button, the disc will start to spin while the CD player reads the track information. Then it will begin playing track 1.

(Note: If the display shows "no disc" message, it means the CD player cannot read the disc or no disc has been inserted. Open the cover and make sure the disc is properly positioned with the CD label facing up. This unit supports CD, CD-R, CD-RW, MP3-CD and WMA CD formatted discs.)

To play playback, press the "play/pause" button, press it again to restart. To stop playing the disc, press the "stop" button.

To play a specific track, press the "stop" button, and then press one of the "next" buttons repeatedly until the display shows the desired track number.

Then press the "play/pause" button. (If the disc is already playing, pressing "next" button will immediately advance the player to the next track.)

To repeat a track, press the "repeat" button once. The display will show "repeat", and the track will play again.

To repeat all the tracks on the CD, press the "repeat" button again. The display will show "repeat all" and the CD will start over again when it reaches the end.

To random play all the tracks on the CD, press the "repeat" button three times. The display will show "random" and the CD will randomly play the tracks.

To hear the intro of all CD tracks, press the "repeat" button four times. The display will show "intro" and the CD will play the track for 10 seconds and then skip to the next song.


To cancel, press the "repeat" button repeatedly until the display is cleared. To program all the tracks on the CD, press the "stop" button, and then press the "program" button. The display will show "prog 001 p01".

Please press "next" or "prev" button to choose the song, and then press "program" button to save your song on p01. Repeat the above step to program your songs. Press "play" button to play program songs.

Press "stop" button to cancel program songs. To fast-forward or backward within the same track, press and hold the "previous" or "next" button.

FUNCIONES

1. PISTA ANTERIOR
2. PISTA SIGUIENTE
3. STOP
4. PROGRAMAR / TX
5. ENCENDIDO/APAGADO Y REPRODUCIR/PAUSA
6. REPETIR Y BLUETOOTH
7. VOLUMEN -
8. VOLUMEN +
9. PANTALLA
10. MANTENER ENCENDIDO / APAGADO
11. SALIDA DE LÍNEA
12. JACK DE AURICULARES
13. ENTRADA USB-C DC 5V
14. ALTAVOZ INCORPORADO
15. ABRIR PUERTA DEL CD
16. COMPARTIMIENTO DE BATERÍAS

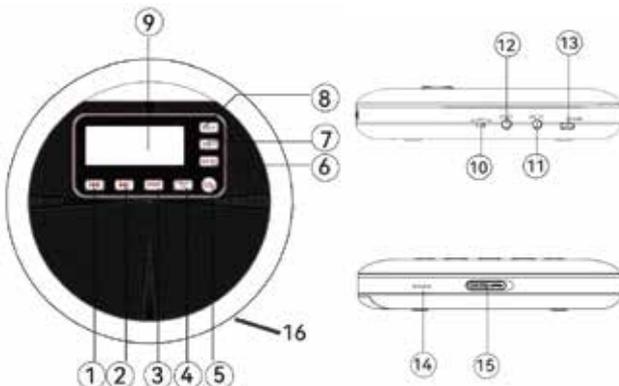

FUENTE DE ALIMENTACIÓN

Conecte una fuente de alimentación USB-C al conector USB-C de 5 V CC para cargar la batería recargable o abra el compartimento de la batería e inserte 2 pilas AA (pilas no incluidas). Mantenga pulsado el botón de encendido/apagado para encender el reproductor. La pantalla LCD se encenderá. Para apagarlo, mantenga pulsado el botón de encendido/apagado.

FUNCION DE RETENCIÓN

Cuando el interruptor esté en la posición "no", todas las funciones se bloquearán. La pantalla mostrará "hold". Pulsar cualquier tecla no tendrá efecto hasta que el interruptor de retención esté en la posición "off".

AJUSTE DEL SONIDO

Para ajustar el volumen, pulse los botones de volumen + o - en el panel de control del reproductor de CD.

RECEPTOR BLUETOOTH

Mantenga presionado el botón "Bluetooth". La pantalla se iluminará en azul. Para emparejar el reproductor con su dispositivo Bluetooth, busque "QFX RETRO-30" y conéctese para disfrutar de su música por Bluetooth.

CONECTAR AURICULARES

Puede conectar auriculares para disfrutar de una escucha privada. Si no están conectados, el reproductor de CD usará su altavoz integrado para reproducir la música.

FUNCION TRANSMISOR BLUETOOTH (TX)

Puede conectarse de forma inalámbrica a cualquier auricular o altavoz Bluetooth. Mantenga presionado el botón "tx" para emparejar el auricular o altavoz Bluetooth adecuado.

FUNCION ESP

Anti-choque de 60 segundos para CD
Anti-choque de 120 segundos para CD-MP3

RECARGA


Conecte el cable USB-C incluido a un puerto USB con alimentación. La pantalla mostrará el nivel de batería.

Reproducción de formatos CD, CD-R, CD-RW, MP3-CD y WMA

Mantenga pulsado el botón de encendido/apagado para encender la unidad. Levante la tapa del CD para insertar un CD y ciérrala. Pulse el botón de reproducción/pausa; el disco comenzará a girar mientras el reproductor lee la información de la pista. A continuación, comenzará a reproducir la pista 1. (Nota: Si la pantalla muestra el mensaje "no hay disco", significa que el reproductor no puede leer el disco o que no se ha insertado ningún disco. Abra la tapa y asegúrese de que el disco esté correctamente colocado con la etiqueta hacia arriba. Esta unidad admite discos con formato CD, CD-R, CD-RW, MP3-CD y WMA). Para pausar la reproducción, pulse el botón de reproducción/pausa y vuelva a pulsarlo para reiniciar. Para detener la reproducción del disco, pulse el botón de parada. Para reproducir una pista específica, pulse el botón de parada y, a continuación, pulse uno de los botones de siguiente repetidamente hasta que la pantalla muestre el número de la pista deseada. Luego presione el botón "Reproducir/Pausa". (Si el disco ya se está reproduciendo, al presionar el botón "Siguiente", el reproductor avanzará inmediatamente a la siguiente pista). Para repetir una pista, presione el botón "Repetir" una vez. La pantalla mostrará "Repetir" y la pista se reproducirá de nuevo. Para repetir todas las pistas del CD, presione el botón "Repetir" nuevamente. La pantalla mostrará "Repetir todo" y el CD comenzará de nuevo al llegar al final. Para reproducir aleatoriamente todas las pistas del CD, presione el botón "Repetir" tres veces. La pantalla mostrará "Aleatorio" y el CD reproducirá las pistas aleatoriamente. Para escuchar la intro de todas las pistas del CD, presione el botón "Repetir" cuatro veces. La pantalla mostrará "Intro" y el CD reproducirá la pista durante 10 segundos y luego saltará a la siguiente canción. Para cancelar, presione el botón "Repetir" repetidamente hasta que la pantalla se borre. Para programar todas las pistas del CD, pulse el botón "stop" y luego el botón "program". La pantalla mostrará "prog 001 p01". Pulse el botón "next" o "prev" para seleccionar la canción y luego pulse el botón "program" para guardarla en p01. Repita el paso anterior para programar las canciones. Pulse el botón "play" para reproducir las canciones programadas. Pulse el botón "stop" para cancelar las canciones programadas. Para avanzar o retroceder rápidamente dentro de la misma pista, mantenga pulsado el botón "previous" o "next".

FONCTIONS

1. PISTE ANTÉRIEURE
2. PISTE SUIVANTE
3. ARRÊT
4. PROGRAMMATION / TX
5. ENCENDIDO/APAGADO Y REPRODUCIR/PAUSA
6. RÉPÉTITION BLUETOOTH
7. VOLUME -
8. VOLUMES +
9. PANTALON
10. MANTENER ENCENDIDO / APAGADO
11. SALIDE DE LIGNE
12. JACK DE AURICULAIRES
13. ENTRADA USB-C DC 5V
14. ALTAVOZ INCORPORADO
15. ABRIR PUERTA DEL CD
16. COMPARTIMENT DE BATTERIES

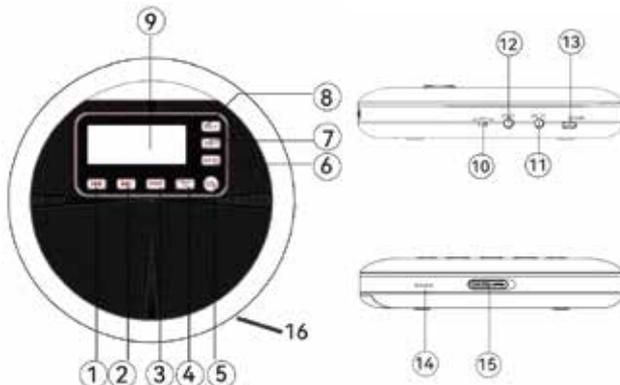

ALIMENTATION

Pour recharger la batterie, branchez un adaptateur secteur USB-C au port USB-C 5 V CC ou ouvrez le compartiment à piles et insérez deux piles AA (non fournies). Appuyez longuement sur le bouton d'alimentation pour allumer le lecteur. L'écran LCD s'allume. Pour l'éteindre, appuyez longuement sur le bouton d'alimentation.

FONCTION DE VERROUILLAGE

Lorsque l'interrupteur est en position « arrêt », toutes les fonctions sont verrouillées. L'écran affiche « verrouillage ». Appuyer sur une touche est sans effet tant que le verrouillage est activé.

RÉGLAGE DU SON

Pour régler le volume, utilisez les boutons + et - du panneau de commande du lecteur CD.

RÉCEPTEUR BLUETOOTH

Appuyez longuement sur le bouton « Bluetooth ». L'écran s'allume en bleu. Pour jumeler le lecteur avec votre appareil Bluetooth, recherchez « QFX RETRO-30 » et connectez-vous pour écouter votre musique via Bluetooth.

CONNEXION D'UN CASQUE

Vous pouvez connecter un casque pour une écoute privée. Si aucun casque n'est connecté, le lecteur CD utilisera son haut-parleur intégré pour diffuser la musique.

FONCTION ÉMETTEUR BLUETOOTH (TX)

Vous pouvez vous connecter sans fil à n'importe quel casque ou enceinte Bluetooth. Appuyez longuement sur le bouton « TX » pour jumeler le lecteur avec le casque ou l'enceinte Bluetooth compatible.

FONCTION ESP

Protection antichoc de 60 secondes pour les CD
Protection antichoc de 120 secondes pour les CD MP3

RECHARGEMENT

Connectez le câble USB-C fourni à un port USB alimenté. L'écran affichera le niveau de la batterie.

Lecture des formats CD, CD-R, CD-RW, CD MP3 et WMA

Pour allumer l'appareil, maintenez le bouton « marche/arrêt » enfoncé. Soulevez le couvercle du lecteur pour insérer un CD, puis refermez-le. Appuyez sur le bouton « lecture/pause ». Le disque se met à tourner pendant que le lecteur lit les informations de la piste. La lecture de la piste 1 commence ensuite. (Remarque : si l'écran affiche le message « aucun disque », cela signifie que le lecteur ne peut pas lire le disque ou qu'aucun disque n'est inséré. Ouvrez le couvercle et assurez-vous que le disque est correctement positionné, l'étiquette vers le haut. Cet appareil est compatible avec les disques aux formats CD, CD-R, CD-RW, CD MP3 et WMA.) Pour mettre la lecture en pause, appuyez sur le bouton « lecture/pause ». Appuyez de nouveau dessus pour reprendre la lecture. Pour arrêter la lecture, appuyez sur le bouton « arrêt ».

Pour lire une piste spécifique, appuyez sur le bouton « arrêt », puis appuyez plusieurs fois sur l'un des boutons « suivant » jusqu'à ce que l'écran affiche le numéro de la piste souhaitée. Appuyez ensuite sur le bouton « lecture/pause ». (Si le disque est déjà en lecture, appuyer sur le bouton « suivant » permet de passer immédiatement à la piste suivante.) Pour répéter une piste, appuyez une fois sur le bouton « répéter ». L'écran affichera « répéter » et la piste sera lue à nouveau. Pour répéter toutes les pistes du CD, appuyez de nouveau sur le bouton « répéter ». L'écran affichera « tout répéter » et le CD recommencera à la fin. Pour lire toutes les pistes du CD de manière aléatoire, appuyez trois fois sur le bouton « répéter ». L'écran affichera « aléatoire » et le CD lira les pistes de manière aléatoire. Pour écouter l'introduction de toutes les pistes du CD, appuyez quatre fois sur le bouton « répéter ». L'écran affichera « intro » et le CD lira la piste pendant 10 secondes, puis passera à la piste suivante. Pour annuler, appuyez plusieurs fois sur le bouton « répéter » jusqu'à ce que l'affichage disparaisse. Pour programmer toutes les pistes du CD, appuyez sur le bouton « arrêt », puis sur le bouton « programmer ». L'écran affichera « prog 001 p01 ». Appuyez sur les boutons « suivant » ou « précédent » pour sélectionner le morceau, puis sur le bouton « programmer » pour l'enregistrer sur p01. Répétez cette étape pour programmer vos morceaux. Appuyez sur le bouton « lecture » pour écouter les morceaux programmés. Appuyez sur le bouton « arrêt » pour annuler la lecture. Pour avancer ou reculer rapidement dans le même morceau, maintenez enfoncé le bouton « précédent » ou « suivant ».



LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at www.qfxusa.com for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

QFX USA®, Inc.
RMA Processing
Customer Support Department
2957 E. 46th Street | Vernon, CA 90058

✉ support@qfxusa.com
☎ (800) 864-CLUB (2582) or (323) 457-9900
🌐 qfxusa.com
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©



1-800-864-2582
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com
Mon-Fri 9AM - 5PM (PST)



www.qfxusa.com

THANK YOU.

QFX Where the Party Begins!

We would love to hear about your RETRO-30 Journey!
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

