

BT-2026

**QFX**  
WHERE THE PARTY BEGINS™



INSTRUCTION MANUAL



**WARNING!**



**TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE THE COVER ON THIS SPEAKER. THERE ARE NO USER-SERVICEABLE PARTS INSIDE. REFER ALL SERVICING TO A QUALIFIED TECHNICIAN**

To prevent fire or electric shock, do not expose this equipment to rain or moisture. Do not store or operate this product near any liquids, heat sources such as radiators, heat registers or under extreme weather conditions. Clean only with a dry cloth. Users should exhibit extra safety when the WARNING or CAUTION symbol appears in this instruction manual and follow all precautions as they are stated.



**¡ADVERTENCIA!**



**PARA REDUCIR EL RIESGO DE DESCARGA ELÉCTRICA, NO quite la cubierta de este altavoz. No hay partes reparables por el usuario adentro. Remítir todo servicio a un técnico calificado**

Para evitar incendios o descargas eléctricas, no exponga este equipo a la lluvia ni a la humedad. No almacene ni opere este producto cerca de líquidos, fuentes de calor como radiadores, registros de calor o bajo condiciones climáticas extremas. Limpiar solamente con un paño seco. Los usuarios deben mostrar una seguridad adicional cuando aparece el símbolo de ADVERTENCIA o PRECAUCIÓN en este manual de instrucciones y seguir todas las precauciones tal como se indican.



**AVERTISSEMENT !**



**POUR RÉDUIRE LE RISQUE DE CHOC ÉLECTRIQUE, NE RETIREZ PAS LE CAPOT DE CET ENCEINTE. IL N'Y A AUCUNE PARTIE RÉPARABLE PAR L'UTILISATEUR À L'INTÉRIEUR. CONFIEZ TOUTE RÉPARATION À UN TECHNICIEN QUALIFIÉ.**

Pour éviter les incendies ou les chocs électriques, n'exposez pas cet appareil à la pluie ou à l'humidité. Ne stockez ni n'utilisez ce produit à proximité de liquides, de sources de chaleur comme des radiateurs, des registres de chaleur ou dans des conditions climatiques extrêmes. Nettoyez uniquement avec un chiffon sec. Les utilisateurs doivent faire preuve de prudence lorsqu'ils voient le symbole d'AVERTISSEMENT ou de PRÉCAUTION dans ce manuel d'instructions et suivre toutes les précautions telles qu'indiquées.

## BATTERY

The BT-2026 is a rechargeable battery powered speaker. Be sure that you have completely charged the battery prior to first use to maximize the battery's lifespan. Once the power adaptor is connected to a power source, it will automatically begin charging (8 hours to fully charge the battery) Even if the battery power is low, it will power on when connected to a power source. When the battery is charging, the battery indicator light is red. When the battery charge fully, the indicator light will turn off. Upon completion of the charging, please disconnect the unit. When not in use, the speaker should always be set OFF to prevent the unit from draining the battery. When the unit is not used for prolonged periods of time, the battery will gradually lose its power. It is recommended to fully charge the battery at least every 60 days. When battery is completely empty, the unit cannot perform at 100% of the volume when immediately connected to power source. It is suggested to charge for a while before using with 100% volume. The unit may work and charge with lower-level volume. The volume level would be increased as the unit is charging.

## BATERÍA

El BT-2026 es un altavoz que funciona con batería recargable. Asegúrese de haber cargado completamente la batería antes del primer uso para maximizar su vida útil. Una vez que el adaptador de corriente esté conectado a una fuente de alimentación, comenzará a cargarse automáticamente (8 horas para cargar completamente la batería). Incluso si la energía de la batería es baja, se encenderá al conectarse a una fuente de alimentación. Cuando la batería se está cargando, la luz indicadora de batería es roja. Cuando la batería está completamente cargada, la luz indicadora se apagará. Una vez completada la carga, desconecte la unidad. Cuando no esté en uso, el altavoz siempre debe estar APAGADO para evitar que la unidad descargue la batería. Cuando la unidad no se utiliza durante períodos prolongados de tiempo, la batería perderá gradualmente su energía. Se recomienda cargar completamente la batería al menos cada 60 días. Cuando la batería está completamente descargada, la unidad no puede funcionar al 100% del volumen cuando se conecta inmediatamente a la fuente de alimentación. Se sugiere cargar durante un tiempo antes de usar con el volumen al 100%. La unidad puede funcionar y cargarse con un volumen de nivel más bajo. El nivel de volumen aumentará a medida que la unidad se carga.

## BATTERIE


Le BT-2026 Il s'agit d'une enceinte rechargeable. Assurez-vous de charger complètement la batterie avant la première utilisation afin d'optimiser sa durée de vie. Une fois l'adaptateur secteur branché, la charge démarre automatiquement (8 heures pour une charge complète). Même si le niveau de la batterie est faible, l'enceinte s'allume dès qu'elle est branchée. Pendant la charge, le voyant de la batterie est rouge. Une fois la charge terminée, le voyant s'éteint. Après la charge, débranchez l'appareil. Lorsqu'il n'est pas utilisé, l'enceinte doit toujours être éteinte pour éviter que la batterie ne se décharge. En cas d'utilisation prolongée, la batterie se décharge progressivement. Il est recommandé de la recharger complètement au moins tous les 60 jours. Lorsque la batterie est complètement déchargée, l'enceinte ne peut pas fonctionner à 100 % du volume dès qu'elle est branchée. Il est conseillé de la charger quelques instants avant d'utiliser le volume maximal. L'enceinte peut fonctionner et se charger à un volume réduit. Le volume augmente progressivement pendant la charge.



This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

FCC ID: 2AOMX-132639

1. POWER
2. MODE
3. LIGHT
4. VOLUME- / PREVIOUS TRACK
5. PLAY/PAUSE
6. VOLUME+/NEXT TRACK
7. USB-C CHARGE INPUT
8. TF CARD SLOT
9. USB MUSIC SLOT
10. AUX-IN PORT

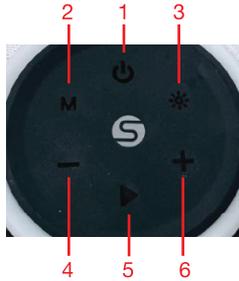

### Bluetooth Device Connect

#### Bluetooth Mode Instructions

1. After switching to Bluetooth mode, the speaker will emit a sound indicating it is ready to connect.
2. The speaker ID "QFX BT-2026" will appear on other Bluetooth devices.
3. Once connected, you can play music through the speaker.
4. The speaker will automatically reconnect to the last paired device when switched to Bluetooth mode.

#### If there is no sound after connecting:

- Check the Bluetooth settings on your device.
- Make sure the audio output/source is set to the speaker.
- Button Functions

#### "-" Button:

- Press and hold to decrease volume.
- Press briefly to go to the previous track.

#### "+" Button:

- Press and hold to increase volume.
- Press briefly to go to the next track.

#### Power Button:

- Press and hold to turn the speaker on or off.

Press M button for changing mode.

Press button for play/pause. Double-click to call back. Press to answer/end a call. Long press for 2 seconds to reject a call.

#### AUX:

Connect other audio sources such as PC, CD, DVD, MP3, iPad, iPhone, etc. to the audio-in jack using a 3.5 mm cable. It will enter AUX mode automatically.

#### TF, USB mode

Connect a TF card or USB drive to the speaker; it will play the music from the TF card or USB drive automatically. Keep pressing the - button for volume down; press this button shortly for the previous music track. Keep pressing the + button for volume up; press this button shortly for the next music track. Press the M button shortly to change working mode.

#### TWS pairing:

Two speakers can pair together and connect with a mobile phone under a single ID name (QFX-BT-2026), providing true wireless stereo sound. Long press the M button and it will search for the other speaker to pair. After pairing, a sound will confirm the connection.

Then you can connect your mobile phone and enjoy TWS music.


#### Charge:

Connect the USB power cable to the Type-C USB port of a computer or other USB power source. A red LED light indicates the speaker is charging; the light turns off when it is fully charged.

#### FM PLAY

Turn on the speaker and short press the M button to switch to radio mode. Long press the button for auto channel search.

1. ENERGÍA
2. MODA
3. LIGERA
4. VOLUMEN / PISTA ANTERIOR
5. REPRODUCIR/PAUSA
6. VOLUMEN/SIGUIENTE PISTA
7. ENTRADA DE CARGA USB-C
8. RANURA PARA TARJETA TF
9. RANURA USB PARA MÚSICA
10. PUERTO AUX-IN

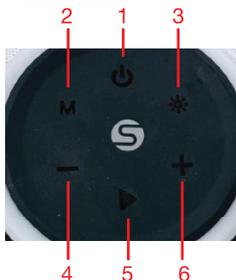

## Conexión de dispositivo Bluetooth

### Instrucciones del modo Bluetooth

1. Tras cambiar al modo Bluetooth, el altavoz emitirá un sonido indicando que está listo para conectarse.
2. El ID del altavoz "QFX BT-2026" aparecerá en otros dispositivos Bluetooth.
3. Una vez conectado, podrá reproducir música a través del altavoz.
4. El altavoz se reconectará automáticamente al último dispositivo emparejado al cambiar al modo Bluetooth.

### Si no hay sonido después de la conexión:

- Verifique la configuración de Bluetooth en su dispositivo.
- Asegúrese de que la salida/fuente de audio esté configurada en el altavoz.
- Funciones de los botones

### Botón "-":

- Manténgalo presionado para bajar el volumen.
- Púlselo brevemente para ir a la pista anterior.

### Botón "+":

- Manténgalo presionado para subir el volumen.
- Púlselo brevemente para ir a la siguiente pista.

### Botón de encendido:

- Manténgalo presionado para encender o apagar el altavoz.

Pulsa el botón M para cambiar de modo.

Pulsa el botón para reproducir/pausar. Haz doble clic para devolver la llamada. Pulsa para responder/terminar una llamada. Mantén pulsado 2 segundos para rechazar una llamada.

### AUX:

Conecta otras fuentes de audio como PC, CD, DVD, MP3, iPad, iPhone, etc. a la entrada de audio mediante un cable de 3,5 mm. Entrará en modo AUX automáticamente.

### Modo TF/USB:

Conecta una tarjeta TF o una unidad USB al altavoz; la música se reproducirá automáticamente desde la tarjeta TF o la unidad USB. Mantén pulsado el botón - para bajar el volumen; pulsa este botón brevemente para ir a la pista anterior. Mantén pulsado el botón + para subir el volumen; pulsa este botón brevemente para ir a la siguiente pista. Pulsa brevemente el botón M para cambiar de modo.

### Emparejamiento TWS:

Dos altavoces se pueden emparejar y conectar con un teléfono móvil con un solo ID (QFX-BT-2026), lo que proporciona un auténtico sonido estéreo inalámbrico. Mantén pulsado el botón M y buscará el otro altavoz para emparejar. Tras el emparejamiento, un sonido confirmará la conexión. Después, puedes conectar tu teléfono móvil y disfrutar de la música TWS.

### Carga:

Conecta el cable de alimentación USB al puerto USB tipo C de una computadora u otra fuente de alimentación USB. Una luz LED roja indica que el altavoz se está cargando; la luz se apaga cuando está completamente cargado.

### REPRODUCCIÓN FM

Enciende el altavoz y pulsa brevemente el botón M para cambiar al modo radio. Mantén pulsado el botón para la búsqueda automática de canales.

1. MARCHE/ARRÊT
2. MODE
3. LUMIÈRE
4. VOLUME - / PISTE PRÉCÉDENTE
5. LECTURE/PAUSE
6. VOLUME + / PISTE SUIVANTE
7. ENTRÉE DE CHARGE USB-C
8. EMPLACEMENT POUR CARTE TF
9. EMPLACEMENT USB POUR LECTEUR MUSICAL
10. PORT AUXILIAIRE



### Connexion d'appareil Bluetooth

#### Instructions pour le mode Bluetooth

1. Après avoir activé le mode Bluetooth, l'enceinte émet un son indiquant qu'elle est prête à se connecter.
2. L'identifiant de l'enceinte « QFX BT-2026 » s'affichera sur les autres appareils Bluetooth.
3. Une fois connectée, vous pouvez écouter de la musique via l'enceinte.
4. L'enceinte se reconnectera automatiquement au dernier appareil appairé lors du passage en mode Bluetooth.

#### Si aucun son n'est émis après la connexion :

- Vérifiez les paramètres Bluetooth de votre appareil.
- Assurez-vous que la sortie audio/source est bien configurée sur l'enceinte.
- Fonctions des boutons

#### Bouton « - » :

- Appuyez longuement pour diminuer le volume.
- Appuyez brièvement pour passer à la piste précédente.

#### Bouton « + » :

- Appuyez longuement pour augmenter le volume.
- Appuyez brièvement pour passer à la piste suivante.

#### Bouton Marche/Arrêt :

- Appuyez longuement pour allumer ou éteindre l'enceinte.

Appuyez sur le bouton M pour changer de mode.

Appuyez sur le bouton pour lire/mettre en pause. Double-cliquez pour rappeler. Appuyez pour répondre/raccrocher. Maintenez la pression pendant 2 secondes pour rejeter un appel.

#### AUX :

Connectez d'autres sources audio (PC, CD, DVD, MP3, iPad, iPhone, etc.) à l'entrée audio à l'aide d'un câble de 3,5 mm. L'appareil passera automatiquement en mode AUX.

#### Mode TF/USB :

Insérez une carte TF ou une clé USB dans l'enceinte ; la musique sera lue automatiquement. Maintenez le bouton - enfoncé pour baisser le volume ; appuyez brièvement pour revenir au morceau précédent.

Maintenez le bouton + enfoncé pour augmenter le volume ; appuyez brièvement pour revenir au morceau suivant.

Appuyez brièvement sur le bouton M pour changer de mode.

#### Appairage TWS :

Deux enceintes peuvent être appairées et connectées à un téléphone portable sous un seul identifiant (QFX-BT-2026), pour un son stéréo sans fil. Maintenez le bouton M enfoncé pour rechercher l'autre enceinte à appairer. Après l'appairage, un signal sonore confirmera la connexion.

Vous pourrez ensuite connecter votre téléphone et profiter de votre musique TWS.

#### Chargement :

Connectez le câble d'alimentation USB au port USB Type-C d'un ordinateur ou à toute autre source d'alimentation USB. Un voyant LED rouge indique que l'enceinte est en charge ; il s'éteint une fois la charge complète.

#### Écoute FM :

Allumez l'enceinte et appuyez brièvement sur le bouton M pour passer en mode radio. Appuyez longuement sur le bouton pour lancer la recherche automatique des stations.



## LIMITED PRODUCT WARRANTY POLICY

Before returning your Product for service under this Warranty, please (i) read the instruction manual carefully and visit our website at [www.qfxusa.com](http://www.qfxusa.com) for Product updates and extended support documentation (e.g., Common Troubleshooting Guides); (ii) if you are still having trouble with your Product, please contact the QFX Customer Support Department.

Subject to the terms and conditions herein, QFX, Inc. (herein after called "QFX") warrants to the original purchaser of the Product ("Customer") that for the applicable Warranty Period listed below, the Product will be free from defects in material or workmanship under normal, non-commercial use ("Defects").

Warranty Period encompasses, as listed below, separate "Coverage Periods" for Parts and Labor, each Coverage Period to begin from the original date of Customer purchase. If Customer returns a defective Product (or any component thereof) during the applicable Warranty Period, QFX will, at its option, during the specified Coverage Periods for Parts and Labor (as applicable either: (i) repair the Product (or, as applicable, any component thereof) or (ii) replace the Product (or, as applicable, any component thereof) with a new or refurbished Product (or, as applicable, any component thereof), in either case free of charge to Customer for Parts and/or Labor (as applicable) during the specified Coverage Period only, and excluding applicable shipping charges (noted below), for which the Customer is responsible. The foregoing states the Customer's exclusive remedy and QFX sole liability for breach of the limited warranty contained herein.

This warranty covers only normal use. This warranty is not transferable. QFX is not responsible for warranty replacement should the QFX label or logo be removed or should the product fail to be properly maintained or fail to function properly as a result of misuse, abuse, immersion in liquids, improper installation, improper shipping, damage caused by disasters such as fire, flood, or service other than by QFX. In addition, this warranty excludes any Product (or, as applicable, any component thereof) that has been subject to or Defects resulting from: (a) any neglect or misuse by a Customer, an accident, improper application, violation of operating instructions for the Product, any other Customer-induced damage, or the alteration or removal of any Product serial number; (b) any modification or repair to Product (or, as applicable, any component thereof) by any party other than QFX or a party authorized in writing by QFX; (c) any damage to Product (or, as applicable, any component thereof) due to power surges, incorrect electrical voltage, misconnection to any device, or malfunction of any device used with the Product (or, as applicable, any component thereof); (d) cosmetic damage to the Product (or, as applicable, any component thereof) caused by normal wear and tear; (e) shipping damage that occurs while the Product is in transit; (f) damage caused by heat sources, sunlight, electromagnetic conditions, or other climatic conditions or (g) any acts of God.

Product is sold to Customer for personal, non-commercial use only. Product is not warranted for Customer's commercial or rental use. In addition, Product is not warranted against failure, and should not be used by Customer for any application where (i) there is a risk that any data stored on Product will be breached or otherwise compromised, or (ii) the date stored on Product is relied upon for medical or lifesaving applications. QFX disclaims any Warranty for any of the foregoing uses to the fullest extent permitted by law. Customer assumes any and all risks associated with such uses of Product, and agrees to indemnify QFX for any damages claimed against QFX for such uses.

EXCEPT FOR EXPRESS WARRANTIES STATED ABOVE AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, THE PRODUCTS ARE PROVIDED "AS IS" AND QFX DISCLAIMS ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTY (i) OF MERCHANTABILITY, (ii) OF FITNESS FOR A PARTICULAR PURPOSE, OR (iii) OF NON-INFRINGEMENT OF THIRD PARTY RIGHTS. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT WILL QFX BE LIABLE TO CUSTOMER OR ANY THIRD PARTY FOR ANY INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY OR PUNITIVE DAMAGES, INCLUDING, WITHOUT LIMITATION, ANY LOST PROFITS OR REVENUES, LOSS OR INACCURACY OF ANY DATA OR COST OF SUBSTITUTE GOODS, REGARDLESS OF THE THEORY OF LIABILITY (INCLUDING NEGLIGENCE) AND EVEN IF QFX HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, QFX AGGREGATE LIABILITY TO CUSTOMER FOR ACTUAL DIRECT DAMAGES FOR ANY CAUSE WHATSOEVER SHALL BE LIMITED TO THE CUMULATIVE PRODUCT FEES PAID BY THAT CUSTOMER FOR THE PRODUCTS CAUSING THE DAMAGES, IF ANY.

This Warranty gives Customer specific rights, and Customer may also have other rights that vary from jurisdiction to jurisdiction. Warning: Some Products may contain components that are small enough to be swallowed. Please keep out of reach of children. In order for the return to be processed, you must send the Product PREPAID to the address below in the original packaging or reasonable substitute to prevent damage and include: (1) a dated sales receipt (which must have a purchase date that falls in the Warranty Period specified in the table below) that indicates the place of purchase, model number of Product, and amount paid, (2) a detailed description of Customer's problem with Product, (3) Customer's full name, phone number, and return address, (3) all of the accessories that came with the Product package must be sent along with the main Product. (4) a cashier's check or money order payable to QFX, Inc., in the amount specified for the item in the product table below for return shipping and handling. If in the case you cannot provide a money order or cashier's check, you can contact The QFX Customer Support Representative to arrange payment via credit card. No returned Product will be shipped back to a PO BOX. If a returned Product is found to have no problem and/or does not include ALL of the requirements indicated above, it may be returned back to the customer and will not be processed.

**QFX USA®**, Inc.  
RMA Processing  
Customer Support Department  
2957 E. 46th Street | Vernon, CA 90058

✉ support@qfxusa.com  
☎ (800) 864-CLUB (2582) or (323) 457-9900  
🌐 qfxusa.com  
🕒 Hours of Operation: Monday - Friday, 9am - 5pm PST

All prices and details below are for US Destinations excluding, Hawaii, Alaska and Puerto Rico. For excluded destinations and NON US destinations, please contact The QFX Customer Support Department directly for additional shipping fees and return instructions.

If you do not find your Product below, your Product model conflicts with multiple categories, and/or are unsure of which category the Product you have purchased will fall under, please contact our Customer Support Department for further instruction.

In order to determine the exact shipping cost that must be included with your product or paid for the product being returned, please refer to the table below. Please find the product you wish to return by category or model number prefix. QFX will not provide any return or refund to any customer for merchandise and will only honor the Limited Warranty restrictions mentioned in this document.

Please make sure to follow all directions prior to shipping back your item. If you are not sure what the shipping cost for your item is, or if your item category conflicts in the table below, please feel free to contact the QFX Support Department for further assistance.

PRODUCT CATEGORY	HANDLING	LABOR	PARTS
Earphones, Headphones, Pocket Radios, & Small Bluetooth Speakers	\$5.00	1 Year	1 Year
Personal Stereos	\$10.00	1 Year	1 Year
Portable Radio/Cassette	\$15.00	1 Year	1 Year
Large Portable Radio Cassette	\$20.00	1 Year	1 Year
Mobile Audio	\$10.00	1 Year	1 Year
Pro Audio SBX Systems	\$75.00	1 Year	1 Year
Pro Audio PBX Systems	\$75.00	1 Year	1 Year
Televisions	\$25.00	1 Year	1 Year
Telephones	\$10.00	1 Year	1 Year
Stand Fans	\$20.00	1 Year	1 Year
Portable Rechargeable Fans	\$15.00	1 Year	1 Year

THE WARRANTY AND REMEDY PROVIDED ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER EXPRESSED OR IMPLIED WARRANTIES INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE. SOME LAWS DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES. IF THESE LAWS APPLY, THEN ALL EXPRESSED OR IMPLIED WARRANTIES ARE LIMITED TO THE WARRANTY PERIOD IDENTIFIED ABOVE. UNLESS STATED HEREIN, ANY STATEMENT OR REPRESENTATIONS MADE BY ANY OTHER PERSONS OR FIRM ARE VOID. EXCEPT AS PROVIDED IN THIS WRITTEN WARRANTY, QFX SHALL NOT BE LIABLE FOR ANY LOSS, INCONVENIENCE, OR DAMAGE, INCLUDING DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES, RESULTING FROM THE USE OR INABILITY TO USE THE QFX PRODUCT, WHETHER RESULTING FROM BREACH OF WARRANTY OR ANY OTHER LEGAL THEORY.

Some jurisdictions do not allow limitations on how long an implied warranty lasts, and some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations and exclusions may not apply to you. This warranty gives you special legal rights and you may have other rights which vary from jurisdiction to jurisdiction.

Copyright Protected 2026 ©



1-800-864-2582  
Mon-Fri 9AM - 5PM (PST)



support@qfxusa.com  
Mon-Fri 9AM - 5PM (PST)



[www.qfxusa.com](http://www.qfxusa.com)

# THANK YOU.

**QFX** Where the Party Begins!

We would love to hear about your BT-2026 Journey!  
Tag us **@QFXUSA** to share your stories.

FOLLOW US @QFXUSA

